



Car



Semi Truck




Truck



Rack & Pinion



Transmission

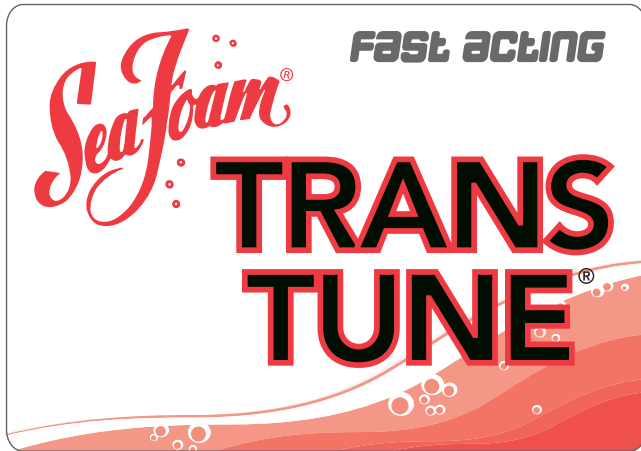

ALSO FOR HYDRAULIC & POWER STEERING SYSTEMS

- AUTOMATIC TRANSMISSION, HYDRAULIC AND POWER STEERING TUNE-UP AND CONDITIONER
- CLEANS GUM AND VARNISH
- REMOVES MOISTURE
- AUTO-TRANSMISSION, POWER STEERING AND RACK AND PINION FLUSH
- SMOOTHS ROUGH AND ERRATIC SHIFTING IN AUTOMATIC TRANSMISSIONS
- CLEANS AND DRIES HYDRAULICS

GUARANTEED SEA FOAM IS SOLD ON THE BASIS OF...
YOUR MONEY'S WORTH OR YOUR MONEY BACK



DANGER! FLAMMABLE. VAPOR HARMFUL.
HARMFUL OR FATAL IF SWALLOWED.

PART NO. TT16

Another fine product from Sea Foam Sales Company.

Look for other SEA FOAM® products.

THE ONE THE PROS USE.



Car



Truck



Air Tools



Lawn Mower



Chainsaw



Outboard



ATV



Snowmobile



Inboard



Motorcycle



INSTANT ACTION AUTOMATIC TRANSMISSION POWER STEERING & HYDRAULIC TUNE UP FORMULA



A 100% pure petroleum product. **TRANS TUNE®** is a conditioner that is **NOT** a stop leak, does **NOT** swell or soften seals or O rings and is compatible with all automatic transmission, power steering and hydraulic systems.

FOR USE IN AUTOMATIC TRANSMISSIONS

With transmission at operating temperature, check the fluid level. Add 1/2 to 1 pint **TRANS TUNE®** to the transmission fluid. This normally will not overfill the fluid level, however, the fluid level should never exceed the manufacturer's recommended level. For transmission servicing use 1/2 to 1 pint **TRANS TUNE®** in the transmission fluid prior to a transmission flush or fluid and filter change. Drive at least five miles, shifting into all gears. If you are not able to drive the vehicle, shift into each gear for about 3 minutes with the brake or parking brake applied. This will allow **TRANS TUNE®** to clean transmission valves and parts in each area. When additional cleaning is necessary add 1/2 pint of **TRANS TUNE®** to the transmission fluid and change the transmission fluid on a regular service basis. **A properly maintained and clean transmission will result in smoother operation and longer life!**

FOR USE IN POWER STEERING


If rack and pinion or power steering pump replacement is necessary, be sure system is flushed **BEFORE** installing new rack or flush for preventive maintenance. To flush the power steering unit, drain power steering pump reservoir and fill the reservoir with 1/2 pint of **TRANS TUNE®**. Run engine to pump fluid through system for 15 to 30 minutes, turning the steering wheel from lock to lock every 5 minutes. This will dissolve varnish and suspend contaminants into the fluid. Stop engine and drain fluid from reservoir placing the return line in drain pan. Cap reservoir. Disable ignition. Turn engine over with starter and run 1 1/2 pints of **TRANS TUNE®** through power steering reservoir to flush system of all contamination. Then flush system with power steering fluid. After flush is complete refill reservoir with new power steering fluid.

FOR USE IN HYDRAULICS (NOT FOR BRAKE SYSTEMS)

Add 1 pint of **TRANS TUNE®** to every four gallons of hydraulic fluid to dry moisture and clean varnish from valves. For best results use prior to changing hydraulic fluid. When additional cleaning is necessary add 1 pint of **TRANS TUNE®** to every 8 gallons hydraulic fluid and change hydraulic fluid on a regular service basis.

Contains Pet. Distillate (CAS 64742-49-0); Pet. Oil (CAS 64742-54-7); 2-Propanol CAS (67-63-0).

GUARANTEED SEA FOAM IS SOLD ON THE BASIS OF...
YOUR MONEY'S WORTH OR YOUR MONEY BACK

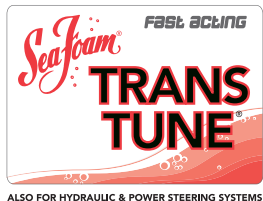

Manufactured for Sea Foam Sales Co.
SEA FOAM® is a registered trademark
of **SEA FOAM SALES CO.**
12987 Pioneer Trail, Eden Prairie, MN 55347
www.seafoamsales.com

SINCE 1942

PART NO. TT16