

contigo®



AUTOSEAL® Kids' Bottle Care and Use Instructions

⚠ CAUTION


- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use product if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.

USAGE RECOMMENDATIONS

PRESS BUTTON
to sip



TIP
to drink

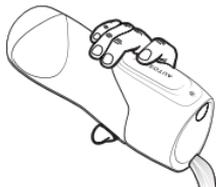

RELEASE BUTTON
to Automatically Seal




CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- **RINSE LID IMMEDIATELY AFTER EACH USE** with warm water, pressing the AUTOSEAL® button so water flows through Drink Spout and Vent Hole.



- Then wash lid in top rack of dishwasher, or soak lid for 10 minutes in hot, soapy tap water. Rinse thoroughly.
- Bodies are "Top Rack Dishwasher Safe" and can also be hand washed with warm water and mild detergent and then rinsed thoroughly.

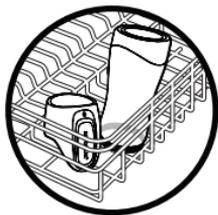

OR



- ALWAYS STORE MUG WITH LID REMOVED to allow parts to dry completely.

ADDITIONAL CLEANING TIPS

For additional product cleaning tips visit GoContigo.com.



For complete warranty information, see GoContigo.com

www.GoContigo.com

©2014 Ignite USA. All Rights Reserved.

Should you have any questions about your purchase, please contact us at 1-888-262-0622 or GoContigo.com.

030600-68