

contigo®

AUTOSEAL®
TECHNOLOGY

 
AUTOSEAL® Gizmo Sip Kids' Bottle Care and Use Instructions

CAUTION

- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use product if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.

USAGE RECOMMENDATIONS:

PRESS BUTTON
to sip

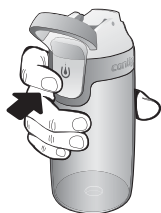

TIP
to drink



 
RELEASE BUTTON
to Automatically Seal




CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- Flip open the lid interior before rinsing or washing.


To Open

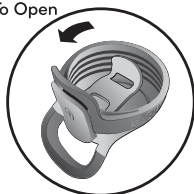


To Close

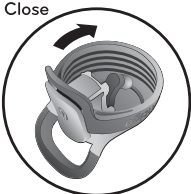 

- RINSE LID IMMEDIATELY AFTER EACH USE with warm water, pressing the AUTOSEAL button so water flows through the drink spout and vent hole.
- Lid and plastic body are top-rack dishwasher safe.
- If washing by hand, soak lid for 10 minutes in hot, soapy tap water. Hand wash body with warm water and a mild detergent. Rinse both lid and body thoroughly before use.
- For best cleaning results, use a Contigo® bottle brush, www.GoContigo.com.

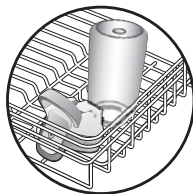 

OR

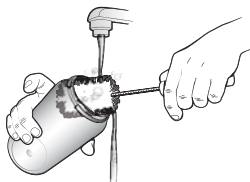 

- ALWAYS STORE BOTTLE WITH LID REMOVED to allow parts to dry completely.

ADDITIONAL CLEANING TIPS

For additional product cleaning tips visit GoContigo.com.



For complete warranty information, see GoContigo.com.

©2014 Ignite USA. All Rights Reserved.

Should you have any questions about your purchase, please contact us at 1-888-262-0622 or GoContigo.com.

035541-07