

Oster®



MODEL

BLSTPBRG

INSTRUCTION MANUAL

OSTER ICE CRUSHING BEEHIVE PERFORMANCE BLENDER

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.

1. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
2. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
3. Never leave appliance unattended when in use.
4. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting moving parts.
6. Flashing light indicates ready to operate (models with stand-by mode). Avoid any contact with blades or moveable parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. For appliances with markings on plug blade: This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.
9. The use of attachments, including canning jars, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
10. Do not use outdoors or for commercial purposes.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
12. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
13. Blades are sharp. Handle carefully, especially when removing the blades from the container, emptying the container and during cleaning.
14. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
15. Always hold container while operating the appliance. If the container should turn when the motor is turned ON, switch appliance OFF immediately and tighten the container in the threaded bottom.

16. Always operate blender with cover in place. Always wait until all moving parts have stopped before removing any lid or cover.
17. When blending hot liquids, remove center piece of two-piece cover (if a two-piece cover is provided). Beware of steam. Do not blend boiling liquids.
18. Do not use appliance for other than intended use. Misuse can cause injuries. Always use appliance on a dry, stable, level surface. Never fill beyond the MAX fill line.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS:

- Shops, offices and other working environments
- Ranches and farmhouses
- Guests at hotels, motels, bed and breakfasts, and other residential environments

 
North American models with grounded plugs:



GROUNDING PLUG

To reduce the risk of electric shock, this appliance has a grounding type cord and plug that has a third grounding pin (3-prong plug). The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances. If the plug does not fit into the outlet or if in doubt as to whether the outlet is properly grounded, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way.

APPLIANCE DESCRIPTION

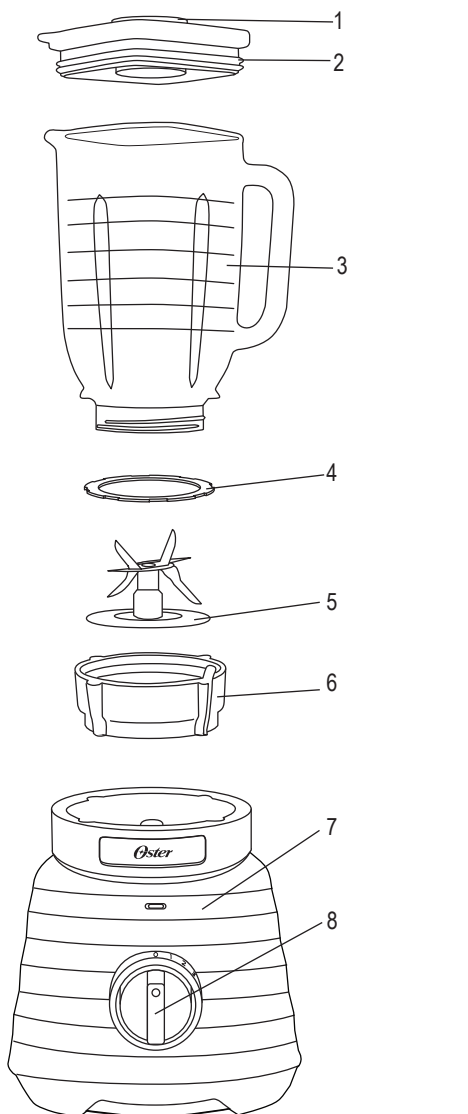

- 1. Filler cap
- 2. Jar lid
- 3. 7-Cup Glass Jar
- 4. Locking sealing ring

- 5. Revolutionary ice-crushing blade
- 6. Threaded jar bottom
- 7. Motor base
- 8. Rotary dial with 3 speeds

GETTING TO KNOW YOUR OSTER® BLENDER

Introducing the Oster Ice Crushing Beehive Performance Blender! Inspired by the classic Oster® blender, this design features more durable and powerful features.



YOUR BLENDER INCLUDES THE FOLLOWING TECHNOLOGY AND FEATURES:

- **High-quality chrome diecast base**
- **Glass jar** with 7-cup capacity - resistant to boiling ingredients*
no need to wait for hot ingredients to cool down to use your blender
- **2x larger revolutionary ice-crushing blade****
- **All-Metal Drive®** 10x stronger***
- **LED light** when turned on
- **10x more durable motor******

Before you use the product for the first time, separate the lid, jar lid feeder cap, and blade from the jar. Wash in warm, soapy water, or wash in the top rack of the dishwasher. Rinse and dry well.

*Up to a thermal shock of 160° F

**Compared to Oster® blade BLSTAA4961

***Ultimate tensile strength of 1215 C.R.S. when compared to PP plastic

****Compared to motor model PU5443127-6115-AL in hi load tests

ASSEMBLING THE JAR

1. Turn jar upside down so the small opening is at the top. (Figure 1)
2. Place Blade into Threaded Jar Bottom (Figure 2).
3. Place sealing ring over blade assembly. Carefully press and tuck sealing ring into locking groove (Figure 3).
4. Ensure the locking sealing ring is fully and evenly tucked in place and holding the blade assembly to the threaded jar bottom. For correct assembly see (Figure 4).
5. Place blade into jar. (Figure 5)
6. Place threaded jar bottom over blade and turn clockwise to tighten. (Figure 6)
7. Place jar assembly onto base. (Figure 7)
8. Place ingredients into jar.
9. Place lid with filler cap on jar.
10. Plug the power cord into a standard household outlet of the same voltage as the one indicated in the rating plate of your blender. You are now ready to begin using your blender!

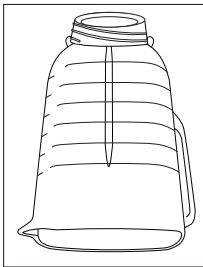 


Figure 1

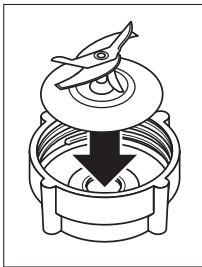 


Figure 2

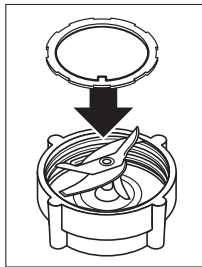 


Figure 3

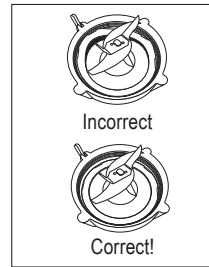 


Figure 4

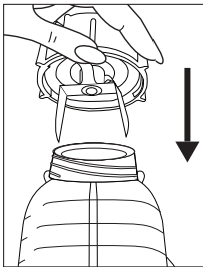 


Figure 5

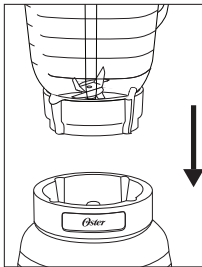 


Figure 6


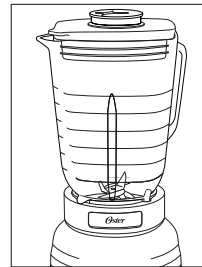 


Figure 7

MANUAL CONTROLS

 1. Turn dial to desired speed and blend ingredients to desired consistency.
2. Turn dial to the off "O" position to stop the blender and turn blender off.
3. To use the PULSE function:
 - To use PULSE if dial is on the off to the left of the dial position, turn dial to speed 1 for a brief desired length of time and turn it right back to the off "O" position.
 - To use PULSE if dial is on the off position on the right of the dial turn dial to speed 3 for a brief desired length of time and turn it left back to the off "O" position.
4. Repeat cycle as desired.

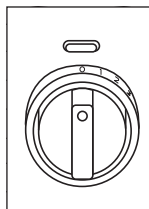


BLENDING TIPS

- Put liquids in the jar first, unless a recipe says otherwise.
- Crushing Ice: Crush 6 ice cubes or approximately 2 cups of ice at a time.
- Do not remove the lid while in use. Remove filler cap to add smaller ingredients.
- Hot Foods: Open the filler cap to vent steam. Tilt filler cap away from you. Keep hands away from the cover opening to prevent possible burns. When working with hot liquids, remove filler cap and start blending at a low speed then move to a faster speed. Do not add liquid over the 4 cup (1 Liter) level.
- PULSE function should be used to help dislodge and mix foods. No cutting or chopping occurs while using this function.

CARING FOR AND MAINTAINING YOUR OSTER® BLENDER

AFTER USE:

 1. Lift the jar straight up from the base, remove the lid and empty the jar.
2. If necessary, use a rubber spatula to scrape foods away from the sides of the jar.

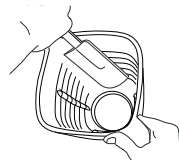

IMPORTANT: UNPLUG BEFORE CLEANING.

CLEANING AND USER MAINTENANCE

The blade is sharp! Gently remove it.

Release the blade from the bottom of the jar by turning the threaded jar bottom counterclockwise to the left.

The jar lid, jar lid filler cap and blade are dishwasher safe. Wash them on the top rack of the dishwasher. Place sealing ring into bottom basket of dishwasher. You can also wash the parts in warm, soapy water. Rinse well and dry. Wipe the base with a soft, damp cloth to clean. Never submerge the motor base in any liquid. Check the parts as you put them back together.

IMPORTANT: DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUIDS.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See warranty available online.

EASY CLEAN

Pour 3 cups of warm water in the blender jar. Add 1 – 2 drops of liquid dishwashing detergent. Blend detergent for 10 –15 seconds. Empty jar of soapy water into sink. Rinse jar thoroughly with clean water.

NOTE: Easy Clean is not a substitute for regular cleaning described above. It is especially important to disassemble and thoroughly clean your blender when processing food.

STORING

Reassemble the blender for storage. Leave the lid open a gap so no odors are retained.

WARNING: Never put the jar, or any other parts, in a microwave oven. Never store foods or drinks in the jar.

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. (collectively "Sunbeam") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value.

This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental

or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800-334-0759 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. located in Boca Raton, Florida 33431. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.



© 2021 Sunbeam Products, Inc. All rights reserved.
Three years limited warranty – please see insert for details.

www.oster.com

Printed in Mexico

P.N. 2165748 Rev. A / NWL0001314213
GCDS-OST1698717-JC