

WARRANTY INFORMATION

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. ("Sunbeam") or if in Canada, Newell Industries Canada ULC ("NIC") warrants that for a period of one year from the date of initial retail purchase, this product will be free from defects in material and workmanship, when used in accordance with the instructions provided. Sunbeam (or NIC), at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam (or NIC) dealers, service centers, or retail stores selling Sunbeam (or NIC) products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam (or NIC) or an authorized Sunbeam (or NIC) service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's (or NIC)'s Liability?

Sunbeam (or NIC) shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam (or NIC) disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. Sunbeam (or NIC) shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please visit our website at www.holmesproducts.com or direct your correspondences to ATTN: Holmes, Sunbeam Products, Inc., PO Box 3900, Peoria IL 61614. Please do not return product to this address. The PO Box listed can only receive letters or envelopes.

WARRANTY INFORMATION

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please visit our website at www.holmesproducts.com or direct your correspondences to ATTN: Holmes, Sunbeam Products, Inc., PO Box 3900, Peoria IL 61614. Please do not return product to this address. The PO Box listed can only receive letters or envelopes.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. located in Sunbeam Products, Inc., PO Box 3900, Peoria IL 61614. In Canada, this warranty is offered by Newell Industries Canada ULC ("NIC"), located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

FCC Notice:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

© 2018 Sunbeam Products, Inc. All rights reserved. Distributed by Sunbeam Products, Inc. Boca Raton, Florida 33431.

190474 Rev. D
GCDS-HOL422939-SL

HPF0467_18EM2

Printed In China

Holmes

Owner's Guide

HPF0467



BC

4 Inch

Rechargeable Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:


1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To reduce the risk of electrical shock do not immerse unit, plug or cord in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from USB outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning. To disconnect, grip plug and pull from USB outlet.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid risk of fire, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause injuries.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces, including the stove.
13. Do not use outdoors or for commercial use.

14. Always use on a dry, level surface.
15. **WARNING:** To reduce the risk of electrical shock and injury to persons, do not use in window.
16. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
17. Use only with a 5 volt USB port, adapter or power supply.
18. Use battery operated fan only with specifically designated battery type 18650, 3.7V, 2200mAh. Use of any other batteries may create a risk of fire.
19. When battery pack is not in use, keep it away from other metal objects such as paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.
20. Do not incinerate this fan even if it is severely damaged. The batteries can explode in a fire. Never incinerate or dispose batteries into a fire. See the section to replace your battery for battery disposal instructions.

SAVE THESE INSTRUCTIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3(B)

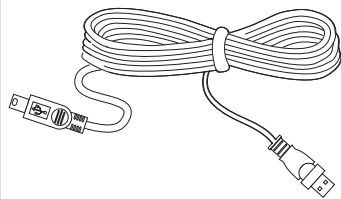

USE ONLY WITH LISTED/CERTIFIED USB POWER SOURCES AND CABLES.

For spare parts please visit our website at www.Holmesproducts.Com.

FEATURES - OPERATIONS

USING YOUR FAN:

Your fan comes with a rechargeable battery that can last up to six hours on one charge.

Your fan also comes with (1) 3.9ft Micro USB Power cord (for power and charging only). The USB cord can be used as a power source to run the fan and/or to recharge the fan.

OPERATING INSTRUCTIONS

Press the power/speed button to turn the fan on or off. The power/speed button can also be used to toggle through the three speed settings. Remove plastic battery pull-tab before operating.

TILT ADJUSTMENT INSTRUCTIONS

To adjust the angle of the fan head simply move the fan head to the desired angle.

The base of the fan can also be folded into the rear housing for easy portability or storage.


HOW TO REPLACE YOUR BATTERY:

- a) Unplug unit from the charger and make sure the fan is off.
- b) Unscrew the battery door locking screw.
- c) Push the battery door tab to the right and pull up on the tab.
- d) Remove the battery.
- e) Insert the new battery making sure the polarity is correct, aligning the markings for "+" and "-" to similar markings in the unit.
- f) Insert the battery door and tighten the battery door locking screw.

THIS UNIT CONTAINS LI-ION BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED PROPERLY. CHECK LOCAL AUTHORITY REGULATIONS. NEVER INCINERATE OR DISPOSE BATTERIES INTO A FIRE.



Figure 1

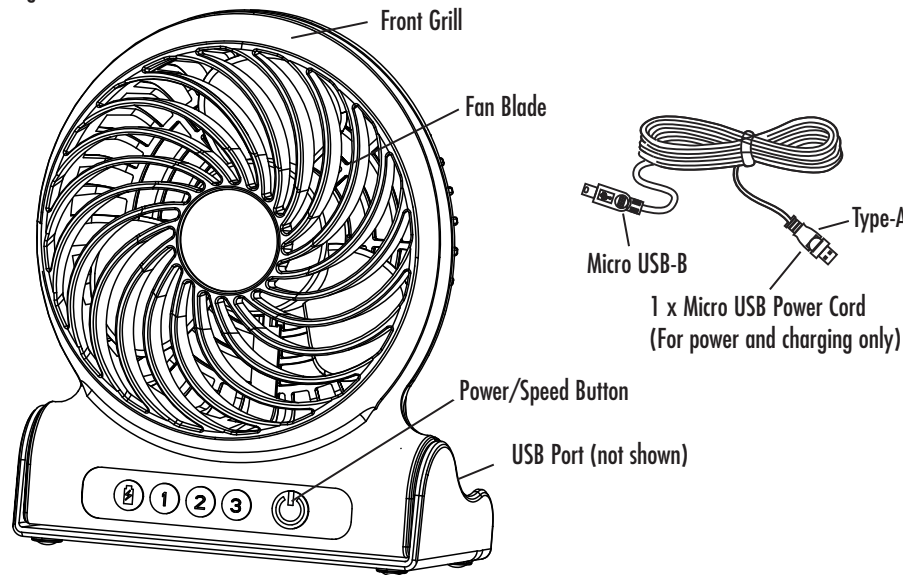

CLEANING / MAINTENANCE INSTRUCTIONS

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your personal fan. Please remember:

FAN CLEANING

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or enter into fan housing.
- Be sure to use a soft cloth moistened with a mild soap solution.
- Do not use any of the following as a cleaner: gasoline, thinner, or benzene.

FAN STORAGE

When storing your fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan head from dust. We strongly recommend using the original box from purchase. Remove the battery while the fan is in storage.

If you have any questions regarding your product or would like to learn more about other Holmes® products, please visit our website at www.holmesproducts.com or call consumer service: 1-800-546-5637. For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

TROUBLESHOOTING

Problem	Cause	Solution
Charging indicator is flashing during charging.	1. The plastic battery tab has not been removed. 2. The battery is not installed properly.	1. Remove plastic battery tab and discard. 2. Insert the battery making sure the polarity is correct, aligning the markings for "+" and "-" to similar markings in the unit.

Figure 2

