

FEATURES - OPERATIONS CLEANING AND MAINTENANCE

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CLEANING/MAINTENANCE INSTRUCTIONS

 
If your (5 Amp, 125 Volt) replaceable fuse blows, please order a new fuse at 1-800-253-2764. Follow the below instructions to replace the fuse on the plug.

REPLACEABLE FUSE

Follow these instructions to correctly and safely care for your fan. Please remember:

User Servicing Instructions

1. Unplug your fan. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover down towards the prongs.
NOTE: Ensure that fuse cover is completely open before attempting to remove fuse.
3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse. (see Figure 4)
4. Place plug on a solid, flat surface. Insert new 5 Amp, 125 Volt fuse into fuse compartment and use a small

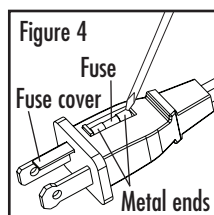

screwdriver to secure the metal ends of the fuse into the compartment.

CAUTION: Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.

5. Slide fuse cover closed completely. If fuse cover is difficult to close, make sure fuse is secured in place completely by pressing down on metal ends of the fuse.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

FAN CLEANING

- Always unplug the fan before cleaning.
- Clean the fan with a soft cloth moistened with a mild soap solution.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene.
- We also recommend the periodic cleaning of this fan by lightly running a vacuum cleaner nozzle over the fan grill to remove any dust or dirt that may have accumulated inside or on the unit.

Fan Housing and Base Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base and housing. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE

When storing your fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan head from dust.

If you have any questions regarding your product or would like to learn more about other Bionaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at www.bionaire.com.

© 2011 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved.

Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

153949

BTF4310A11EM1

Printed In China

GCDS-BIO22490-SZ

WARRANTY INFORMATION

5 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of five years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**



pure indoor living



Remote Control TOWER FAN

MODEL: BTF4310AR



Instruction Leaflet

Read instructions before operating. Retain for future reference.

Questions? Comments? Call 1-800-253-2764 in North America or visit our website at www.bionaire.com.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.

15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of electrical shock and injury to persons, do not use in window.
19. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
20. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS (SEE FIGURE 2)

Assembly Time: 5-10 minutes.


Tools Required: Phillips head screw driver.

NOTE: MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN.

1. Lay down the fan housing with the front grill facing down the floor. Assemble base halves around power


FEATURES - OPERATIONS

 Figure 1

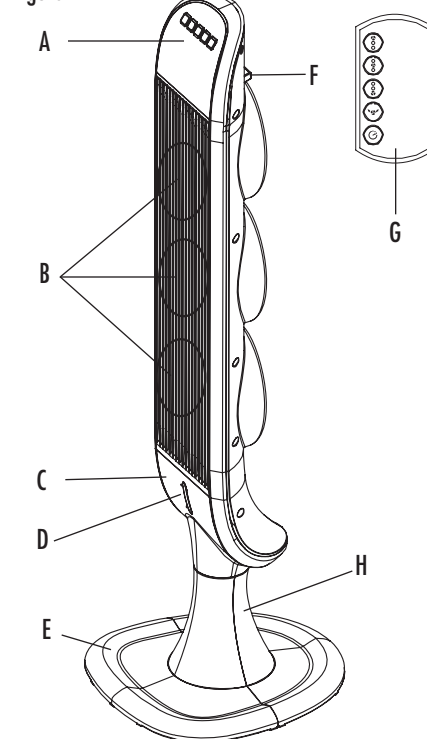

- | | |
|----------------------------|---------------------------|
| A. Control Panel | F. Remote Control Storage |
| B. Front grill outlets (3) | G. Remote Control |
| C. Fan Housing | H. Pole Support |
| D. Fan LED | |
| E. Base Halves (2) | |

 Figure 2

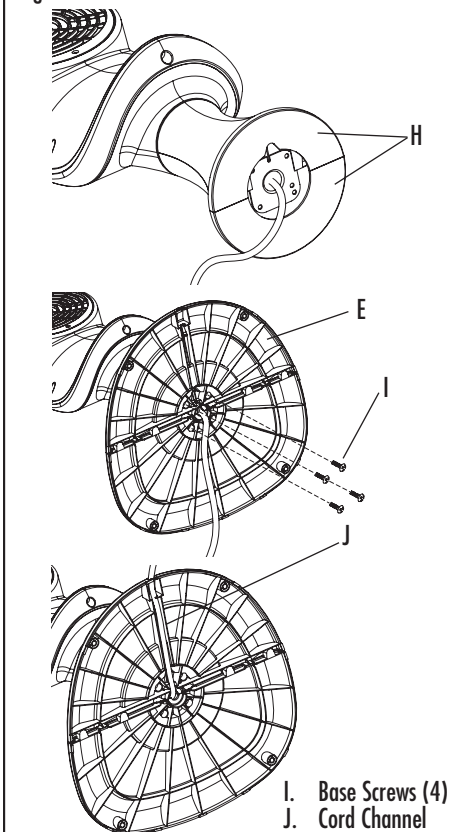

- | |
|--------------------|
| I. Base Screws (4) |
| J. Cord Channel |

- cord. To secure the base halves together, slide the posts of one base half into the slots of the second base half.
2. Line up the screws holes of the base halves with the holes located on the bottom of the pole support as shown in Figure 2. Secure with the four screws included with the product.
3. Run the Power Cord through the cord channel located underneath the base. Refer to Figure 2.
4. Turn fan right side up and place on a dry and level surface.

OPERATING INSTRUCTIONS

1. Plug cord into any standard 120 volt AC outlet.
2. To operate the fan, press the buttons located on the control panel or remote control. See Figure 3.
3. This fan has 3 air outlets (upper/middle/lower) allowing users to select the desired speed settings for each outlet. Each outlet can be operated independently by pressing each of the 3 speed control buttons.
4. Press each of the 3 speed control buttons (either on control panel or remote control) to cycle through Low (1), Medium (2) and High (3) speed settings. The

FEATURES - OPERATIONS

- 4th press of the button will shut off the fan for the individual fan. The corresponding LED light will illuminate on the control panel to indicate which setting of each outlet is selected (see Figure 3).
5. There is a Fan LED below the front grill outlets to indicate the fan is in operation (see Figure 1). The Fan LED will illuminate when any speed setting (1-2-3) is selected. This fan LED and the power light on control panel will remain illuminated until all 3 fan outlets are shut off.
6. To turn the oscillation on and off, press the oscillation button located on the control panel or remote control.
7. To set your fan to automatically shut off, press the timer button located on the control panel or the remote control. When set, the fan will run and automatically shut off after the set duration of time (1, 2, 4, or 8 hours) has expired. The corresponding LED light will illuminate on the control panel to indicate which timer setting is activated.

REMOTE CONTROL HANDSET: (SEE FIGURE 3)

This unit requires one lithium battery, CR2025/3V (included). Remove battery before discarding the remote.

Battery Replacement

- a) Locate the battery compartment on the back of the remote control handset. Slide the tab with your thumb and take out the battery cover.
- b) Insert new battery for the first use or remove old battery for replacement.
- c) Place new battery into battery compartment.

- d) Slide battery compartment into the remote control handset.

- NOTES:**
- Remove the battery from the equipment when it is not being used for an extended period of time.
 - Remove the used battery promptly.
 - Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area.

FCC STATEMENT


Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is

 
Figure 3 Control Panel

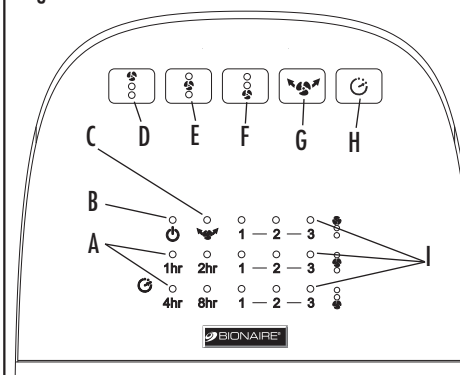

Remote Control

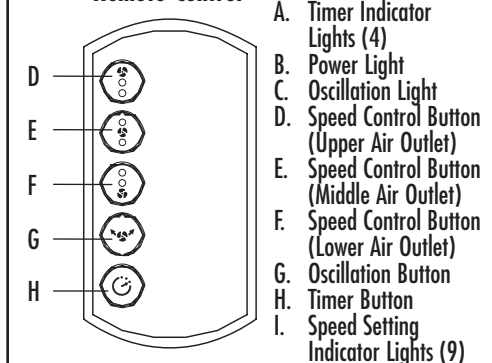 

- | |
|---|
| A. Timer Indicator Lights (4) |
| B. Power Light |
| C. Oscillation Light |
| D. Speed Control Button (Upper Air Outlet) |
| E. Speed Control Button (Middle Air Outlet) |
| F. Speed Control Button (Lower Air Outlet) |
| G. Oscillation Button |
| H. Timer Button |
| I. Speed Setting Indicator Lights (9) |

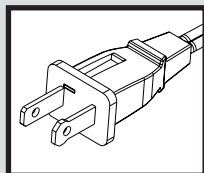 

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.