

First Alert[®]

MANUAL # M08-0566-157040

www.FirstAlert.com

First Alert[®]

4003DFB / 4005DFB / 4007DFB / 4009DFB



Digital Safe

⚠ Please do not keep emergency keys in your safe!

MANUAL # M08-0566-157040

INDEX

Proper Use of Your Safe2

Safe Parts3-4

Opening Your Safe for the First Time5

Setting The User Code6

Safe Care & Maintenance / Consumer Affairs7

Safe Identification Record8

 
Ordering Replacement Entry Keys9

Limited Warranty 10

Congratulations!

Your new First Alert® Digital Safe will provide years of secure storage for valuables and important documents. This safe has been built with the highest manufacturing standards to ensure maximum user satisfaction. With proper care, your First Alert® safe will provide peace of mind for many years to come.

PACKAGE CONTENTS

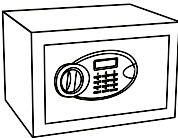


1 First Alert® Intelligent Safe




1 Operation & Installation Guide



 2 Emergency Keys



4 AA Batteries

 

2 Mounting Bolts

PROPER USE OF YOUR SAFE



Moisture Warning
We recommend that you place delicate items such as pictures or intricate jewelry into an air-tight container before storing them in your safe. Avoid placing your safe in areas of high humidity. For optimum performance, the safe should be opened and aired out for at least 20 minutes every two (2) weeks.



 
Firearms Warning
This safe is not designed to store medication, items with combustible content, guns or other weapons.

To clean your safe, wash off with a damp cloth and dry. Never use paint thinners or chemical solvents, as they can permanently damage the finish.


FOR YOUR PROTECTION

- ✓ Always store keys away from safe, NEVER INSIDE.
- ✓ Record all safe identification numbers on Safe Identification Record on page 8.
- ✓ Save this manual and NEVER keep it inside the safe. DO NOT DISCARD!


SAFE PARTS

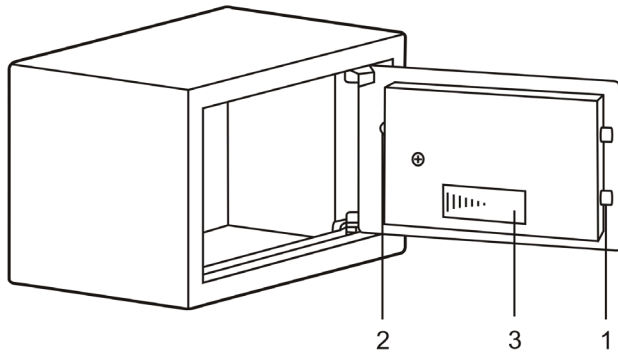

 
- ❶ Bolts
- ❷ Reset Button
- ❸ Battery Compartment

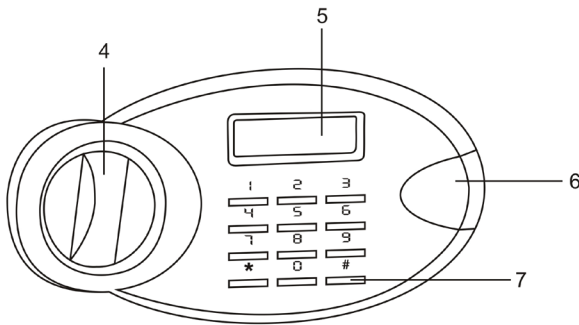

 
- ❹ Knob
- ❺ LED Indicator Image
- ❻ Emergency Lock Cover
- ❼ Confirming Button

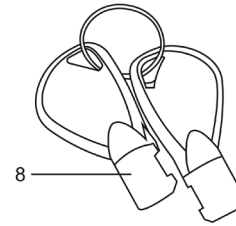

- ❽ Emergency Keys

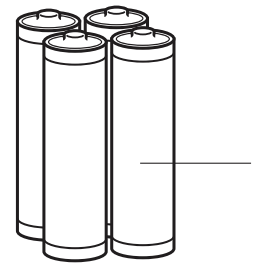 

- ❾ Power supply: 4 X AA batteries

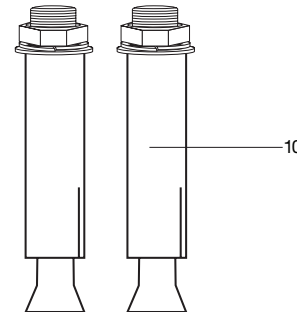 

- ❿ Mounting Bolts

⚠ CAUTION

All drawings in this manual have been prepared based on the EA. The exterior design or component positions of other models may be different from what is indicated in the drawings, while the operation is the same.

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key. See "Opening the Safe with the Emergency Key" for details.

- 1 Remove emergency lock cover, then insert the emergency key, and turn it counter clockwise.
- 2 Turn the knob clockwise to open the door.

⚠ CAUTION

Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

- 1 Open the door.
- 2 Insert 4 X AA batteries into the battery compartment.
- 3 Under normal condition, if both red and the green lights are on at the same time, it means the voltage is low and you should insert new batteries.

⚠ CAUTION

Replace 4 fresh batteries by lining them up in a manner as indicated by the "+ " and " - " signs. When out for longer than thirty minutes, you should reset the user's code.

OPENING DOOR

- 1 Input your user's code (3 to 8 digits), each press results in one buzzer beep and yellow light flashes.
- 2 Press "*" or "#" button, the green light will be on.
- 3 Rotate the knob clockwise and pull outwards within 5 seconds, the door is opened.

NOTE: An interior LED turns on for 30 seconds after the door is opened.

⚠ CAUTION

The user preset code "159". Please input the user code again if the yellow light flashes with three buzzer beeps.

CLOSING DOOR

- 1 Turn the knob counter clockwise to close the door.

AUTOMATIC LOCK

- 1 3 continuously wrong entries will activate the warning beep for 20 seconds.
- 2 6 continuously wrong entries will activate the warning beep for 5 minutes.

⚠ CAUTION

The key pad would be disabled during the beeping. You can only stop the beeps by opening the safe with emergency key and power off by removing the battery.

SETTING THE USER CODE

- 1 With the door open, press the reset button once, start setting code when the yellow lights goes on.
- 2 Input new code (3-8 digits), and press "*" or "#" button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
- 3 If the yellow light flashes with 3 buzzer beeps, the code changing is not effective, and you need to try again.

SETTING MASTER CODE

- 1 Open the safe, input "0" twice and press reset button, start setting code when the yellow light goes on.
- 2 Input the new master code (3-8 digits), then press "*" or "#" button to confirm, it will be confirmed by 2 beeps and the yellow light flashes two times, then setting is done successfully.
- 3 If the yellow light flashes three times, it means the new code is invalid and should be reset again.

OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown, you can use the emergency key to open the safe.

- 1 Remove the cover of the emergency lock.
- 2 Insert the emergency key, turn it counter clockwise, then turn the knob clockwise to open the door.

MOUNTING METHOD

Fix the safe in the place which is not easy to move.

- 1 Drill holes for expansion bolts (or clamping screws) in the right place.
- 2 Turn the expansion bolts counter clockwise to separate.
- 3 Use the expansion bolts (or clamping screws) to secure the case to the wall.
- 4 Make sure the case is mounted in place as required and then tighten all screws.

⚠ CAUTION

Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

LOW BATTERY INDICATOR

Every time the keypad is activated, the system automatically checks the power level remaining in the batteries. If the power falls below a certain level, the keypad will beep and flash yellow when a key is pressed.

SAFE CARE AND MAINTENANCE

When properly maintained, your safe will continue to operate accurately for many years. In order to ensure optimum performance of your safe, please follow these simple precautions:

Battery Maintenance

- ① Always purchase and use the batteries as specified by this User's manual.
- ② Always replace **all** batteries at the same time. It is recommended to replace all batteries at least once a year or sooner depending on amount of use.
- ③ Always clean the battery contacts in the battery compartment and on the batteries before installing new batteries.
- ④ Always make sure all batteries match the polarity (+ and -) signs in the open battery compartment.
- ⑤ If your safe will not be used for an extended period of time, it is recommended that you remove the batteries.
- ⑥ Always promptly remove and properly discard of all used batteries.

DO NOT MIX OLD AND NEW BATTERIES**DO NOT MIX ALKALINE, STANDARD, OR RECHARGEABLE BATTERIES**

Clean Hands - Never attempt to operate the digital keypad if your hands have excessive dirt, debris or liquids on them.

Clean Safe - To clean the surface of your safe, it is recommended that you use a mild cleaner (e.g., window cleaner) to avoid scratching or discoloring the surface. Always wipe dry and NEVER use abrasive cleansers on the safe or digital keypad.

CONSUMER AFFAIRS**YOUR SAFE'S UNIQUE IDENTIFICATION NUMBERS**

When contacting Consumer Affairs, you should be prepared to supply some important information that specifically identifies your safe. This information is extremely important to assuring prompt and accurate assistance.

It is strongly recommended that you identify and record the following information in the Safe Identification Record form located on page 8

MODEL NUMBER**KEY NUMBER****MODEL NUMBER**

The First Alert® Safes product line consists of many different models, each identified by a specific Model number. Every model is manufactured with unique capabilities and features that may require specific solutions to a variety of difficulties that occasionally occur.

KEY NUMBER

The Key Number is necessary to identify the specific configuration of the key and lock cylinder components of your safe. If a key becomes damaged or misplaced, the Key Number is required in order for you to receive a replacement key.

LOCATING KEY NUMBER

The Key Number is engraved on the keys and around the lock cylinder.

HOW TO OBTAIN WARRANTY SERVICE

If service is required, do not return the product to your retailer. In order to obtain warranty service, contact Consumer Affairs at 1-800-323-9005. To assist us in serving you, please have the model number and date of purchase available when calling.

⚠ IMPORTANT: DO NOT RETURN SAFE TO STORE

If you have any questions pertaining to proper use,
DO NOT RETURN safe to the store.
 Please contact Consumer Affairs at 1-800-323-9005.

SAFE IDENTIFICATION RECORD

Model Number _____

Key Number _____

Digital Passcode Record _____



**PLEASE CALL US AT 1-800-323-9005 TO
ESTABLISH A WARRANTY RETURN SET-UP**

**Please return item(s) with Customer Reference number
marked on the outside of the box
to the address listed below:**

**First Alert, Inc.
ATTN: Warranty Safe Returns
1301 Joe Battle
El Paso, TX 79936**

ORDERING REPLACEMENT ENTRY KEYS

If you lose the safe keys or would like additional keys, you can purchase them from First Alert, Inc. You must supply the following information to assure accurate processing:

- ❶ Name / Address / Telephone Number
- ❷ Safe Model Number / Serial Number
- ❸ Key Number (located on the key and on the Key lock)
- ❹ Notarized statement of ownership (a notary letter form can be printed off at www.firstalert.com)
- ❺ Indicate number of keys requested
- ❻ Method for how you would like to receive keys

Please send all the information via fax at 630-851-7995 or mail First Alert, Inc., 3901 Liberty Street, Aurora, IL 60504-8122.

Checks or money orders are required for orders received by mail and should be made payable to First Alert. Contact Consumer Affairs for costing information prior to ordering.

**First Alert, Inc.
ATTN: Consumer Affairs
3901 Liberty Street
Aurora, IL 60504-8122**

LIMITED WARRANTY

LIMITED WARRANTY

BRK Brands, Inc., ("BRK") warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. BRK, at its sole option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty performance. BRK dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BRK or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, including natural disasters.

BRK shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. BRK is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above Warranty Period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

If you have any questions that cannot be answered by reading this manual, please call Consumer Affairs at 1-800-323-9005.

© 2017 BRK Brands, Inc. All rights reserved. Distributed by BRK Brands, Inc. BRK Brands, Inc. is a subsidiary of Newell Brands (NYSE: NWL).

First Alert® is registered trademark of The First Alert Trust.
3901 Liberty Street, Aurora, IL 60504-8122

For more information and updates, please visit www.firstalert.com