


UR3636B
UR4830B

1

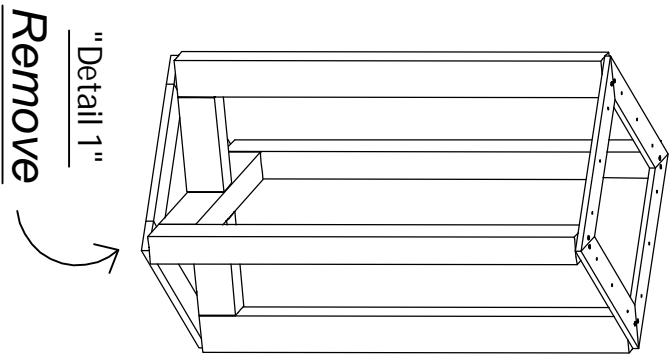


"Detail 1"
Remove


UR3636 - UR4830
SETUP INSTRUCTIONS

UR3636T
UR4830T


2

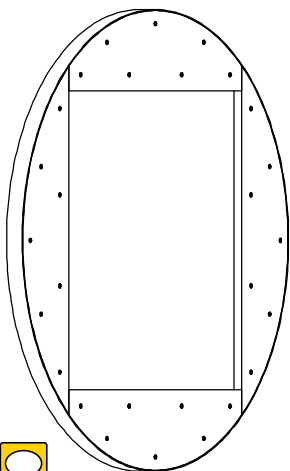

"Detail 2"

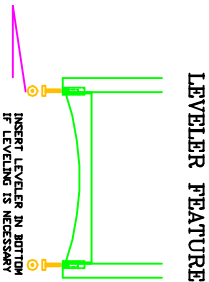

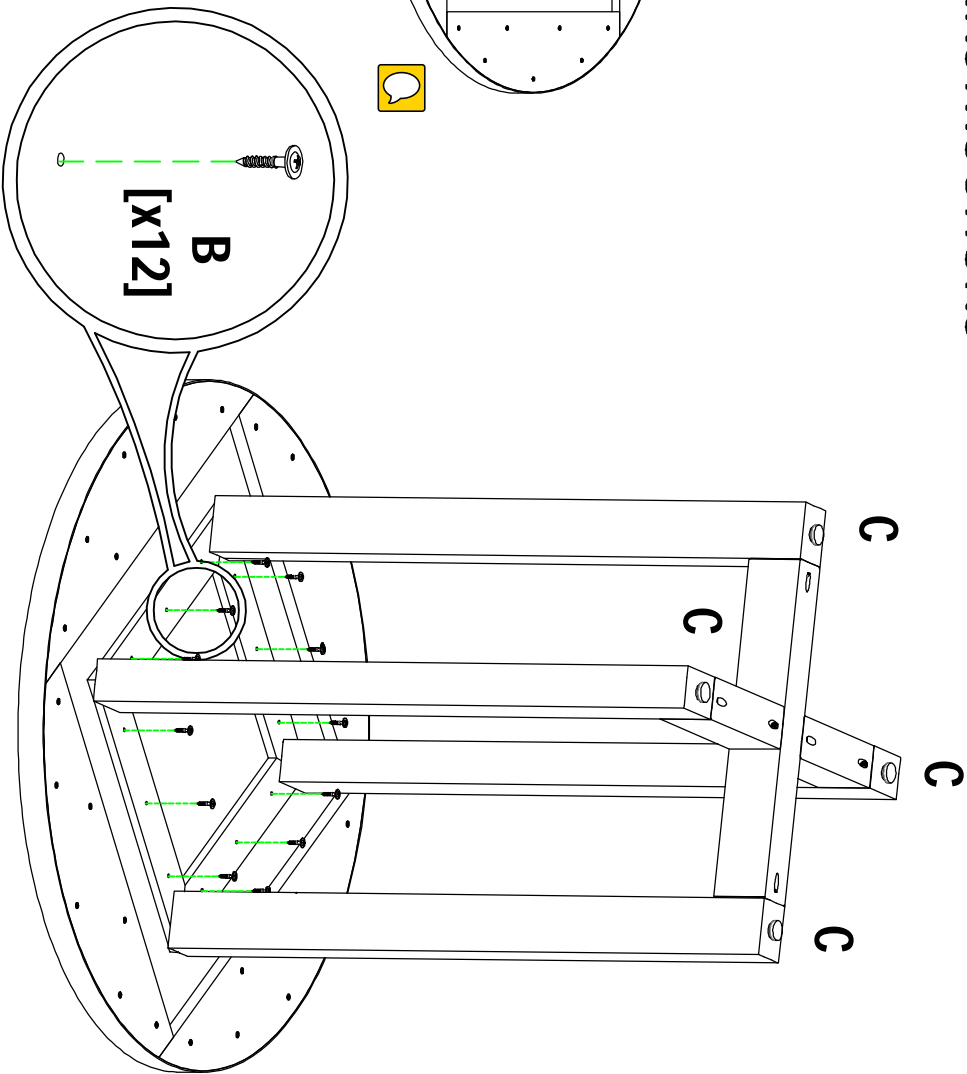


Due to potential irregularities in your flooring surface your doors or cabinet may appear to be crooked. To realign, insert leveler and adjust as necessary.



- 1.- Unpack the base (1) and remove packing frame using a 4mm Allen wrench (A). ("Detail 1")
- 2.- Unpack the top (2), place top upside down on soft surface. ("Detail 2")
- 3.- Center base (1) inside top (2) and secure with screw (B) using phillips screwdriver.
- 4.- Install levelers (C) into base (1).
- 5.- With an assistant flip unit into upright position.

Tools required : Phillips Screwdriver

NO:	Hardware List		QTY
A		4MM HEX WRENCH	1 PC
B		PHIL RND WASHER SCREW	12 PCS
C		HEX HEAD LEVELER	4 PCS