
## **Assembly Instructions**

## CARE INSTRUCTIONS:


TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.

## WARNING!


DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. ENSURE THIS UNIT IS USED ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM. KEEP AWAY FROM CHILDREN AND BABIES. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. ADULT ASSEMBLY REQUIRED. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE. **MAXIMUM SAFE LOAD: 10KGS FOR TOP PANEL, 5KGS FOR INSIDE DRAWER.** 

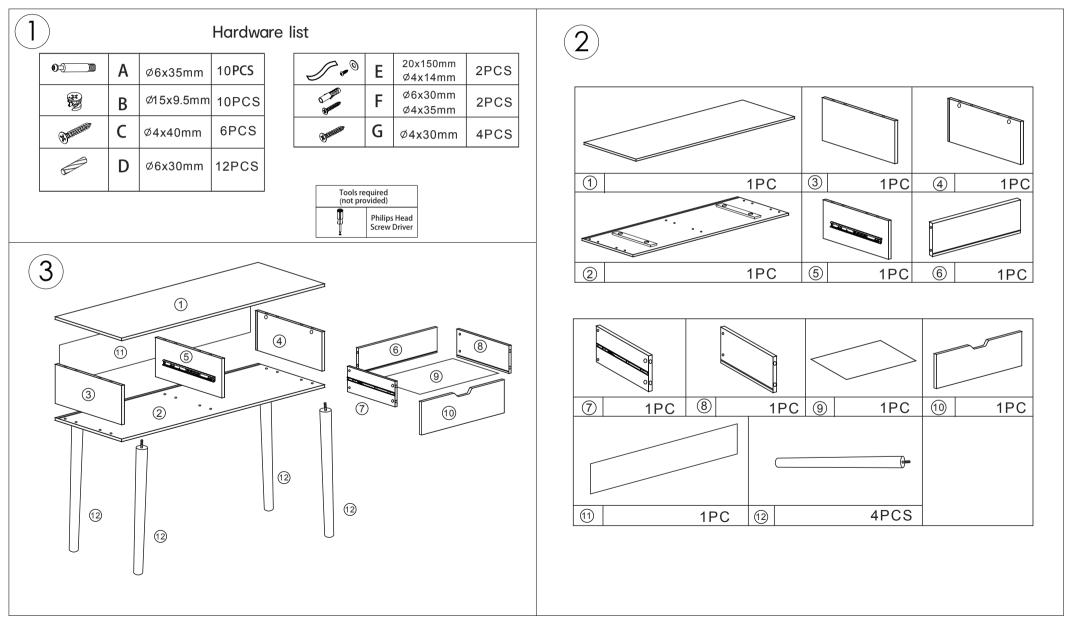


**Step 1:** Fix Part A onto board (1) and put Part D into the corresponding position (as per below diagram). Attach board (3), (4) & (5) onto board (1), and then fix the round screws (Part B) with a screwdriver. Ensure all parts align.

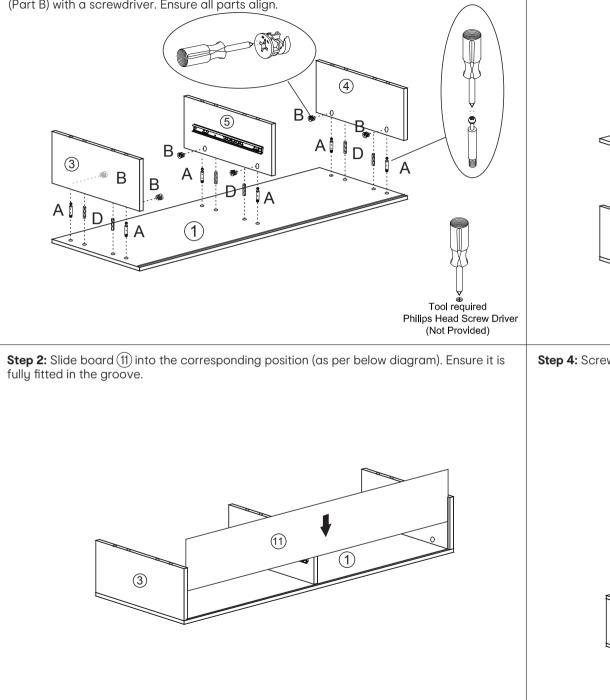


**Step 3:** Put part D into the corresponding position (as per below diagram) and attach board (2) with screws (Part C). Ensure board (11) is fully fitted in the groove.

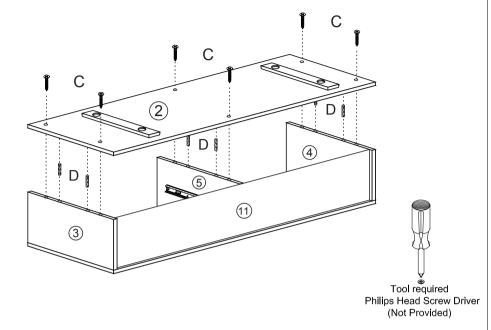



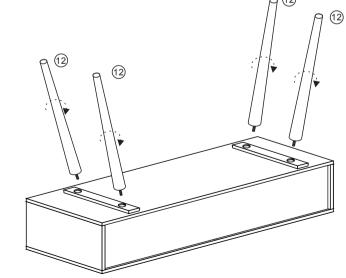


**Step 5:** Assemble board ( $\bigcirc$ , ( $\bigcirc$ ), (O) with screws (Part G). Slide board ( $\bigcirc$ ) into the corresponding position (as per below diagram). Ensure it is fully fitted in the groove. Screw Part A onto board (O), and attach this piece to the rest of the drawer before fixing the round screws (Part B) with a screwdriver. Ensure all parts align.

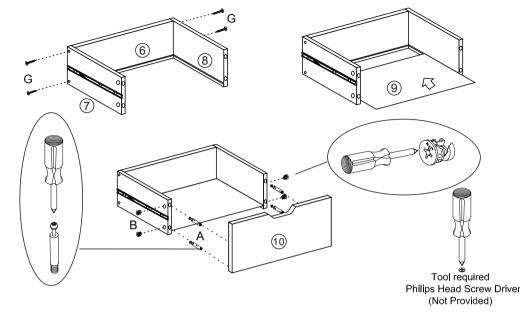



Step 6: Slide the drawer into the unit. Assembly is complete.

**Step 7:** Fix the part E at the back of the unit with a screwdriver.

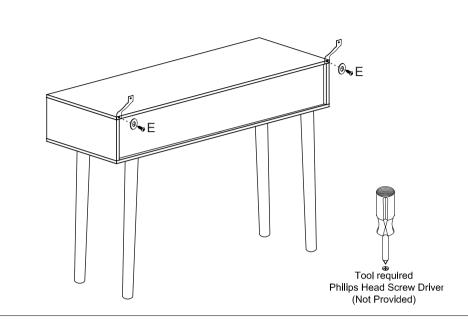

Step 8: Fix table to the wall with part F using screwdriver.

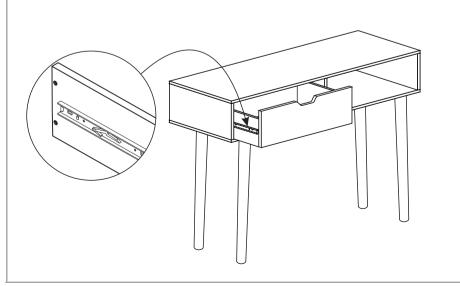

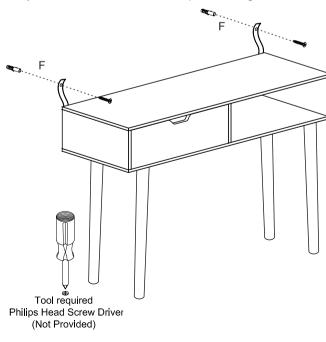

## **TOPPLING FURNITURE WARNING:**

- > It is strongly recommended that this product is permanently fixed to the wall.
- > Please seek professional advice if you are in doubt of what fixing device to use.
- > Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.
  Caution: for your safety when attaching the anchor fixings, please note the following:
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)