## **Protective Cover**


(Package of 5) Reorder # | Description □10075799 | Clear Cover □10087152 | Yellow Cover

## For use with the OptimAir® TL Powered Air **Purifying Respirator**


## **INSTRUCTIONS**

- 1. In a clean area, remove belt and cartridges.
- 2. Slide protective cover over breathing tube and motor blower unit. (It may be helpful to turn on the motor blower during this step.)


3. Push cover openings over cartridge recepta-

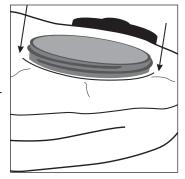

4. Attach cartridges.

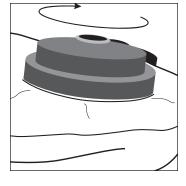


5. Lift edges of protective cover openings over cartridge bases and seal with tape.

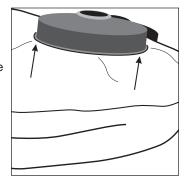


## **A** WARNING

DO NOT allow the protective cover, or any object, to interfere with the cartridge o-ring and receptacle sealing surface or an airtight seal will not be achieved. Failure to follow this warning could result in serious personal injury or death.

- 6. Cut protective cover tube to desired length and seal to breathing tube connector with tape.
- 7. Replace belt through apertures in cover loops on motor/blower.
- 8. Lay the unit flat while folding and taping bottom of

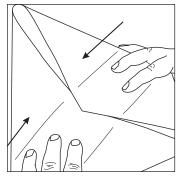



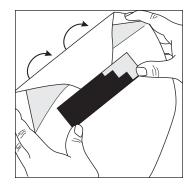

For More Information, call 1-800-MSA-2222 or Visit Our Website at www.MSAnet.com



TAL 707 (L) Rev. 1

MINE SAFETY APPLIANCES COMPANY PITTSBURGH, PENNSYLVANIA, U.S.A. 15230