

Rubber Head Harness Kit

- 817389 Ultravue
- 817390 Ultra Elite

for Ultravue® and Ultra Elite® facepieces

ASSEMBLY, USE AND MAINTENANCE INSTRUCTIONS.

Kit Includes:

Qty.	Item	Part Number	Description
1	Rubber Head Harness	817389	Rubber Head Harness/one Crown Strap, two Temple Straps and two Neck Straps
1	Rubber Head Harness for Ultra Elite Facepiece	817390	Rubber Head Harness/one Crown Strap, two Temple Straps and two Neck Straps
1	Instructions	817451	

DESCRIPTION

The Rubber Head Harness Kit is used with the Ultravue and Ultra Elite facepieces. The harness is designed for improved comfort and ease of donning. It is compliant with NFPA 1981, 1997 edition.



ASSEMBLY INSTRUCTIONS

Removing the existing head harness from the facepiece.

- Unthread straps from buckles at crown, temple, and neck locations. Leave buckles in place on rubber lugs. Discard the old harness.

Head Harness Installation for Ultravue and Ultra Elite Facepieces

- Thread the Crown, Temple, and Neck Straps into the buckles as follows:
 - Thread the Strap into the bottom section of the buckle under the roller bar.
 - Push roller bar down and thread the end through the top section of the buckle.
 - Adjust so that the pull tab extends beyond the buckle metal tab.

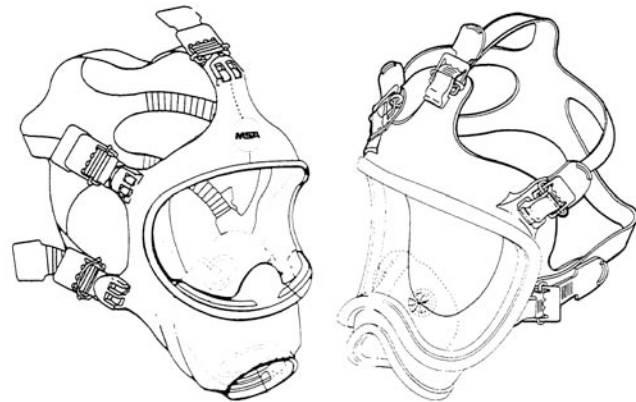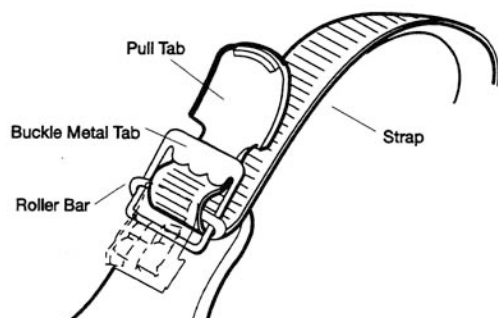

Ultravue Facepiece

Ultra Elite Facepiece

- Check that the installed harness straps are not twisted.

Note: Neck location buckles have an extra D-ring which is not involved in installation

USE

Donning the Head Harness


- Loosen the straps by lifting the buckle metal tab, feeding the strap end toward the buckle, then pulling gently on the strap in the direction away from the buckle.
- Center the harness behind the facepiece.

Note: Ensure that hair is away from facepiece seal and buckles before donning.

- Don the facepiece per the SCBA Level 1 User Manual. Check the face-to-facepiece seal. Follow the Facepiece Fit procedures in the SCBA Level 1 User Manual.
- Tighten harness straps by pulling the strap pull tabs back toward the rear of the head. The buckle is designed to secure the straps easily with one hand.

⚠ WARNING

The harness must fit securely for the facepiece and breathing apparatus to function properly. Each user must perform a Fit Test as described in SCBA Level 1 User Manual. Failure to follow this warning can result in leakage of contaminant into the breathing zone.

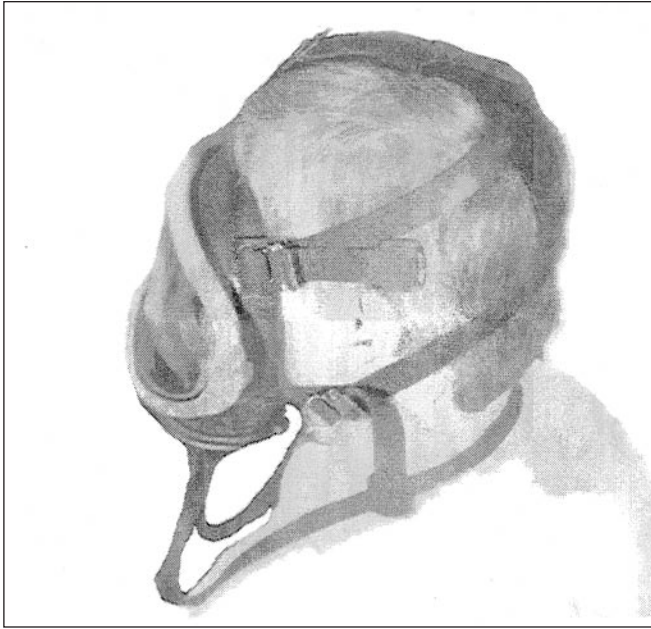

Inspection before using the Head Harness

Check the head harness for tears, cracks, or signs of wear. Do not use a damaged head harness. If the head harness is damaged in use, or if the material becomes torn, it must be replaced. Do not use the harness if buckles are damaged.

Maintenance

Cleaning: Wipe with a cloth and mild detergent. Rinse and allow to air dry. Do not bleach or use abrasive cleaners. Do not store wet.



For More Information: Call (1-800-MSA-2222) or Visit Our Website at (www.MSAnet.com)



Be Sure.
Choose MSA.

MINE SAFETY APPLIANCES COMPANY
PITTSBURGH, PENNSYLVANIA, U.S.A. 15230