


OBSERVER H TERMINAL BLOCK			ENERGIZED	RELAY
P2-6	FAULT		NORMALLY OPEN	FAULT
P2-5	FAULT		COM	
P2-4	FAULT		NORMALLY CLOSED	

OBSERVER H TERMINAL BLOCK		DE ENERGIZED	ENERGIZED	RELAY
P2-3	ALARM	NORMALLY CLOSED	NORMALLY OPEN	ALARM
P2-2	ALARM	COM	COM	
P2-1	ALARM	NORMALLY OPEN	NORMALLY CLOSED	

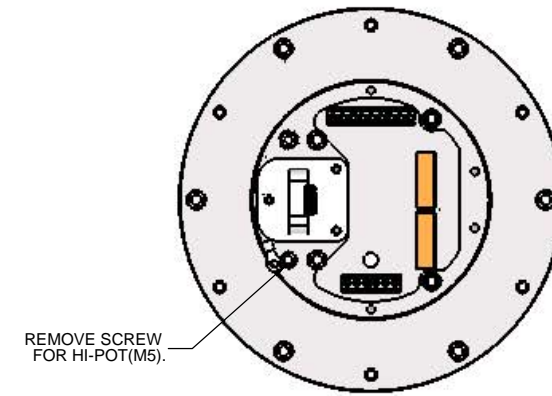

**OBSERVER-i INSTALLATION AND OUTLINE DIMENSIONS**