



GENERAL MONITORS

S4000CH HART

HART Communication Manual



The information and technical data disclosed in this document may be used and disseminated only for the purposes and to the extent specifically authorized in writing by General Monitors.

Instruction Manual **05-08**

General Monitors reserves the right to change published specifications and designs without prior notice.

MANS4000CHH

Part No.
Revision

MANS4000CHH
B/05-08

Table of Contents

TABLE OF CONTENTS	II
TABLE OF TABLES	IV
1.0 INTRODUCTION	1
1.1 Scope	1
1.2 Purpose	1
1.3 References.....	1
2.0 DEVICE IDENTIFICATION	1
3.0 PRODUCT OVERVIEW	2
3.1 Getting Started	2
4.0 PRODUCT INTERFACES	3
4.1 Process Interface	3
4.2 Host Interface.....	3
4.3 Local Interfaces, Jumpers, and Switches	3
5.0 DEVICE VARIABLES	3
6.0 DYNAMIC VARIABLES	3
6.1 Primary Variable = Percent of Lower Explosive Limit.....	3
6.2 Secondary, Tertiary, and Quaternary Variables: Not Applicable	4
7.0 STATUS INFORMATION	4
8.0 UNIVERSAL COMMANDS	5
9.0 COMMON PRACTICE COMMANDS	5
9.1 Supported Commands	5
9.2 Burst Mode.....	5
9.3 Catch Device Variable.....	5
10.0 DEVICE SPECIFIC COMMANDS	5
10.1 Command #131: Do Abort	6
10.2 Command #136: Set Alarm Level	6
10.3 Command #137: Set Warn Level	7
10.4 Command #139: Reset Alarm.....	7
10.5 Command #141: Set Relay (Alarm) Configuration	8
10.6 Command #142: Reset Event Happened Flag	9
10.7 Command #143: Read Event Logging Counters	9
10.8 Command #144: Clear Event Logging Counters	10
10.9 Command #145: Read Warning Event Log	10
10.10 Command #146: Read Alarm Event Log	11
10.11 Command #147: Read Fault Event Log.....	11



10.12 Command #148: Read Maintenance Event Log 12

10.13 Command #149: Set Clock 13

10.14 Command #150: Read Clock 13

10.15 Command #151: Set Run Time Meter 14

10.16 Command #152: Read Run Time Meter 14

10.17 Command #154: Set Event Index 15

10.18 Command #155: Get Event Index 15

10.19 Command #156: Read Calibration Event Log 16

10.20 Command #163: Get Fast Changing Information 16

10.21 Command #164: Get Slow Changing Information 17

10.22 Command #165: Get Set Up Information 18

10.23 Command #170: Set Current Range 19

10.24 Command #186: Set Cal IO type 19

10.25 Command #187: Set Solenoid State 20

10.26 Command #188: Read Solenoid State 20

10.27 Command #189: Set Sensor Life 21

10.28 Command #190: Set Calibration Level 21

10.29 Command #192: Do Calibration 22

10.30 Command #194: Calibrate New Sensor 22

10.31 Command #195: Do Gas Check 23

11.0 TABLES 23

11.1 S4000CH – Device Specific Commands Summary 23

11.2 S4000CH – Operating Mode - PV Values 24

11.3 Fault Event Log – Cause Description 24

12.0 PERFORMANCE 25

12.1 Sampling Rates 25

12.2 Power-up 25

12.3 Device Reset 25

12.4 Self-Test 25

12.5 Command Response Delay 25

12.6 Busy and Delayed-Response 25

12.7 Long Messages 25

12.8 Non-Volatile Memory 25

12.9 Operating Modes 26

12.10 Write Protection 26

ANNEX A. CAPABILITY CHECKLIST 26

ANNEX B. DEFAULT CONFIGURATION 27

ANNEX C. DEVICE DESCRIPTOR LANGUAGE MENU 28



Table of Tables

Table 1: Field Device Identification Data.....	1
Table 2: Error Status Information	4
Table 3: S4000CH – Common Practice Commands.....	5
Table 4: S4000CH – Device Specific Commands.....	24
Table 5: S4000CH - Operating Mode - PV Values.....	24
Table 6: Fault Event Log – Cause Description.....	24
Table 7: Command Response Times	25
Table 8: Capability Checklist	26
Table 9: Default Configuration.....	27

1.0 Introduction

1.1 Scope

The S4000CH HART combustible gas detector complies with HART Protocol Revision 6.0. This document specifies all of the device specific features and documents HART Protocol implementation details. The functionality of this Field Device is described sufficiently to allow its proper application in a process and its complete support in HART capable Host Applications.

1.2 Purpose

This specification is designed to complement the S4000CH Instruction Manual by providing a complete description of this field device from a HART Communications perspective. This specification is designed to be a technical reference for HART capable host application developers, system integrators, and knowledgeable end users.

1.3 References

DOCUMENT NAME	DOCUMENT RELATIONSHIP
HART Communications Protocol Specifications	This is used to insure compliance with the HART Communication Protocol.
S4000CH Instruction Manual	This is the General Monitors S4000CH Product Instruction Manual.

2.0 Device Identification

The following table is the Field Device Identification Data for the instrument.

Manufacturer's Name	General Monitors, Inc.	Model Number	S4000CH
HART ID Code	223 (DF Hex)	Device Type Code:	129 (81 Hex)
HART Protocol Revision	6.0	Device Revision:	1
Number of Device Variables	0		
Physical Layers Supported	1		
Physical Device Category	FSK		

Table 1: Field Device Identification Data

3.0 Product Overview

The S4000CH is an Intelligent Sensor for the detection of combustible gases and vapors. The microprocessor-based electronics processes information at the sensor site, within an explosion-proof housing. The S4000CH accurately measures combustible gas and reports the measurement as a percent of the Lower Explosive Limit (%LEL) of the gas.

3.1 Getting Started

In order to enable HART communication with the S4000CH detector, users may employ several means including HART handheld communicators or PC-based systems. Using a PC-based software application and a HART interface modem, for example, allow operators to access information from the S4000CH. A typical setup is illustrated in Figure 1.

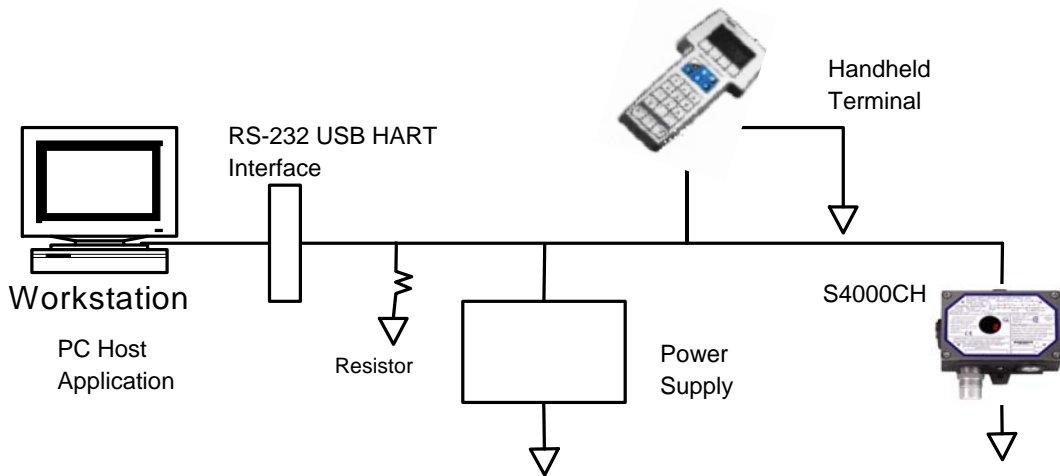


Figure 1: Connecting a PC to a HART device

Once the detector is installed (see S4000CH Instruction Manual) and connected to a PC, host application, or handheld terminal, the master will commonly begin communication to the S4000CH by using the HART Command #0. The field device will then respond only if its tag matches. The data in the reply to Command #11 is identical to that of Command #0, so the master can then construct the Unique Identifier for use with further commands.

NOTE: The handheld device allows for the retrieval of diagnostic information and input of device settings as needed and should not be used as a permanent part of a safety system.

4.0 Product Interfaces

4.1 Process Interface

This section describes all interfaces between the devices and the measured process.

4.1.1 Sensor Input Channels

A digital display provides indications and display codes that can be viewed through a window in the cover. A red LED above the digital display signifies an ALARM condition, while a red LED below the digital display signifies a WARN condition. Analog signal (4-20 mA) and relays provide remote and/or discrete indications of the sensor's operation.

4.2 Host Interface

The HART interface uses the 4 – 20 mA current loop. Refer to the installation manual for connection details.

4.2.1 Analog Output: S4000CH Mode

The primary variable is proportional to the percent lower explosive limit. 4.0 mA output current corresponds to 0% LEL. 20.0 mA output current corresponds to 100% LEL.

4.3 Local Interfaces, Jumpers, and Switches

4.3.1 Local Controls and Displays

Refer to the Installation Manual for connection details.

4.3.2 Internal Jumpers and Switches

Refer to the Installation Manual for connection details.

5.0 Device Variables

There are no device variables exposed to the user.

6.0 Dynamic Variables

There is only one Dynamic Variable exposed to the user.

6.1 Primary Variable = Percent of Lower Explosive Limit

The primary variable is proportional to the percent lower explosive limit. 4.0 mA output current corresponds to 0% LEL. 20.0 mA output current corresponds to 100% LEL. The device mode is the variable, which corresponds to the Modbus register 0x00.

6.2 Secondary, Tertiary, and Quaternary Variables: Not Applicable

There are none defined for the S4000CH product.

7.0 Status Information

The error status, which is returned via Common Practice Command #48, is shown in Table 2 and corresponds to Modbus register 0x02.

Byte	Bit	Description	Class	Device Status Bits Set
1	0	Switch Error	Error	4,7
	1	Internal error (2.5,15V)	Error	4,7
	2	ARGC	Error	4,7
	3	Not Used	Error	4,7
	4	Not Used	Error	4,7
	5	Fault	Status	4,7
	6	Warning	Status	4,7
	7	Alarm	Status	4,7
0	0	Not Used	N/A	
	1	Low Supply Voltage	Error	4,7
	2	Fail to Calibrate	Error	4,7
	3	Sensor Error	Error	4,7
	4	Flash Error	Error	4,7
	5	EEPROM Error	Error	4,7
	6	Calibration Check Time out	Error	4,7
	7	Set up Error	Error	4,7

Table 2: Error Status Information

These bits may be set at power up to indicate an instrument failure. They may also be set by a failure detected during continuous background diagnostic testing.

8.0 Universal Commands

Command 3 returns the current loop variable and the primary variable for a total of 9 bytes returned. Command 9 returns the PV only.

9.0 Common Practice Commands

The following common practice commands are implemented.

9.1 Supported Commands

The following common-practice commands shown in Table 3 are implemented:

Command Number	Byte Number	Meaning
Command 38	N/A	Reset Configuration Changed Flag
Command 48	0	Returns Priority Fault, High Byte
Command 48	1	Returns Priority Fault, Low Byte
Command 48	2	Returns error status (same as Modbus register x02), High Byte
Command 48	3	Returns error status (same as Modbus register x02), Low Byte
Command 48	4	Returns Power Cycled Flag
Command 48	5	Returns Event Happened Flag
Command 48	6	Returns 0x01 = "Maintenance Required" or 0x02 = Alarm or Warning
Command 48	7	Returns 0

Table 3: S4000CH – Common Practice Commands

9.2 Burst Mode

The S4000CH does not support Burst Mode.

9.3 Catch Device Variable

This S4000CH does not support Catch Device Variable.

10.0 Device Specific Commands

The Device Specific commands are used strictly for the unique features of the S4000CH and at the discretion of General Monitors.

10.1 Command #131: Do Abort

This command aborts calibration or gas check.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

10.2 Command #136: Set Alarm Level

This command sets the Alarm level.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm level, % of FS

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm level, % of FS

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 2	N/A	Undefined
3	Error	Passed Parameter Too Large
4	N/A	Undefined
5	Error	Too Few Data Bytes Received
6 – 15	N/A	Undefined
16	Error	Access Restricted
17 – 127	N/A	Undefined

10.3 Command #137: Set Warn Level

This command sets the Warn level.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Warn level, % of FS

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Warn level, % of FS

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 2	N/A	Undefined
3	Error	Passed Parameter Too Large
4	N/A	Undefined
5	Error	Too Few Data Bytes Received
6 – 15	N/A	Undefined
16	Error	Access Restricted
17 – 127	N/A	Undefined

10.4 Command #139: Reset Alarm

This command resets the latching Warn and Alarm relay.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
None	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

10.5 Command #141: Set Relay (Alarm) Configuration

This command configures the relay settings.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Hi Relay La/nL: 0 – nL, 1 – LA
1	Unsigned-8	Alarm Hi Relay En/dE: 0 – dE, 1 – En
2	Unsigned-8	Alarm Lo Relay La/nL: 0 – nL, 1 – LA
3	Unsigned-8	Alarm Lo Relay En/dE: 0 – dE, 1 – En

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Hi Relay La/nL: 0 – nL, 1 – LA
1	Unsigned-8	Alarm Hi Relay En/dE: 0 – dE, 1 – En
2	Unsigned-8	Alarm Lo Relay La/nL: 0 – nL, 1 – LA
3	Unsigned-8	Alarm Lo Relay En/dE: 0 – dE, 1 – En

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 2		Undefined
3	Error	Passed Parameter too large
4		Undefined
5	Error	Too Few Data Bytes Received
16	Error	Access Restricted
17 – 127		Undefined

10.6 Command #142: Reset Event Happened Flag

This command resets the Event Happened Flag.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
None	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 15		Undefined
16	Error	Access Restricted
17 – 127		Undefined

10.7 Command #143: Read Event Logging Counters

This command reads five event logging counters.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 1	Unsigned-16	Warning Event Counter
2 – 3	Unsigned-16	Alarm Event Counter
4 – 5	Unsigned-16	Fault Event Counter
6 – 7	Unsigned-16	Maintenance Event Counter
8 – 9	Unsigned-16	Calibrate Event Counter

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.8 Command #144: Clear Event Logging Counters

This command resets the 5 event logging counters to zero.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
None	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.9 Command #145: Read Warning Event Log

This command reads the Warning Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 3	Unsigned-32	Event Running Time (in Seconds)
4– 6	Date	Event Date: Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10-13	Unsigned-8	Reserved = 0

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.10 Command #146: Read Alarm Event Log

This command reads the Alarm Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 3	Unsigned-32	Event Running Time (in Seconds)
4– 6	Date	Event Date: Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10-13	Unsigned-8	Reserved = 0

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.11 Command #147: Read Fault Event Log

This command reads the Fault Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 3	Unsigned-32	Event Running Time (in Seconds)
4– 6	Date	Event Date: Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10-11	Unsigned-8	Reserved = 0
12-13	Unsigned-16	Event Cause – See device specific table

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.12 Command #148: Read Maintenance Event Log

This command reads the Maintenance Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Event Log Number
0 – 3	Unsigned-32	Event Running Time (in Seconds)
4– 6	Date	Event Date: Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10-11	Unsigned-8	Reserved = 0
12-13	Unsigned-8	Code: 0-Gas check

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.13 Command #149: Set Clock

This command sets the internal real-time clock.

Request Data Bytes

Byte	Format	Description
0 – 2	Date	Date: Day, Month, Year-1900
3	Unsigned-8	Hours
4	Unsigned-8	Minutes
5	Unsigned-8	Seconds

Response Data Bytes

Byte	Format	Description
0 – 2	Date	Date: Day, Month, Year-1900
3	Unsigned-8	Hours
4	Unsigned-8	Minutes
5	Unsigned-8	Seconds

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 4		Undefined
5	Error	Too Few Data Bytes Received
6 – 127		Undefined

10.14 Command #150: Read Clock

This command reads the internal real-time clock setting.

Request Data Bytes

Byte	Format	Description
0	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 2	Date	Date: Day, Month, Year-1900
3	Unsigned-8	Hours
4	Unsigned-8	Minutes
5	Unsigned-8	Seconds

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.15 Command #151: Set Run Time Meter

This command sets the internal run time meter.

Request Data Bytes

Byte	Format	Description
0 – 3	Unsigned-32	Run Time Meter Value

Response Data Bytes

Byte	Format	Description
0 – 3	Unsigned-32	Run Time Meter Value

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 4		Undefined
5	Error	Too Few Data Bytes Received
6 – 127		Undefined

10.16 Command #152: Read Run Time Meter

This command reads the internal run time meter.

Request Data Bytes

Byte	Format	Description
0	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 3	Unsigned-32	Run Time Meter Value

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.17 Command #154: Set Event Index

This command sets the index of logged event to read. 0 – latest event

Request Data Bytes

Byte	Format	Description
0	Unsigned – 8	Sets index of logged event to read using commands 143 – 146. Range 0 – 9.

Response Data Bytes

Byte	Format	Description
0	Unsigned – 8	Event Index

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 2		Undefined
3	Error	Passed Parameter Too Large
4		Undefined
5	Error	Too Few Data Bytes Received
6 – 127		Undefined

10.18 Command #155: Get Event Index

This command reads the event logged index.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	Unsigned – 8	Event index

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.19 Command #156: Read Calibration Event Log

This command reads the Calibration Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0-3	Unsigned-32	Event Running Time (in Seconds)
4-6	Date	Event Date: Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10	Unsigned-8	1 - N/A, 2 – Calibration

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.20 Command #163: Get Fast Changing Information

This command reads the Fault Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 – 1	Unsigned-16	Mode – depends on instrument
2 – 3	Unsigned-16	Sub Mode – depends on instrument
4 – 7	Float	Analog Output
8 – 9	Unsigned-16	Priority Fault
10 – 11	Bit map	Error Status

12	Unsigned-8	Alarm Hi status : 0 – off, 1 – on , 2 – accepted
13	Unsigned-8	Alarm Lo status : 0 – off, 1 – on , 2 – accepted
14	Unsigned-8	Alarm Mid status : 0 – off, 1 – on , 2 – accepted
15	Unsigned-8	Power cycled flag
16	Unsigned-8	Event happened flag
17	Integer-8	% of FS
18-21	Integer-32	ppm level – For all toxic gasses else = 0

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.21 Command #164: Get Slow Changing Information

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0 - 1	Signed-16	Reserved = 0
2 - 5	Float	Supply Voltage
6 - 7	Signed-16	Sensor Voltage in miliVolt

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.22 Command #165: Get Set Up Information

This command sets the internal real-time clock.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Gas ID or sensor type
1	Enumerated	Measured Units
2- 5	Unsigned-32	Full Scale
6	Unsigned-8	Alarm Hi level, % of FS
7	Unsigned-8	Alarm Hi Relay La/nL: 0 – nL, 1 - LA
8	Unsigned-8	Alarm Hi Relay En/dE: 0 – dE, 1 - En
9	Unsigned-8	Alarm Lo level, % of FS
10	Unsigned-8	Alarm Lo Relay La/nL: 0 – nL, 1 - LA
11	Unsigned-8	Alarm Lo Relay En/dE: 0 – dE, 1 - En
12	Unsigned-8	Alarm Mid level, % of FS
13	Unsigned-8	Alarm Mid Relay En/dE: 0 – dE, 1 - En
14	Unsigned-8	Alarm Mid Relay La/nL: 0 – nL, 1 - LA
15	Unsigned-8	Alarm delay
16	Unsigned-8	Sensitivity
17	Unsigned-8	Cal level, % of FS. Default is 50%
18	Unsigned-8	Cal IO type: 0 – Remote Cal line, 1 – manual solenoid, 2 – automatic solenoid
19-20	Unsigned-16	Configuration Flags: Lock front panel flag, hazard watch, etc
21	Unsigned-8	Units on line
22	Unsigned-8	Number of votes
23	Unsigned-8	Sensor Life
24	Unsigned-8	Current Range: 0= 3.5 – 20, 1=1.25 - 20

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

10.23 Command #170: Set Current Range

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	0 – Range 3.5 mA – 20 mA, 1 -- Range 1.25 – 20 mA

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	0 – Range 3.5 mA – 20 mA, 1 -- Range 1.25 – 20 mA

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 2		Undefined
3	Error	Passed Parameter Too Large
4		Undefined
5	Error	Too Few Data Bytes Received
6 - 127		Undefined

10.24 Command #186: Set Cal IO type

Request Data Bytes

Byte	Format	Description
0	Unsigned 8	0 – Cal Remote line, 1 – manual solenoid, 2 – automatic solenoid

Response Data Bytes

Byte	Format	Description
0	Unsigned 8	0 – Cal Remote line 1 – manual solenoid, 2 – automatic solenoid

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 2		Undefined

Code	Class	Description
3	Error	Passed Parameter too large
4		Undefined
5	Error	Too Few Data Bytes Received
6 - 127		Undefined

10.25 Command #187: Set Solenoid State

This command reads the internal run time meter.

Request Data Bytes

Byte	Format	Description
0	Bits	Solenoid State: 1 - off, 2 - on

Response Data Bytes

Byte	Format	Description
0	Bits	Solenoid State: 1 - off, 2 - on

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 2		Undefined
3	Error	Undefined
4		Undefined
5	Error	Too Few Data Bytes Received
6 – 127		Undefined

10.26 Command #188: Read Solenoid State

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	Unsigned –8	Solenoid State: 0 = disabled, 1 – off, 2 – on

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors

Code	Class	Description
1 – 127		Undefined

10.27 Command #189: Set Sensor Life

Request Data Bytes

Byte	Format	Description
0	Unsigned 8	Sensor life, %

Response Data Bytes

Byte	Format	Description
0	Unsigned 8	Sensor life, %

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 4		Undefined
5	Error	Too Few Data Bytes Received
6 – 127		Undefined

10.28 Command #190: Set Calibration Level

Request Data Bytes

Byte	Format	Description
0	Unsigned 8	Cal level, % of FS

Response Data Bytes

Byte	Format	Description
0	Unsigned 8	Cal level, % of FS

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 2		Undefined
3	Error	Undefined
4		Undefined
5	Error	Too Few Data Bytes Received
6 - 127		Undefined

10.29 Command #192: Do Calibration

This sends the unit to calibration mode.

Request Data Bytes

Byte	Format	Description
0	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

10.30 Command #194: Calibrate New Sensor

Request Data Bytes

Byte	Format	Description
0	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 15		Undefined
16	Error	Access Restricted
17 – 127		Undefined

10.31 Command #195: Do Gas Check

This command sends the unit to Gas Check mode.

Request Data Bytes

Byte	Format	Description
0	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	N/A	N/A

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 15		Undefined
16	Error	Access Restricted
17 – 127		Undefined

11.0 Tables

11.1 S4000CH – Device Specific Commands Summary

The following table is a summary of the **S4000CH** Device Specific Commands.

Command Number	Meaning
131	Do Abort Calibration
136	Set Alarm Level
137	Set Warn Level
139	Reset Alarms
141	Set Relay State
142	Reset Event Happening Flag
143	Read Event Logging Counters
144	Clear Event Logging Counters
145	Read Warning Event Log
146	Read Alarm Event Log
147	Read Fault Event Log
148	Read Maintenance Log
149	Set Time Clock
150	Read Time Clock
151	Set Running Time
152	Read Running Time
154	Set Event Index
155	Read Event Index
156	Read Calibrate Event Log

Command Number	Meaning
163	Get Fast Changing Information
164	Get Slow Changing Information
165	Get setup Information
170	Set Current Range
186	Set Cal_IO_Type
187	Set Solenoid State
188	Read Solenoid State
189	Set Sensor Life
190	Set Calibration Level
192	Do Calibration
194	Calibrate New Sensor
195	Do Gas Check

Table 4: S4000CH – Device Specific Commands

11.2 S4000CH – Operating Mode - PV Values

The following is a summary of the S4000CH Operating Modes:

Operating Mode	Value in Hex
Run Mode	0x0002
Calibration Mode	0x0008
Zeroing Mode	0x0010
Calibration Pending Mode (Spanning)	0x0040
Zero Complete, Waiting for Gas	0x0020
Calibration Complete Mode	0x0080
Startup Mode	0x0001
Gas Check Mode	0x0004

Table 5: S4000CH - Operating Mode - PV Values

11.3 Fault Event Log – Cause Description

The following describes the cause as reported by the read event log commands:

Bits	Cause
0x0002	Low Supply Voltage
0x0004	Fail to Calibrate
0x0008	Sensor Error
0x0010	Flash Error
0x0020	EEPROM Error
0x0040	Calibration check time out
0x0080	Set up Error
0x0100	Switch Error
0x0200	Internal Error
0x0400	ARGC Error

Table 6: Fault Event Log – Cause Description

12.0 Performance

12.1 Sampling Rates

The S4000CH samples the sensor in 35 millisecond intervals.

12.2 Power-up

On power up, the S4000CH executes a self-test procedure, which requires approximately 50 seconds. During this time, the analog output is set to 1.25 mA or 3.5 mA. After the self-test is satisfactorily completed, the unit sets the primary variable to a value representing the mode of the instrument.

12.3 Device Reset

The S4000CH cannot be reset by any command. The unit only resets when power is cycled.

12.4 Self-Test

The S4000CH goes through a self-test upon power cycle. Should any of the tests fail, the unit immediately reports a fault condition.

12.5 Command Response Delay

The S4000CH responds as follows:

Response Type	Response Time
Minimum	20 ms
Typical	50 ms
Maximum	100 ms

Table 7: Command Response Times

12.6 Busy and Delayed-Response

The S4000CH does not use delayed-response times.

12.7 Long Messages

The largest data field used by the S4000CH is in response to Command 20 & 22 (Read/Write Long Tag): 34 bytes including the two status bytes.

12.8 Non-Volatile Memory

The S4000CH uses EEPROM to hold the device's configuration parameters. New data is written to this memory immediately on execution of a write command.

12.9 Operating Modes

The S4000CH reports percent of lower explosive limit detected while in RUN mode. Various other modes are used to support the calibration of the instrument.

12.10 Write Protection

The S4000CH does not support any write protection mode.

Annex A. Capability Checklist

Manufacturer, model, and revision	General Monitors S4000CH
Device type	Combustible Gas Detector
HART revision	6.0
Device Description available	Yes
Number and type of sensors	1 catalytic bead sensor
Number and type of actuators	0
Number and type of host side signals	1: 4 – 20 mA analog
Number of Device Variables	0
Number of Dynamic Variables	1
Mapable Dynamic Variables	No
Number of common-practice commands	2
Number of device-specific commands	31
Bits of additional device status	8
Alternative operating modes	No
Burst mode	No
Write-protection	Mfg Only

Table 8: Capability Checklist

Annex B. Default Configuration

Parameter	Default value
Lower Range Value	0% LEL
Upper Range Value	100% LEL
PV Units	Percent Lower Explosive Limit
Sensor type	Catalytic Bead
Number of wires	3
Damping time constant	N/A
Fault-indication jumper	N/A
Write-protect jumper	N/A
Number of response preambles	5

Table 9: Default Configuration

Annex C. Device Descriptor Language Menu

