

GENERAL MONITORS

Model TA402A

Zero Two Series Trip Amplifier Module
For Flame Detection Applications



The information and technical data disclosed in this document may be used and disseminated only for the purposes and to the extent specifically authorized in writing by General Monitors.

Instruction Manual

11/04

General Monitors reserves the right to change published specifications and designs without prior notice.

Part No.
Revision

MANTA402A-EU
J/11-04

Warranty Statement

General Monitors warrants the Model TA402A to be free from defects in workmanship or material under normal use and service within two (2) years from the date of shipment. General Monitors will repair or replace without charge any such equipment found to be defective during the warranty period. Full determination of the nature of, and responsibility for, defective or damaged equipment will be made by General Monitors' personnel. Defective or damaged equipment must be shipped prepaid to General Monitors' plant or the representative from which shipment was made. In all cases, this warranty is limited to the cost of the equipment supplied by General Monitors. The customer will assume all liability for the misuse of this equipment by its employees or other personnel. All warranties are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without General Monitors' approval or which have been subjected to neglect, accident, improper installation or application, or on which the original identification marks have been removed or altered. Except for the express warranty stated above, General Monitors disclaims all warranties with regard to the products sold, including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of General Monitors for damages including, but not limited to, consequential damages arising out of/or in connection with the use or performance of the product.

Warnings

All Zero Two Series Modules contain components, which can be damaged by static electricity. Special care must be taken when wiring the system to ensure that only the connection points are touched.

Unitised Flame Detectors designed by General Monitors will work with the Model TA402A. Any attempt to use a Field Device that has not been approved by General Monitors, will void warranty.

Fuses F2 and F3 must have a HBC of ≥ 1500 A in order to comply with approval requirements and good installation practices.



WARNING - Installation and Maintenance must be carried out by suitably skilled and competent personnel only.

Full backward compatibility can be specified at the time of order. If this configuration is specified, the rear terminal output designations will be identical to the previous generation of Zero Two Series Modules.

This generation of product can be distinguished from the previous generation by the lack of a door on the front panel. Adjustments are not necessary on the current generation of this product.



E C Declaration of Conformity in accordance with EC Directives

We at General Monitors Ireland Ltd., Ballybrit Business Park, Galway, Republic of Ireland, hereby declare that the equipment described below, both in its basic design and construction, and in the version or versions marketed by us, conforms to the relevant safety and health related requirements of the appropriate EC Directives, only as follows:

- a) Conforms with the protection requirements of Council Directive 89/336/EEC, = Amd 92/31/68/EEC relating to Electromagnetic Compatibility, by the application of:

A Technical Construction File No: GM 95005 and Competent Body Certificate No. 4473-95-106 and Report No. 4473/1K8

and

- b) Conforms with the protection requirements of IEC 1010-1 1990 + Amd 1: 1992 + Amd 2:1995 relating to safety by the application of:

A Technical Construction File No: GM 95005 and Competent Body Certificate No 4146/699L-6870, 4146/1119/9150 and 4146/1119/9507 issued by:

ERA Technology Ltd. Cleeve Road, Leatherhead Surrey KT22 7SB, England. Tel: +44 1372 370900

This declaration shall cease to be valid if modifications are made to the equipment without our approval.

PRODUCT: TA402A

It is ensured through internal measures and our ISO9001: 1994 certifications, that series production units conform at all times to the requirements of these current EC Directives and relevant standards.

Responsible Person:

Date: 15-07-97

General Manager European Operations

The signatory acts on behalf of company management, and with full power of attorney



NOTE - The instrument is now ready to operate! Please consult the manual for more information on the instrument's many features.

NOTE - If you have any problems in the setup or testing of the detector, please refer to the "Troubleshooting Section", or call the factory direct.

Worldwide Service is available by calling:

Lake Forest, California (24 hr. service)	Phone:	+1-949-581-4464
	Fax:	+1-949- 581-1151
Houston, Texas	Phone:	+1-281-855-6000
	Fax:	+1-281-855-3290
Ireland	Phone:	+353-91-751175
	Fax:	+353-91-751317
Singapore	Phone:	+65-6748-3488
	Fax:	+65-6748-1911
United Arab Emirates	Phone:	+971-4-8815751
	Fax:	+971-4-8817927
United Kingdom	Phone:	+44-1625-619583
	Fax:	+44-1625-619098



Table of Contents

	Page
Warranty Statement	i
Warnings	i
E C Declaration of Conformity in accordance with EC Directives	ii
Table of Contents	iv
Table of Figures	vi
1.0 Introduction	1
1.1 General Description	1
1.2 Features & Benefits	2
1.3 Applications	2
2.0 Specification	3
2.1 System Specifications.....	3
2.2 Mechanical Specifications	3
2.3 Electrical Specifications	4
2.4 Environmental Specifications	4
2.5 Engineering Specifications	5
3.0 Installation	6
3.1 Upon Receipt of Equipment.....	6
3.2 Control Module Installation	6
3.3 Rear Terminal Connections.....	7
3.4 Detector Location.....	14
3.5 Applying Power	15



4.0	Operation	16
4.1	General Maintenance	16
4.2	Electrical Inputs	16
4.3	Electrical Outputs	16
4.4	Accepting Alarm Conditions	18
4.5	Resetting Latched Alarms	18
4.6	CAL/INH Open Collector	19
4.7	Card Test Feature	19
4.8	Fault Diagnostics	19
5.0	User Interfaces	21
5.1	Types of User Interfaces	21
5.2	Setup & Setup Check Modes	22
5.3	Inhibit Mode	32
6.0	Detector Assembly/Accessories	33
6.1	Flame Detectors	33
6.2	UV Phototube	34
6.3	Pyroelectric Device	34
6.4	Test Lamp	35
6.5	Air Guard	35
	Engineering Documentation	38
	Zero Two Series Modules	40
	Customer Satisfaction Questionnaire	41



Table of Figures

Figure 1	Isometric View of the Model TA402A	1
Figure 2	Control Module Coding Strip	7
Figure 3	Wire Strip Length	7
Figure 4	Rear Terminal Designations	8
Figure 5	Relay Protection Circuit for AC/DC Loads.....	10
Figure 7	Detector/Controller Connections	11
Figure 8	Typical External Circuits for Open Collectors.....	12
Figure 9	Card Test Switch Wiring	13
Figure 10	Analogue Signal Connections	14
Figure 11	Power Connections – Rear Chassis.....	15
Figure 12	Front Panel Display	21
Figure 13	Entering the Setup & Setup Check Modes.....	24
Figure 14	Entering the Password	25
Figure 15	Entering the Inhibit Mode.....	26
Figure 16	A2 Energized/De-Energized Alarm Options	27
Figure 17	A2 Latching/Non-Latching Alarm Options	27
Figure 18	A2 Alarm Time Delay Option	28
Figure 19	A1 Energized/De-Energized Alarm Option.....	28
Figure 20	A1 Latching/Non-Latching Alarm Option	29
Figure 21	Fault/Inhibit Option	29
Figure 22	Entering Card Test Options	30
Figure 23	Alarm Output Option during a Cad Test. Ac/nA	30
Figure 24	Password Enabled/Disabled Option	31
Figure 25	Entering a new Password.....	31
Figure 26	FL3100 Picture	33
Figure 27	FL3101 Picture	33
Figure 28	FL3112 Picture	34
Figure 29	Energy Spectrum.....	34
Figure 30	Outline & Terminal Connections.....	38
Figure 31	Final Assembly Drawing	39

1.0 Introduction

This chapter provides a brief description of the Model TA402A, its features & benefits and a list of some of its applications. More detailed information on the features and benefits listed in Section 1.2 will be presented in later chapters.



WARNING - Installation and Maintenance must be carried out by suitably skilled and competent personnel only.

1.1 General Description

The General Monitors Model TA402A (see Figure 1) is a single channel Trip Amplifier Module designed for use in Zero Two Series Gas and Flame Detection Systems. This Module connects to the wires from a field mounted General Monitors Flame Detector, which monitors the presence or radiation emitted from fires.

The Model TA402A is electrically and physically compatible with the other gas detection, and system modules in the Zero Two Series. It is distinguished from the other modules by its red border and "TA402A" in the upper right corner of the front panel. The Model TA402A is designed for use in non-hazardous environments.

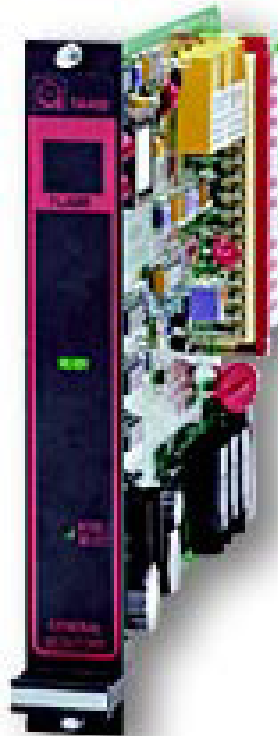


Figure 1



1.2 Features & Benefits

Microprocessor Based Electronics:

Monitor's fault conditions, sensor inputs and provides outputs in the form of display codes, analogue signal, relay contact and open collector activations.

Setup Mode:

Allows the user to set parameters such as alarm output options, test options etc. These parameters are viewed on the display during Setup Mode.

Password Options:

Prevents unauthorized alteration of the setup parameters (can be disabled)

Setup Check Mode:

Allows the user to view the parameters that have been set by the factory and/or an operator.

LED Test:

Tests the integrity of each display LED and each segment of the digital display on the front panel.

Card Test:

Tests the functionality of the card through the microprocessor ramping up the analogue signal to the alarm level for the time delay.

Live Insertion/Removal:

Allows the user to insert or remove a module while power is applied to the system without damage to any of the components in the system.

1.3 Applications

The General Monitors Model TA402A is a Trip Amplifier designed for Zero Two Series Flame Detection Applications. Below is a partial list of applications:

- Refineries
- Gas and oil production platforms
- LPG/LNG processing and storage
- Solvent Vapors
- Paint spray booths
- Drilling platforms and rigs
- Gas collection facilities
- Gas Turbines
- Chemical & petrochemical plants
- Aircraft hangars

2.0 Specification

This chapter provides detailed specifications for the Model TA402A Zero Two Series Trip Amplifier Module System, mechanical, electrical and environmental specifications present the Model TA402A in technical terms. The engineering specification provides a written specification that can be inserted into another written specification by architects and engineers.

2.1 System Specifications

Application:

Flame Detection.

Detector Type:

General Monitors' FL3100 and FL3112

Measuring Ranges (flame detectors)

UV Wavelength 185 to 260nm

IR Wavelength .43um (centerline)

Typical response times for TA402A System:

With FL3100 2 to 5 sec

With FL3101 < 1 sec

With FL3112 2 to 5 sec

Test Features:

Card – Functionality & Alarm Ramp

LED – Integrity of LED's & Display

Front Panel Indicators:

Display – 2 x 7 Segments

A2 – Time Delayed Alarm

A1 – Immediate Warning

READY – Normal Operation

SETUP – Display/Change Parameters

Modes of Operation:

Setup, Setup Check, Inhibit & Normal

Approvals:

The Model TA402A is CSA certified.

Warranty:

Two Years

2.2 Mechanical Specifications

Weight:	11.2 oz.	(318 grams)
Length:	9.9 inches	(251 mm)
Height:	6.825 inches	(173 mm)
Width:	1 inch	(25 mm)

2.3 Electrical Specifications

Input Power Requirement:

20 to 35Vdc @ 375mA max. (24Vdc, 9W nominal with field device)

Electrical Classification:

General Monitor's FL3100 and FL3112 Series Flame Detectors are rated for use in Class I, Division 1, Groups B, C & D; Class II, Groups E, F & G and Class III. The Model TA402A is designed for use in non-hazardous environments.

Relay Contact Rating:

4A @ 30V RMS/42.4V Pk, 3A @ 30 VDC, Resistive, maximum.

Open Collector Rating:

100mA @ 35Vdc for A1, A2, Fault, UA, FUA, CAL-OC, LA1 & LA2.

Cable Parameters:

Recommended three wire shielded, maximum cable lengths allowable between module and the Field Device with 24Vdc nominal at the detector.

mm ²	AWG	Feet	Meters
2.5	14	4500	1372
1.5	16	2250	685
1.0	18	1600	488
.75	20	1100	335
.25	22	750	228

The maximum allowable cable lengths between the analogue output connections on the control module with a remove device in series (maximum loop resistance of 300 Ohms between Analogue Signal & Common at the field device):

mm ²	AWG	Feet	Meters
2.5	14	9000	2740
1.5	16	5200	1585
1.0	18	3800	1160
.75	20	2400	730
.25	22	1600	488

2.4 Environmental Specifications

Operating Temperature Range:

Field -40°F to +140°F
 Device -40°C to +60°C

TA402A 0°F to +150°F
 -18°C to +66°C

**Storage Temperature Range:**

Field -40°F to +167°F

Device -40°C to +70°C

TA402A -40°F to +150°F

-40°C to +66°C

Operating Humidity Range:

5% to 100% Relative Humidity, non-condensing

2.5 Engineering Specifications

Zero Two System

Each system shall utilize modules capable of monitoring gas sensing elements, or a 0 to 21.7mA analogue signal from gas or flame detection transmitters. The system chassis shall be available in 4, 8 and 16 channels. Each chassis shall contain a bus for the following independent signals:

- A1 Warn
- A2 Alarm
- Fault Alarm
- Master Reset
- Master Accept
- Unaccept
- CAL
- +24Vdc
- System Common

Module signals shall be capable of being bussed from one chassis to another, so that up to 100 modules can comprise a single system. The gas and flame detection modules shall be electrically and physically compatible and capable of being used in the same chassis to form combined fire and gas detection systems. The system shall consist of Zero Two Series component modules as manufactured by General Monitors, Lake Forest California, U.S.A. or General Monitors, Galway, Ireland.

TA402A Trip Amplifier Module

The trip amplifier module, with a General Monitors' flame detector, shall meet the design requirements of CSA and Factory Mutual. The trip amplifier module shall have an interface panel, providing a mode/select switch and the following indications: 2 discrete alarm threshold level indicators, a fault or malfunction indicator, a ready indicator, a setup mode indicator and a 2 digit digital display. All Warn and Alarm parameters and user options shall be software selectable. A functional card test and a front panel LED test shall be switch capable without interrupting normal on-line services. The trip amplifier module shall be capable of insertion and removal during power on conditions without damage to any component module in the system.

The trip amplifier module will generate display codes associated with fault conditions whenever a fault or malfunction occurs. A mode/select switch shall provide the operator front panel access to a setup check mode, a setup mode and an inhibit mode. The trip amplifier module shall have a password protected setup routine capable of having the password disabled.

3.0 Installation

This chapter discusses what to do when a Model TA402A is received, the terminal connections & designations, field device location considerations and what to be aware of when applying power.

3.1 Upon Receipt of Equipment

All equipment shipped by General Monitors is packaged in shock absorbing containers, which provides considerable protection against physical damage. The contents should be carefully removed and checked against the packing slip. If any damage has occurred or if there is any discrepancy in the order, notify General Monitors as soon as possible. All subsequent correspondence with General Monitors must specify the equipment part and serial numbers.

Each Model TA402A is completely checked at the factory; however, a complete checkout is necessary upon initial installation and start-up to ensure system integrity.

3.2 Control Module Installation

A rack or panel mounted chassis will be required when installing any Zero Two Series Module. These chassis' should be mounted in non-hazardous, weather-protected locations and should be subjected to minimal shock and vibrations. The rack and panel mounted chassis are available in 4, 8, and 16 channel sizes. Multiple 16-channel chassis may be connected to each other to form larger systems.

In installations where two or more module types are to be mixed in the same chassis, ensure that the individual coding strips match the channel application. The coding strips are pre-configured at the factory and the male portion is already on each module.

The female portion, if un-mounted, must be fastened into position on the mounting strip of the desired chassis channel so as to mate with its counterpart on the module (see Figure 2).

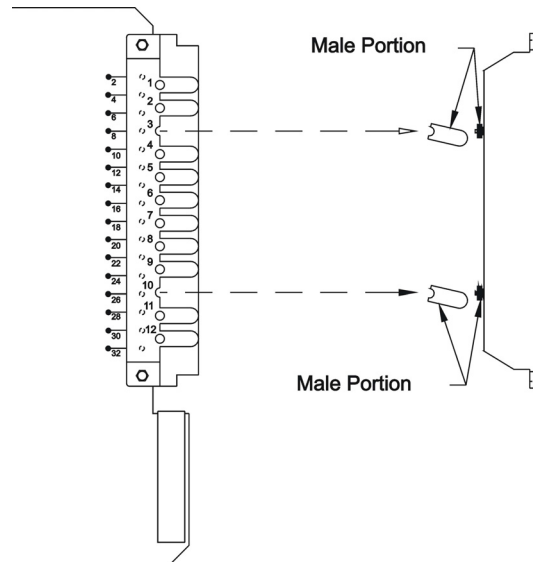


Figure 2

NOTE - Zero Two series modules require air circulation to avoid excessive heat build-up. If chassis are stacked vertically within an enclosure, forced air circulation may be required. The Trip Amplifier are, to a great extent, immune to electromagnetic interference (EMI). However, they should not be mounted in close proximity to radio transmitters or similar equipment

3.3 Rear Terminal Connections

All wire connections to the Model TA402A are made to the terminal block located at the rear of the chassis. The terminal block accepts 16 AWG to 20 AWG, stranded or solid core wire.

14 AWG wire may be used if it is properly stripped according to Figure 3

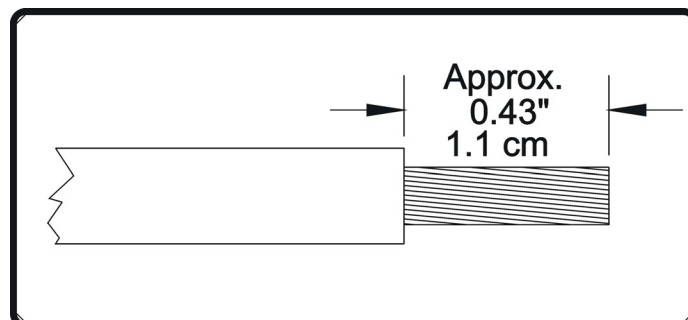


Figure 3



CAUTION - Contact with PC Board components should be avoided in order to prevent damage by static electricity.

To connect wires to the terminal block on the Model TA402A, loosen the desired screw, insert the stripped end of the wire and tighten.

For the rear terminal designations refer to Figure 4 below:

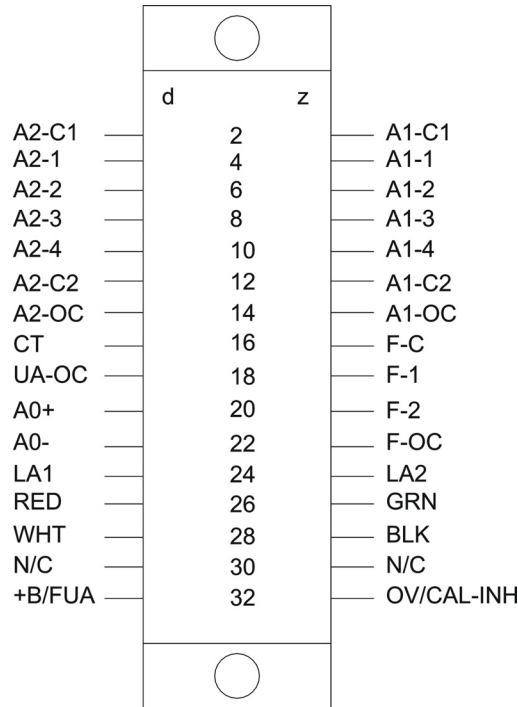


Figure 4

A2 Time Delayed Alarm

The terminal designations for the **A2** Time Delayed Alarm outputs are:

LABEL	TERM	DESCRIPTION
A2-C1	2d	Relay Common (1 & 2)
A2-1	4d	Relay Contact
A2-2	6d	Relay Contact
A2-3	8d	Relay Contact
A2-4	10d	Relay Contact
A2-C2	12d	Relay Common (3 & 4)
A2-OC	14d	Open Collector (OC)
LA2	24z	OC Logic for A2 LED

The **A2** Time Delayed Alarm outputs are DPDT relays, 1 open collector output (**A2-OC**) that follows the logic of the relays and 1 open collector output (**LA2**) that follows the blinking pattern of the front panel LED. The A2-C1 designation is common for A2-1 & A2-2. The A2-C2 designation is common for A2-3 & A2-4. The normally open (**NO**) and normally closed (**NC**) contacts depend on a user selectable option (see Chapter 5). The table below refers to the proper open and closed **A2** time delayed alarm relay contacts while the unit is on power:



User Selected Relay State	Normally Open	Normally Closed
Normally Energized	A2-C1 & A2-1, A2-C2 & A2-4	A2-C1 & A2-2, A2-C2 & A2-3
Normally De-Energized	A2-C1 & A2-2, A2-C2 & A2-3	A2-C1 & A2-1, A2-C2 & A2-4

A1 Immediate Warn

The terminal designations for the **A1** Immediate Warn outputs are:

Label	Term	Description
A1-C1	2z	Relay Common (1 & 2)
A1-1	4z	Relay Contact
A1-2	6z	Relay Contact
A1-3	8z	Relay Contact
A1-4	10z	Relay Contact
A1-C2	12z	Relay Common (3 & 4)
A1-OC	14z	Open Collector (OC)
LA1	24d	OC Logic for A1 LED (mimic)

The **A1** Immediate Alarm outputs are DPDT relays, 1 open collector output (**A1-OC**) that follows the logic of the relays and 1 open collector output (**LA1**) that follows the blinking pattern of the front panel LED. The A1-C1 designation is common for A1-1 & A1-2. The A1-C2 designation is common for A1-3 & A1-4. The normally open (**NO**) and normally closed (**NC**) contacts depend on a user selectable option (see Chapter 5).

The table below refers to the proper open and closed **A1** Immediate Warn relay contacts while the unit is on power:

User Selected Relay State	Normally Open	Normally Closed
Normally Energized	A1-C1 & A1-1, A1-C2 & A1-4	A1-C1 & A1-2, A1-C2 & A1-3
Normally De-Energized	A1-C1 & A1-2, A1-C2 & A1-3	A1-C1 & A1-1, A1-C2 & A1-4

Fault Alarm

The terminal designations for the **Fault** outputs are:

Label	Term	Description
F-C	16z	Relay Common
F-1	18z	Relay Contact (NO)
F-2	20z	Relay Contact (NC)
F-OC	22z	Open Collector (OC)
FUA	32d	Open Collector (OC)

The **Fault** outputs are SPDT relays, 1 open collector output (**F-OC**) that follows the logic of the relays and 1 open collector output (**FUA**) dedicated to new fault indications.

NOTE - If the Backward Compatible configuration is ordered, the FUA will not be present (pin 32d will be for +B, alternate power supply).

The Fault outputs are always normally energized when power is applied to the module. The contact ratings for the A2 & A1 alarm and Fault relays are 4A @ 30V RMS/42.4V Pk, 3A @ 30 VDC, Resistive, maximum.

Inductive loads (bells, buzzers, relays, etc.) on dry relay contacts must be clamped down. Unclamped inductive loads can generate voltage spikes in excess of 1000 volts. Spikes of this magnitude may cause false alarms and contact damage. Figure 5 shows recommended relay protection circuits for AC and DC loads, respectively.

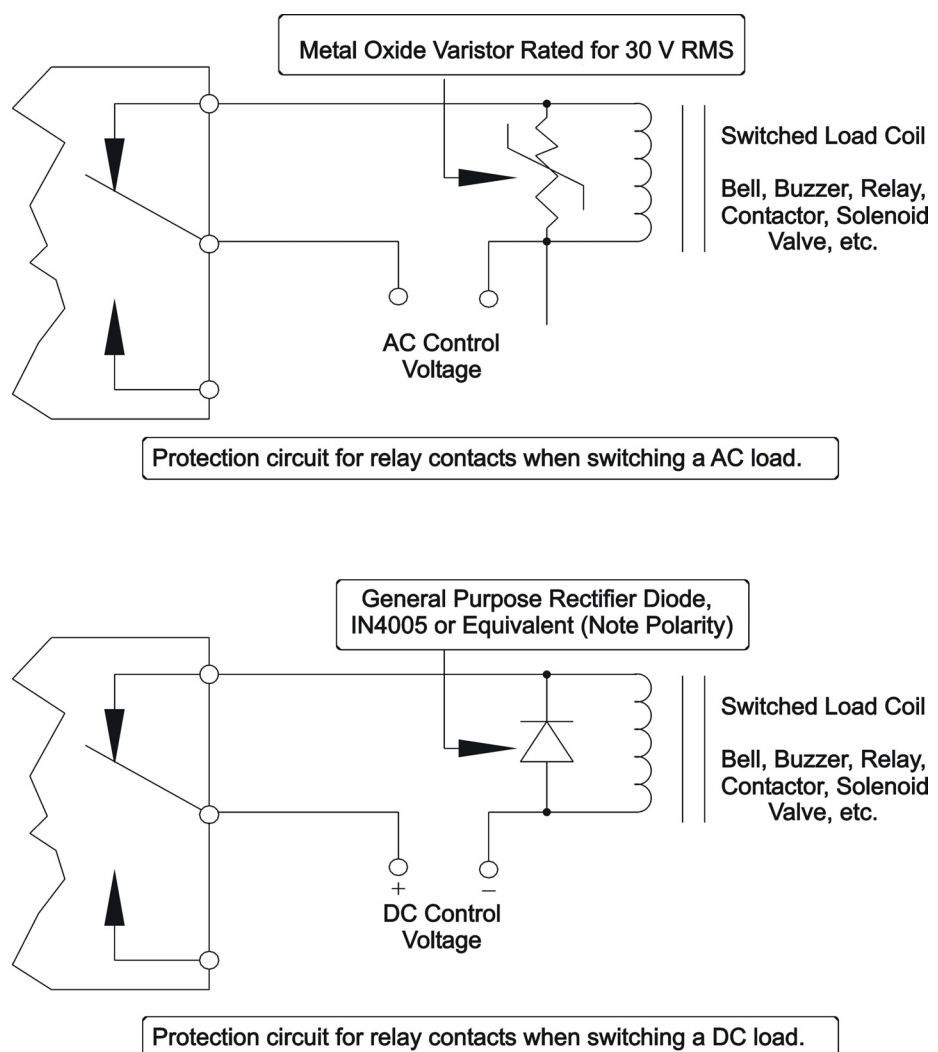


Figure 5

The terminal designations for the **Unaccept** and the Discrete **Calibration / Inhibit** Mode outputs are:



Label	Term	Description
UA	18d	Open Collector Output
CAL/INH	32z	Open Collector Output

NOTE - If the Backward Compatible configuration is ordered, the CAL/INH will not be present (pin 32z will be for 0v, alternate COM).

The terminal designations for the Flame Detector connections are:

Label	Term	Description
WHT	26d,z	Signal IN (Analogue)
RED	28d,z	VDC Out (+24Vdc)
BLK	30d,z	DC Common

NOTE – Only one Flame Detector may be connected to a Model TA402A

Figure 7 illustrates the inter-connections for the Trip Amplifier & the Flame Detector


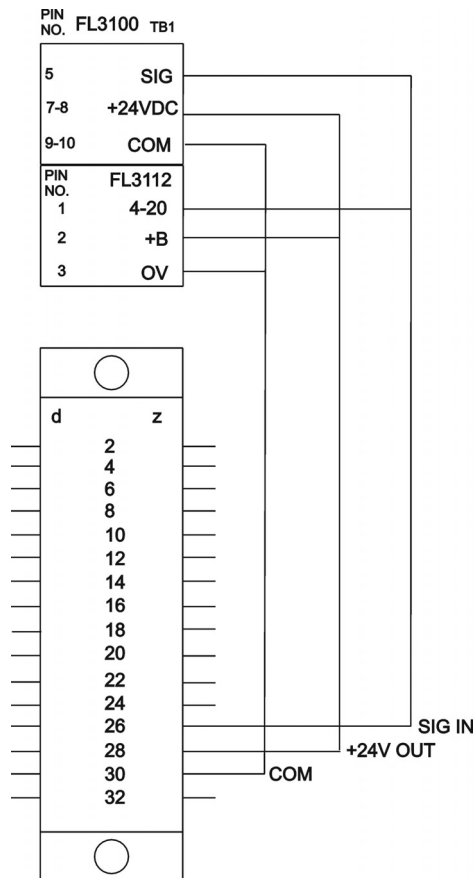


Figure 7

The electrical rating for all open collector outputs is 100mA @ 35Vdc



Figure 8 illustrates some typical open collector external circuits.

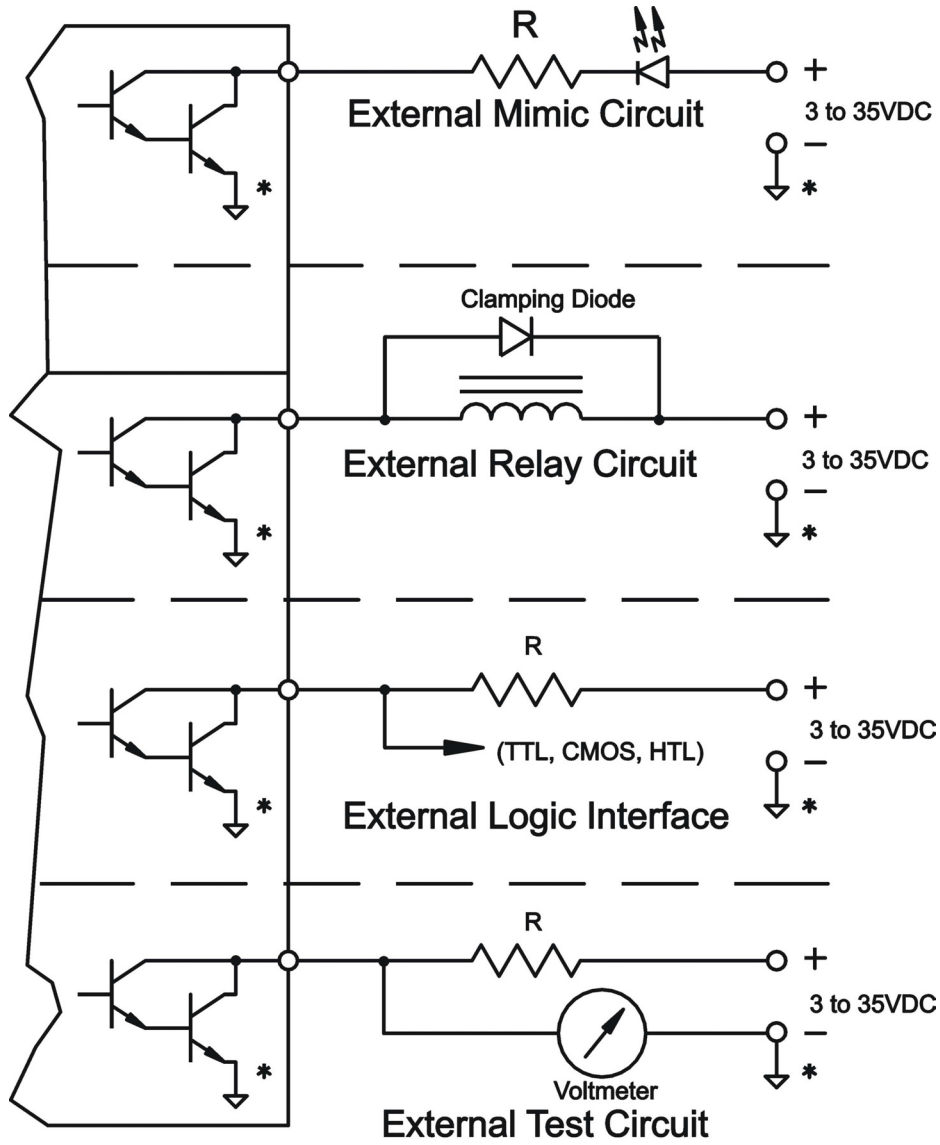


* Note: All system commons () must be tied together.

Figure 8

NOTE – When any Open Collector Output is connected to a device not powered by the same supply powering the TA402A, it will be necessary to remove (cut) Jumper W11

Card Test Switch

The terminal designation for the **Card Test** Input is:

Label	Term	Description
CT	16d	Switch Connection

The Card Test Input is provided so that the user can access the **Card Test** feature remotely. One end of a normally open SPST switch is connected to this termination. The other end is connected to system common. To activate the feature, simply press and hold the switch for as long as the test time is to be run (the minimum runtime for this test is equal to the A2 time delay).

Figure 9 is a block diagram that shows the switch connections for the **Card Test** feature.

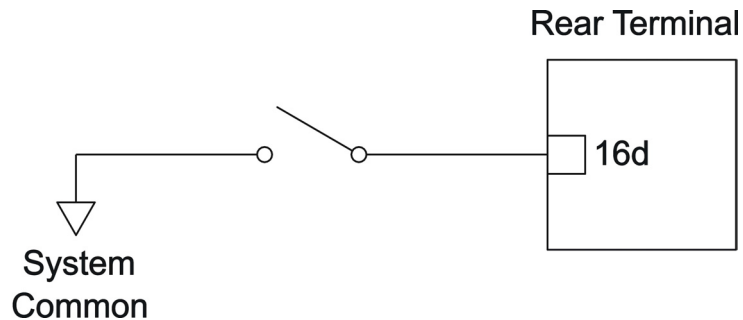


Figure 9


Analogue Output Signal

The terminal designations for the **Analogue Output** Signal are:

Label	Term	Description
AO+	20d	Analogue Signal (plus)
AO-	22d	Analogue Signal (minus)

NOTE – If the Analogue Signal is not used a jumper must be placed between 20d & 22d.

Figure 10 is a diagram of the Analogue Signal connections.

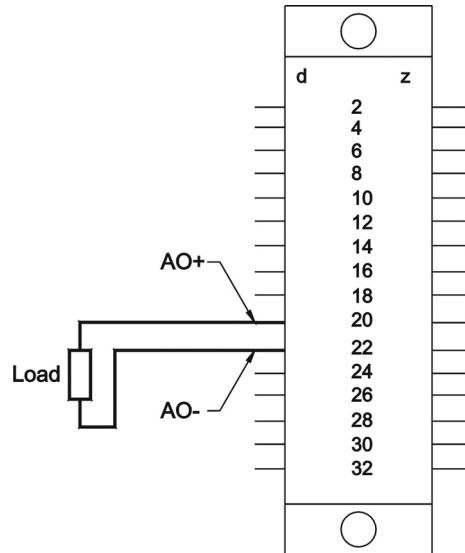

The maximum load resistance between AO + AO- cannot exceed 500 ohms.

Figure 10

3.4 Detector Location

There are no standard rules for detector placement, since the optimum sensor location is different for each application. The customer must evaluate conditions at the sensor site in order to make this determination.



WARNING – Installation and Maintenance must be carried out by suitably skilled and competent personnel only.

Considerations

- The flame detector should be easily accessible for optical checks. Ensure that sufficient clearance exists to allow the use of field devices such as the Air Purge Guard.
- The flame detector head should always be pointing at a slight downward angle to prevent build up of dust and particulate matter on the window(s). Remember that flame detectors are optical devices.
- The flame detector should be located in areas where fires may be likely to occur, if their presence is dangerous.
- Multiple flame detectors should be positioned such that their vertical and horizontal fields of view overlap, to ensure adequate coverage.

3.5 Applying Power

Zero Two Series Modules do not have an **ON/OFF** power switch. Each module in the Zero Two Series operates from 24Vdc. Current requirements will vary according to the number and type of modules in the system, as well as the number and type of field devices.

NOTE - If the application of power does not turn **ON** the unit, check fuse F1 on the control board.

Figure 11 indicates where the power connections for the chassis are made.

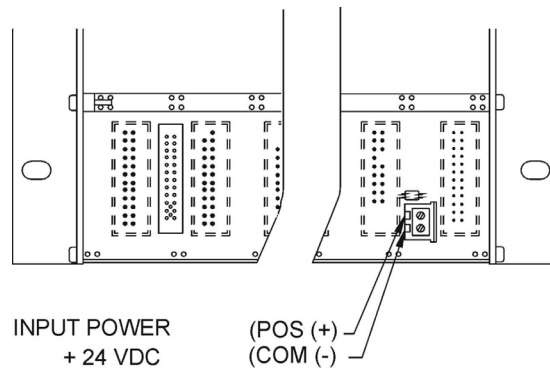


Figure 11

4.0 Operation

This chapter discusses what general maintenance to perform and describes the electrical inputs, outputs, accepting & resetting alarm & fault conditions and fault diagnostics.

4.1 General Maintenance

Once the Model TA402A has been installed, very little maintenance is required other than periodic checks to verify the integrity of the system.

- The user should evaluate conditions at the sensor site to determine how frequent calibration checks should be performed.
- A functional test of the system should be performed at least once each year. This test should include full operation of stand-by systems or back up power for the prescribed period.
- The power, detector and output wiring should be checked for tightness, verifying that all of the components and devices are connected correctly.
- If the “Password” is disabled, periodic checks of the setup parameters should be performed.

4.2 Electrical Inputs

There are two electrical inputs to the Model TA402A. They are the:

- General Monitors Catalytic Bead Sensor (field device) and
- Card Test input

Both of these input connections (field device and card test) are made to the rear terminal block (see Chapter 3 for more detailed installation information).

- The Flame Detector input consists of the standard three lead connections used with General Monitors Field Devices (Black = Common, White = Signal, Red = +24Vdc) See figure 8.
- The Card Test input consists of a single termination for remote testing of the Model TA402A's functions. For detailed information on the Card Test, refer to Figure 9.

4.3 Electrical Outputs

The electrical outputs on the Model TA402 consist of relay contacts, open collectors and an analogue current signal.

The following outputs have rear terminal relay contacts:

Output	Rear Terminal Relay Contacts
A1 Alarm	DPDT relay contacts
A2 Alarm	DPDT relay contacts
Fault	SPDT relay contacts

All of the relay contacts on the Model TA402A have a maximum rating of:

- 4A @ 30V RMS/42.4V Pk., 3A @ 30Vdc resistive

The following outputs have rear terminal open collectors:

- A1 Alarm & LED Mimic
- A2 Alarm & LED Mimic
- Fault
- UA - Unaccepted Alarm
- FUA - Unaccepted Fault
- CAL/INH – Discrete Inhibit Indication

All of the open collector outputs on the Model TA402A have a maximum rating of:

- 100mA @ 35Vdc

The Model TA402A provides an Analogue Output Signal for interfacing with other external devices (i.e. PLC, Chart Recorder, etc.) This signal originates at the Flame Detector and passes through “Signal IN” of the Trip Amplifier, out “AO+” to the external device and must be returned to “AO-” of the Trip Amplifier. The signal from the Flame Detector is a stepped 0 to 20mA signal:

0mA	Fault Condition
2mA	COPM Fault (FL310X only)
4mA	Safe Condition
8mA	IR Presence (FL3100 only)
12mA	UV Presence (FL3100 only)
16mA	Immediate indication of the presence of flame radiation
20mA	Sufficient Flame Radiation present for the duration of a user specified time delay in the Flame Detector

The Model TA402A interprets the analogue signal from the Flame Detector as follows:

0mA	Fault Condition, the TA402A will display a Fault Code & activate the Fault LED and circuit.
2mA	COPM Fault, the TA402A will display a Fault Code & activate the Fault LED and circuit.
4mA	Safe Condition, the TA402A will activate the Ready LED.
16mA	Flame Radiation, the TA402A will activate the A1 Alarm LED and circuit and begin the Time Delay count. If a 16mA (or higher) signal is maintained continuously for the period of the Time Delay the TA402A will activate the A2 Alarm LED and circuit.

The maximum resistance load on the Analogue Signal loop, including the wire running from the Flame Detector to the Trip Amplifier and to any External Device, must not exceed 300 ohms.

If the Analogue Output is not used to interface with an external device, a jumper must be placed between “AO+” & “AO-” on the rear terminal of the Trip Amplifier (See Section 3.3)

4.4 Accepting Alarm Conditions

Whenever a new alarm condition occurs, the front panel LED and open collector associated with that alarm (LA1 or LA2) would begin to flash. In addition, the associated alarm outputs and the unaccept outputs (TA402A, UA open collector & FM002A UA relay) will activate, unless they are already activated. The flashing front panel alarm LED and rear terminal open collector indicate that a new alarm has been activated. New alarms should be acknowledged, or accepted. This is accomplished with the **Master Accept** Button located on the Facilities Module, (FM002A).

Pressing the **Master Accept** Button de-activates the UA outputs and causes the associated front-panel alarm LED, and rear terminal open collector to stop flashing and energize.

NOTE - Alarms that latch must be Accepted before they can be Reset (see Section 4.5).

There is a unique situation that may occur with some frequency in certain applications. An alarm may occur and the operator will accept this alarm by pressing the **Master Accept** Button. If the alarm output is latching and the condition at the detector returns to normal (safe) the alarm output will need to be reset. If, however, the alarm output is accepted but not reset and that alarm condition occurs again, the front panel LED, the associated mimic open collector, and the unaccept outputs will re-flash or re-activate. This gives the operator an indication of a new alarm condition that must be re-accepted.

A type of alarm, other than the A1 & A2 alarms, is the fault alarm. The fault alarm can be accepted similarly to the A1 & A2 alarms. The front panel **Fault** LED will flash and the fault unaccept (FUA) open collector will energize when a fault is detected. By pressing the **Accept** button on the front panel, the FUA output will de-energize and the **Fault** LED will stop flashing. It will stay illuminated until the fault condition is corrected.

4.5 Resetting Latched Alarms

The user may select a “latching” or “non-latching” alarm output for A1 and/or A2. If an alarm output activates and the condition that caused that activation is no longer present, a non-latching alarm output will reset automatically. A latched alarm output needs to be reset manually.

Resetting latched alarm outputs is accomplished with the **Master Reset** Button located on the Facilities Module (FM002A). Pressing the **Master Reset** Button will reset any latched conditions that are no longer valid as well as a latched COPM error (F5 fault) that is no longer valid (see section 4.8)

NOTE - Latched alarm conditions cannot be Reset until they have been Accepted (see Section 4.4).

The **Master Reset** Button performs another function. If the operator presses and holds the **Master Reset** Button for two or more seconds, all of the LED's and LED segments in the digital display will illuminate for as long as the operator presses the button. This is called the LED Test. The LED test cannot be performed while the unit is in alarm or fault, or during a Card Test.

4.6 CAL/INH Open Collector

There is an open collector that will energize anytime the Model TA402A is placed in the Inhibit Mode. The Model TA402A ignores the CAL portion of this output because the Flame Detector cannot be placed in a CAL or CAL Check Mode. This open collector output is referenced to the system's ground or common. Energizing this output merely provides a path to ground as is the case with all energized open collector outputs. De-energized, this output will be in a high impedance state.

4.7 Card Test Feature

The Card Test Input is provided so that the user can access the Card Test feature remotely. One end of a normally open SPST switch is connected to this termination and the other end is connected to system common (see Figure 9).

To activate the Card Test feature, simply press and hold the switch for at least three seconds. Each alarm level (A1 & A2) will trip when the alarm setpoint and time delay are exceeded. At the conclusion of the Card Test, the A1 & A2 outputs will automatically reset (overriding any latching option). A Card Test cannot be initiated if the unit is in alarm or fault or during an LED Test.

NOTE – The relays (A1 & A2) and open collector outputs are active and will trip during the Card Test, unless the user specified option disabling these outputs is selected during the Setup Mode. This should be treated as a function test of a Zero Two System.

4.8 Fault Diagnostics

In addition to the Fault LED on the front panel, the Model TA402A provides a fault code on the digital display whenever a fault condition occurs. The Fault Codes that can appear on the digital display are summarized below.

F1, F2 & F9 – Are not used at this time. These codes have been reserved for future use.

F3 – Program checksum error. This fault occurs during initial power-up of the unit. If this fault occurs, remove and reapply power to the unit. If the fault continues to occur, replace the unit and consult your GMI Representative or the factory.

F4 – Flame Detector error. Make sure the wires running to and from the Trip Amplifier and the Flame Detector are connected properly. Check for opens and shorts across the field wiring. Make sure the analogue signal is returned to the field device or common (jumper AO + A – if unused). Check Fuses F2 & F3.

F5 – Flame Detector COPM Error. This error indicates that the flame detector COPM circuitry has detected an error. Please refer to the Flame Detector Manual for further details.

F6 – Low supply voltage. Make sure the supply voltage level at the chassis is 24Vdc.

F7 – EEPROM verification failure. This fault will occur if the microprocessor can not store setup information in the EEPROM. If this fault occurs consult the factory or your GMI Representative.

F8 – Failed to complete setup. This fault may occur during or immediately after the Setup Mode. If this fault occurs consult the factory or your GM Representative.

In each of the fault cases listed on this page, when the fault occurs the FUA output is activated. Pressing the **ACCEPT** button on the Facilities Module (FM002A) will acknowledge the fault, de-activate the FUA output and the fault LED will stop flashing and remain **ON** until the fault is corrected.

In addition, the F5 – Flame Detector COPM Error is latched on upon the first occurrence of this error in the Flame Detector. Resetting this latched fault is accomplished with the Master Reset Button located on the Facilities Module (FM002A). The Master Reset Button will reset the latched F5 fault only if the COPM error is no longer present at the flame detector. Pressing the Master Reset Button will also reset any latched alarms that have been accepted (see Section 4.5). Unlike latched alarms, the COPM Error (F5 fault) does not have to be accepted prior to resetting it.

5.0 User Interfaces

This chapter discusses the user interfaces the Setup Check & Setup Modes and the Inhibit Mode.



WARNING - Installation and Maintenance must be carried out by suitably skilled and competent personnel only.

5.1 Types of User Interfaces

User interfaces are provided so that the operator may interpret and direct the Model TA402A in the performance of its various functions. User interfaces (Figure 12) consist of a digital display, status indicators and a Mode/Select switch.

- The digital display provides the user with the fault diagnostic codes and setup parameters.
- The status indicators provide the user with an indication of the current mode of operation (alarm, fault, ready, and setup).
- The Mode/Select switch provides the user access to the Setup Check, Setup and Inhibit modes.

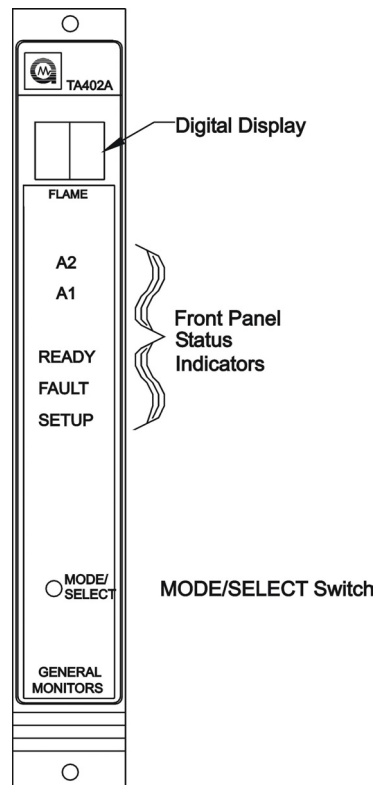


Figure 12

5.2 Setup & Setup Check Modes

The **Setup Check** Mode allows the operator to view the selected options for the module without allowing any changes to be made. Once this mode has been entered, the module will automatically display each of the selected options for a short period of time and then it will return to normal operation. The **Setup** Mode allows the operator to change the operating parameters by making choices for selected options.

The **Setup Check & Setup** Modes display identical information with the following exceptions:

- The **Setup Check** Mode allows the user to view the operating parameters of the Model TA402A, whereas the **Setup** Mode allows the user to change the operating parameters.
- Entering the optional Password is only available in the **Setup** Mode.
- The **Inhibit** Mode may only be entered from the **Setup** Mode. If the Inhibit Mode is entered, the unit will remain in the Inhibit Mode until the Mode/Select switch is pressed.
- After the Setup Mode is complete the TA402A will execute the Setup Check Mode to view the selected parameters.

NOTE - The **Setup** and **Setup Check** Modes cannot be entered if the unit is in alarm or fault.

During the Setup Mode the operator will be allowed to select options. The selection procedure is the same for most of the options. Pressing the **Mode/Select** Switch toggles the available choices. When the display has indicated a choice for five consecutive seconds, without the operator pressing the **Mode/Select** Switch, the **Setup** routine will accept that selection and move on to the next option available. These modes will activate the CAL/INH output and the CALBUSS.

NOTE - Before entering the **Setup** Mode to make changes, the user should fill out the form and become familiar with the block diagram. This will aid the user during the selection process in the **Setup** Mode.



This section is provided to aid the operator in making selections during the Setup Mode. It is recommended that the operator fill-in the selections in the proper blanks and then use this page as a reference while programming the Model TA402A. The blocks shown below indicate the order of options in the Setup Mode. To the right of each block is a description of the choices that are available for that option. More information about making each selection is provided in the pages that follow.

Password	Enter the Password, if the Password is enabled.	
Inhibit Mode	Enter the Inhibit Mode, if desired.	ENTER SELECTION
A2 Alarm Options	Set the Energized (En) / De-Energized (dE) Option Set the Latching (LA) / Non-Latching (nL) Option Set the Time Delay (1,2, 4, or 8 seconds)	_____ _____ _____
A1 Alarm Options	Set the Energized (En) / De-Energized (dE) Option Set the Latching (LA) / Non-Latching (nL) Option	_____ _____
Fault/Inhibit Options	Set the Fault Activate (Ac) or not (nA) during Inhibit Mode	_____
Card Test Options	Display will indicate "ct" for 5 seconds Set the Alarm outputs for Active (Ac) or not Active (nA)	_____ _____
Password Options	Set the Password to be Disabled (Pd) or Enabled (PE) If the Password is Enabled: Set the password digits Left _____ Right _____	_____ _____
Setup Check Mode	After all of the options have been selected, the TA402A will enter the Setup Check Mode.	

NOTE: The Password and the A2 Alarm time delay options offer the operator more than two choices. While these options are being selected, pressing the Mode/Select Switch will sequence the display to the next available choice for that option

Entering the Setup Mode

To Enter the **Setup Check** Mode or the **Setup** Mode. Press and hold the Mode/Select switch until the **SETUP** LED begins flashing (about ten seconds). When the **SETUP** LED is flashing, release the **Mode/Select** switch to enter the **Setup Check** Mode (Figure 13). Continuing to press and hold the Mode/Select switch until the **SETUP** LED stops flashing (about fifteen seconds more) will allow the operator to enter the Setup Mode. When the **SETUP** LED stops flashing and stays on, release the **Mode/Select** switch and the unit will enter the Setup Mode (Figure 13)

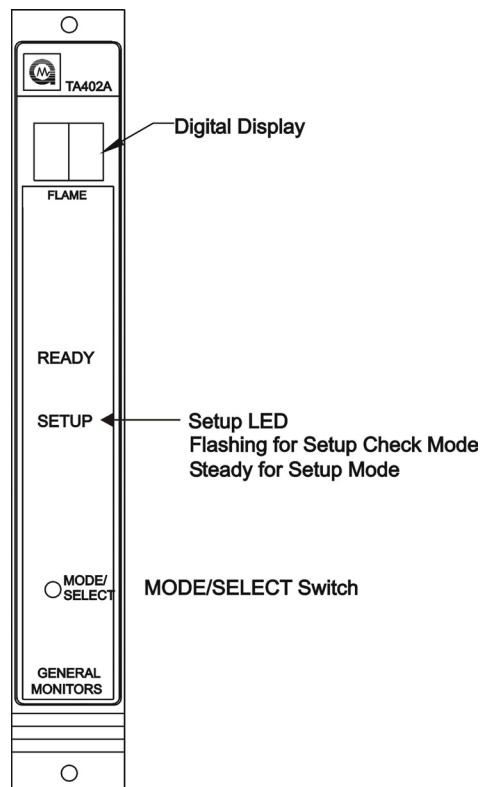


Figure 13

Entering the Setup Mode

This option applies to the **Setup Mode** only:

- If the password option is enabled, the right digit of the display will be blank and a (-) will appear in the left digit on the display (Figure 14). Press the **Mode/Select** switch until the first number of your password is displayed, and then wait about five seconds.
- The left digit of the display will then blank out and a bar (-) will appear in the right digit on the display (Figure 14). Press the **Mode/Select** switch until your correct password number is displayed, then wait about five seconds. If the password is correct the unit will proceed to the inhibit option. If the password is incorrect the user will not be able to proceed and the unit will return to the normal operating mode. Once in the operating mode the user may attempt to re-enter the **Setup Mode**. The factory default password is **00**.

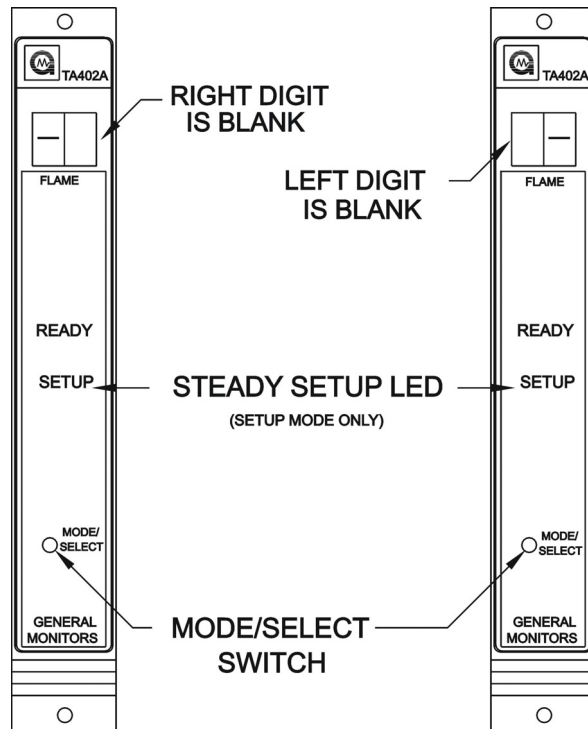


Figure 14

Entering the Inhibit Mode

This option applies to the Setup Mode only:

- If the password option is disabled, or after the correct password has been entered, the display will indicate **In** for five seconds (Figure 15). Pressing the **Mode/Select** switch while **In** is displayed, will cause the unit to enter the **Inhibit** mode by inhibiting the alarm outputs. After the Model TA402A has entered the Inhibit mode, pressing the Mode/Select switch causes the unit to return to normal operation (see section 5.3). If it is desired to enter the **Setup** Mode, do not press the **Mode/Select** switch for the five seconds that **In** is displayed.

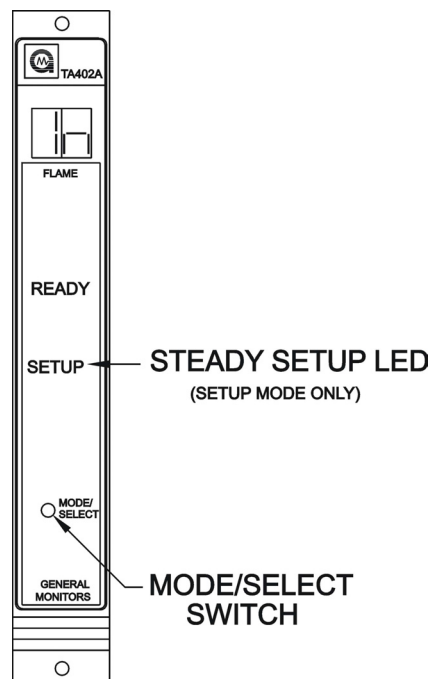


Figure 15

A2 Alarm Options

After the Inhibit mode option, the **A2** LED on the front panel will be flashing while the Energized/De-Energized option is displayed (Figure 16). The display will indicate the current selection, (**En** or **dE**). Press the **Mode/Select** Switch until the desired option is displayed. **De-Energized** is the factory default for this selection.

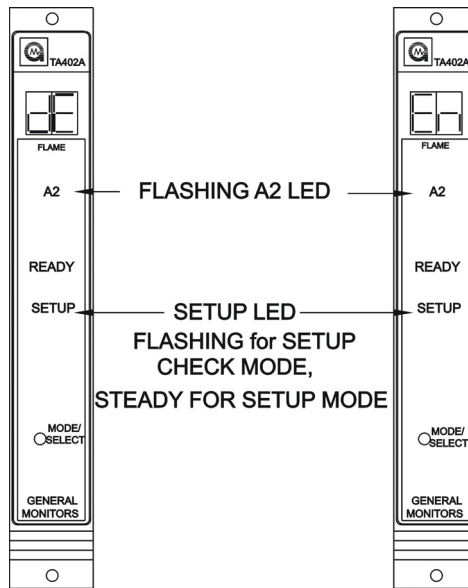


Figure 16

The **A2** LED on the front panel will be flashing while the latching/non-latching option is displayed (Figure 17). The display will indicate the current selection, (**nL** or **LA**). Press the **Mode/Select** Switch until the desired option is displayed. **Latching** is the factory default for this selection.

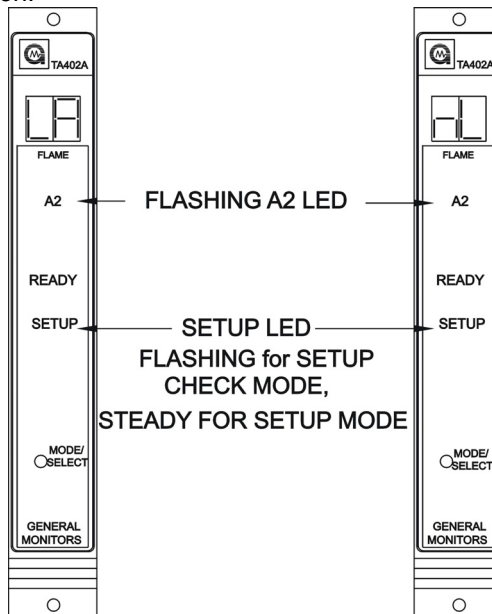


Figure 17

The last A2 alarm option to appear on the display will be the alarm time delay. If the A1 Alarm is activated continuously for the amount of time specified by this option the A2 alarm outputs will activate. The display will indicate the current A2 alarm time delay in seconds (figure 18). Press the Mode/Select switch repeatedly, until the desired A2 alarm time delay (1,2,4, or 8 seconds) appears on the display, **4** is the factory default for this selection.

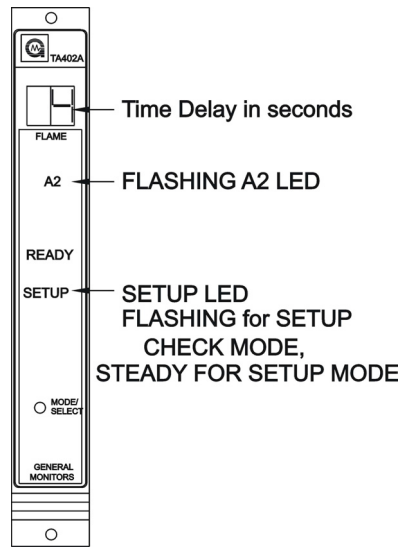


Figure 18

Next, the **A1** LED on the front panel will be flashing while the Energized/De-energized option is displayed (Figure 19). The display will indicate the current selection, (**En** or **dE**). Press the **Mode/Select** Switch until the desired option is displayed. **De-Energized** is the factory default for this selection.

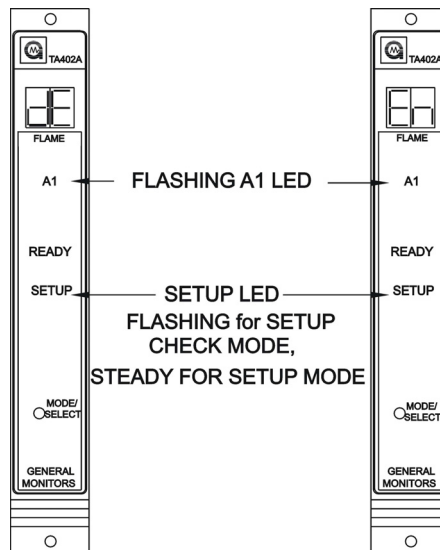


Figure 19

The **A1** LED on the front panel will be flashing while the latching/non-latching option is displayed (Figure 20). The display will indicate the current selection, (**nL** or **LA**). Press the **Mode/Select** Switch to toggle the selection. **Non-Latching** is the factory default for this selection.

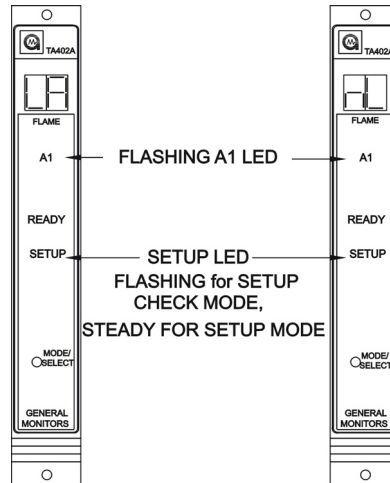


Figure 20

Fault/Inhibit Option

After the A1 alarm options have been selected, the user will select the Fault/Inhibit option. The **FAULT** LED on the front panel will be flashing while the display indicates **Ac** or **nA** (Figure 21). An **Ac** selection specifies that the Model TA402A will activate the **Fault** circuit while the unit is in the Inhibit Mode. A **nA** selection specifies that the Model TA402A will not activate its **Fault** circuit when the unit is placed in the **Inhibit** Mode (see section 5.3). A **nA** selection will not disable the **Fault** circuit, therefore, if a **Fault** occurs during the **Inhibit** Mode, the unit will activate the **Fault** circuit. **Not Active** is the factory default for this selection.

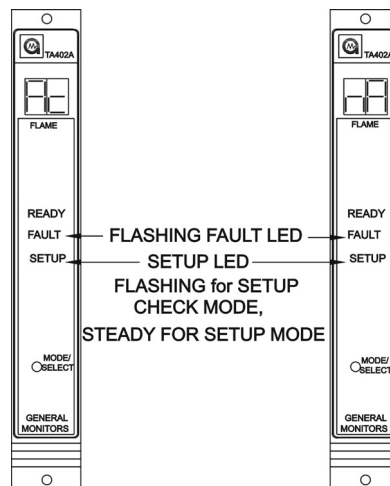


Figure 21

Card Test Options

After the **Fault/Inhibit** option has been selected, the user will select whether or not the alarm outputs will activate during a Card Test. The display will indicate **ct** for about five seconds (figure 22).

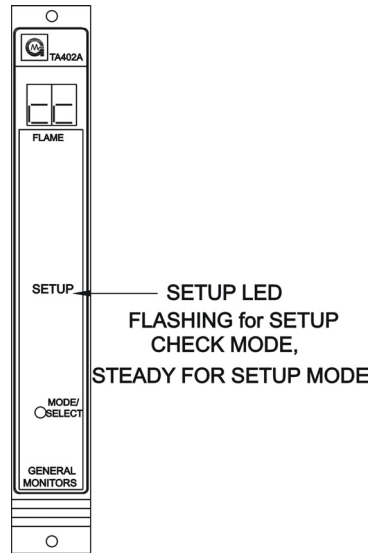


Figure 22

Following **ct**, the display will indicate the alarm output option during a Card Test as either **Ac**, active or **nA**, not active (figure 23). Press the Mode/Select switch until the desired option is displayed. Not Active is the factory default for this selection.

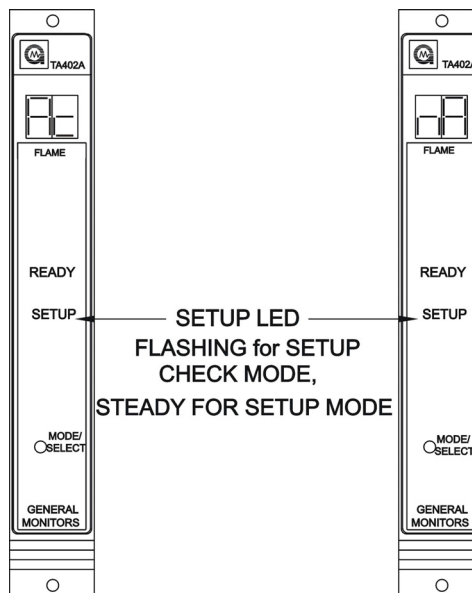


Figure 23

Password Option

Once the Card Test options have been selected, the user will either enable or disable the password option (Figure 24). The display will indicate either PE, for enabled or Pd, for disabled. Password Disabled is the factory default for this selection.

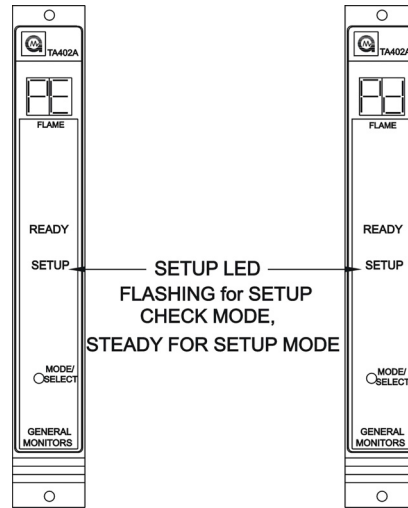


Figure 24

Entering a New Password

This option applies to the **Setup Mode** only: If the Password is disabled, the unit automatically enter the setup check mode. If the Password is enabled, the user will be able to enter a new password. The unit will display the left digit of the Password on the display. The right digit will be blank until the left digit has been selected, wait for five seconds. Next, the right digit will be displayed and the left digit will be blank until the right digit has been selected. Once the right digit has been selected, wait for five seconds (figure 25).

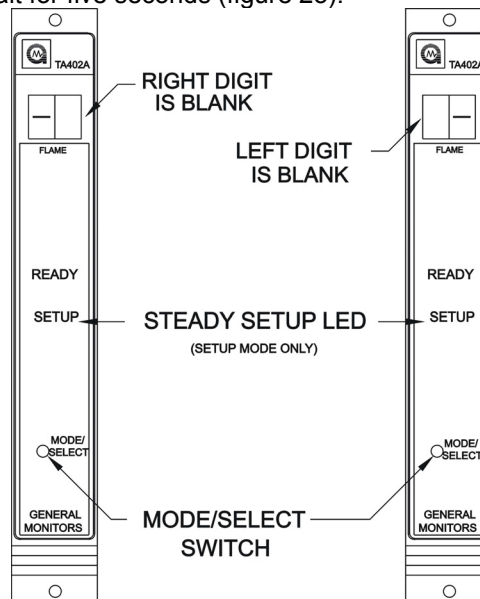


Figure 25

When the Setup Mode is complete, the Model TA402A will automatically enter the Setup Check Mode. This allows the operator to view the newly selected options. The unit will return to normal operation after completing the Setup Mode and the Setup Check Mode.

5.3 Inhibit Mode

Whenever the **Inhibit** Mode is entered (see section 5.2), the **A1** and **A2** rear terminal alarm outputs are inhibited. The front panel A1 and A2 LED's will still function normally in cases where sufficient UV/IR radiation is present. If the password option is disabled, or after the correct password has been entered, the display will indicate **In** for five seconds (figure 15 on page 19). Pressing the Mode/Select switch while **In** is displayed, will cause the unit to enter the Inhibit mode by inhibiting the alarm outputs. After the Model TA402A has entered the Inhibit mode, pressing the Mode/Select switch causes the unit to return to normal operation. If it is desired to enter the Setup Mode, do not press the Mode/Select switch for the five seconds that **In** is displayed.

NOTE - Any latched alarms must be reset before exiting the **Inhibit** Mode.

There is a user selectable option that will place the unit in **Fault** every time the **Inhibit** Mode is entered. If the user does not select this option, the **Fault** circuit will function normally during the **Inhibit** Mode.

While the unit is in the **Inhibit** Mode, the display will indicate **IN** for 5 seconds, then be blank for 5 seconds. This sequence will repeat for as long as the unit is in the Inhibit mode.

The **Inhibit** Mode is provided so that the operation of the Model TA402A can be verified without tripping external devices that are connected to the **A1** and **A2** outputs. This type of verification usually occurs during "Initial Start-Up" and/or "Commissioning"

6.0 Detector Assembly/Accessories

This chapter provides a description of the flame detectors and the accessories, that can be used with them.



WARNING - Installation and Maintenance must be carried out by suitably skilled and competent personnel only.

6.1 Flame Detectors

There are 3 Flame Detectors designed for use with the Model TA402A. Each detector has unique features and advantages:

FL3100 UV/IR Flame Detector

The FL3100 (Figure 26) has a very high degree of discrimination when it comes to identifying UV and IR radiation sources. Only the correct combination of each type of radiation will signal a fire.



Figure 26

FL3101 UV Flame Detector

The FL3101 (Figure 27) has been optimized for speed of response. Typical response times are less than 1 second for 1 square foot fires within the field of view of this detector.



Figure 27

FL3112 Enhanced IR Flame Detector

The FL3112 (Figure 28) can see fires through thick or heavy smoke. The optics on this detector are not easily obstructed by grease on the lenses or air borne particles/debris.



Figure 28

6.2 UV Phototube

The UV phototube is used in the Models FL3100, FL3101. This phototube responds to UV radiation within a range of 185nm to 260nm (wavelength). The shortest wavelength of energy from the Sun (figure 29) that reaches the Earth's surface is about 300nm. Therefore, the UV phototube will not respond to energy from sunlight.

6.3 Pyroelectric Device

The pyroelectric device is used in the Models FL3100. This device responds to a change in IR radiation with a wavelength centered on 4.3 microns (figure 29). The circuit using the pyroelectric device in the detector is designed such that the "flicker rate" of IR radiation from a flame can be compared with the known "flicker rate" of fire.

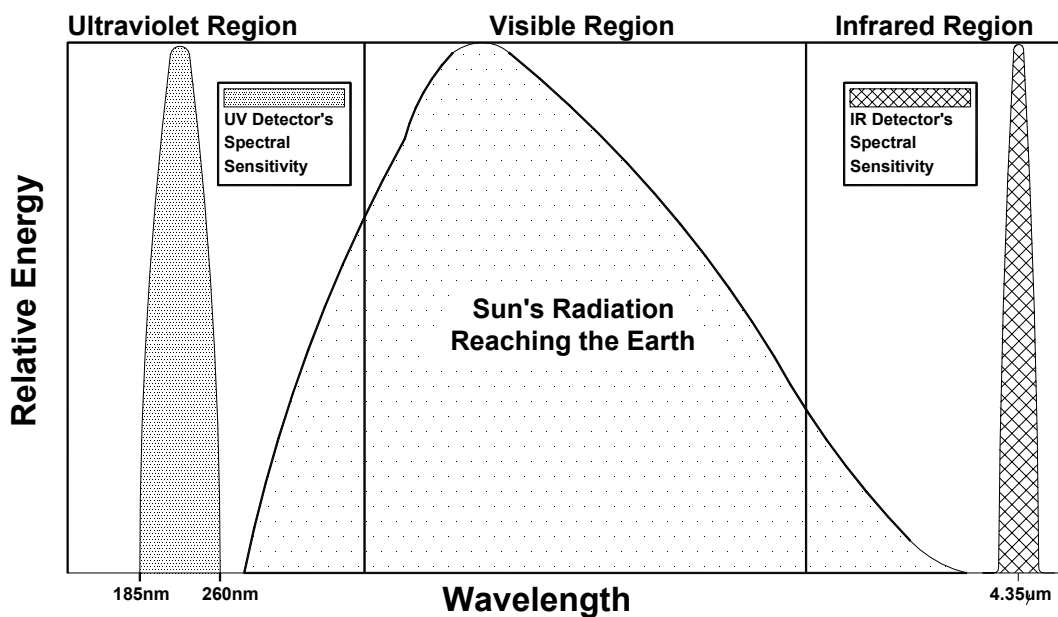


Figure 29



6.4 Test Lamp

The General Monitors TL103 Test Lamp is a battery operated, rechargeable test source specifically designed to test source specifically designed to test General Monitors Flame Detectors. This test Lamp consists of a high-energy broadband radiation source which emits sufficient energy in both ultraviolet and infrared spectra to activate UV, UV/IR and/or IR Flame Detection Systems. To simulate a fire, the Test Lamp automatically flashes at one of three DIP switch selectable rates.

The Test Lamp operates on internal lead-acid batteries which, when fully charged, will operate continuously for 25 to 30 minutes. An internal circuit will prevent operation when the batteries are low.

It is always important to start a series of TL103 checks with a fully charged unit. Stand 15-20 feet (for the FL3100 & FL3101) or within 10 feet (for the FL3112) of the unit to be tested. Aim the TL103 directly into the detector face squarely. If the system is operating normally, the detector will go into a WARNing (A1 alarm) condition after a few flashes. If the Lamp remains ON for the time-delayed period, the detector will go into ALARM.

To conserve the charge, do not operate the Test Lamp longer than is necessary to test each detector. When the batteries are low the Test Lamp will shut off until the batteries have been recharged.

Recharging must be carried out in a non-hazardous area. The charging receptacle is located inside the house, under the knurled plug. To recharge the batteries, insert the charging plug into an outlet and removed the knurled plug located next to the ON button. It is recommended that the TL103 be kept on charge when not in use to prevent excessive battery discharge. The batteries may be recharge an average of 500 times and the battery pack is replaceable.

6.5 Air Guard

General Monitors have designed an air guard which fits over GM Flame Detectors to prevent particulate matter from blocking windows. Connected to an air line on site, the guard prevents matter such as dust, paint etc. from reaching the windows on the detectors.

Contact General Monitors for details.

Glossary of Terms

AC – Alternating Current

Analogue – Continuous, without steps.

Ambient Temperature – Surrounding or background Temperature

AWG – American Wire Gauge

Canadian Standards Association – CSA is an approval agency. Testing laboratories will test Gas Detection Instruments to the standards set by approval agencies such as CSA. CSA certification is required for selling such equipment in Canada. CSA standards are recognized by many organizations outside Canada.

Class I, Division 1 – This is a National Electric Code (NEC)(in North America) classification dealing with hazardous locations and the degree with which the hazard is present. Class I, Division 1 is defined as any location where ignitable concentrations of flammable gases or vapours may be present under normal operating conditions. For more information on hazardous locations, refer to the NEC Handbook, Article 500.

COM – Common

Conduit – Tubing, piping or a protected trough for electrical wires.

DC – Direct Current

DCS – Distributed Controls System.

Digital – Stepped in specific increments.

Drain Loop – The purpose of a drain loop is to collect condensation so as to prevent moisture from entering the housing.

EEPROM – Electrically Erasable Programmable Read Only Memory.

EMI – Electro-Magnetic Interference

Flicker Rate – The rate at which the intensity of IR radiation from a fire changes or modulates.

FMRC – Factory Mutual Research Corporation

Group B – Atmospheres containing more than 30% Hydrogen or gases/vapours of equivalent hazard.

Group C – Atmospheres such as cyclopropane, ethyl ether, ethylene, or gases/vapours of equivalent hazard.

Group D – Atmospheres such as acetone, ammonia, benzene, butane, ethanol, gasoline, hexane, methanol, methane, natural gas, naphtha, propane, or gases/vapours of equivalent hazard.

Halogen Free Solvent – Solvent that does not contain any of the following: astatine, bromine, chlorine, fluorine, or iodine.

IR Radiation – Infrared Radiation. Energy with wavelengths longer than the red end of the visible spectrum but shorter than radio waves.

Latching – Holding on to. Latching Alarms require manual resetting.

mA – Milliampere, one thousandth (.001) of an amp.

Microprocessor Base Electronics – All of the input signal processing, fault monitoring, calibrating routines, setup routines, and the outputs are under the control of a microprocessor unit (MPU)

MV – Millivolt, one thousandth of a volt.

PCB – Printed Circuit Board

PLC – Programmable Logic Controller

RFI – Radio Frequency Interference

TB – Terminal Block


UV Radiation – Ultraviolet Radiation. Energy with wavelengths shorter than the violet end of the visible spectrum but longer than X-Rays.

Zone 1 – European Protection Concept. An explosive gas/air mixture is likely to occur in normal operation. General Monitors Flame Detectors are certified as Exd.



Engineering Documentation

Outline & Terminal Connections

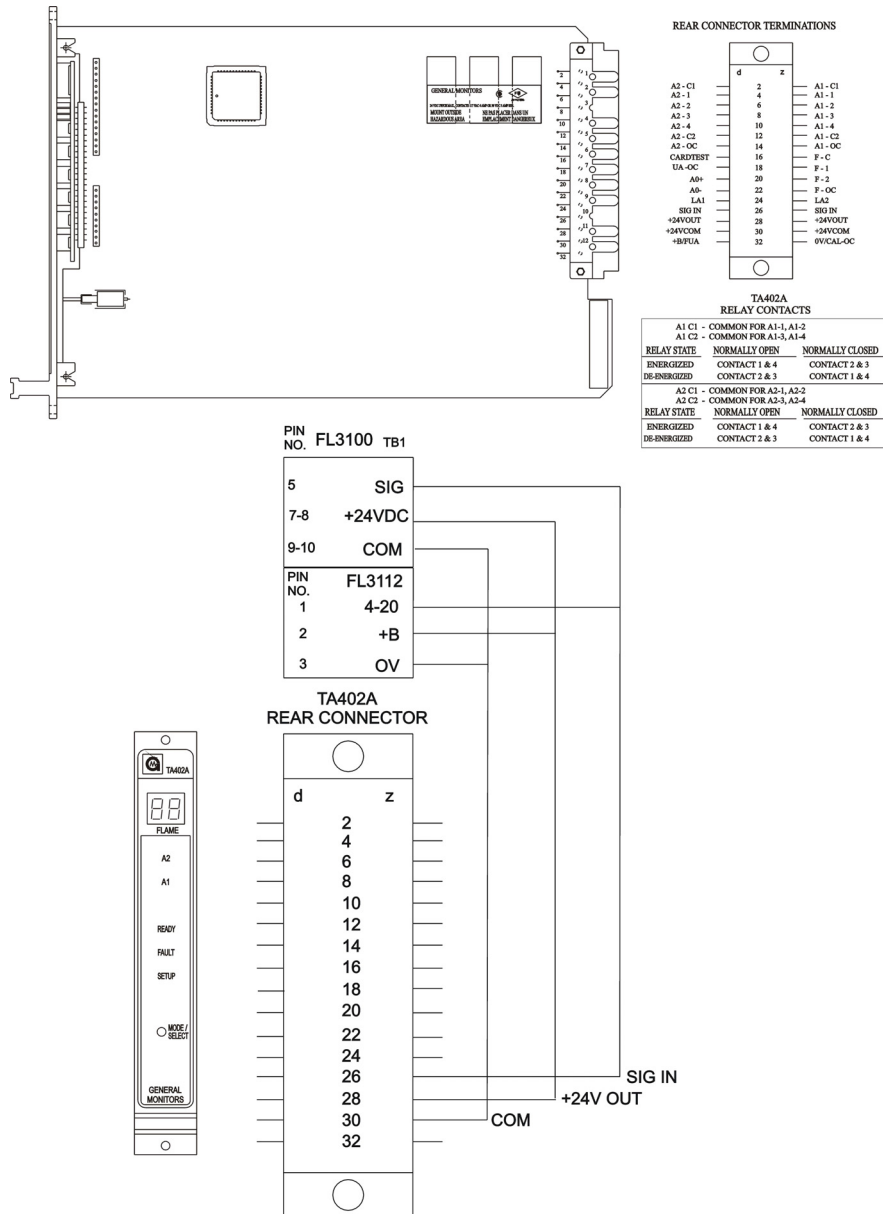

3 CONDUCTOR CABLE - DO NOT SPLICE CABLE UNLESS NECESSARY. ALL SPLICES MUST BE TIGHT AND SOLDERED.

Figure 30

Final Assembly Drawing

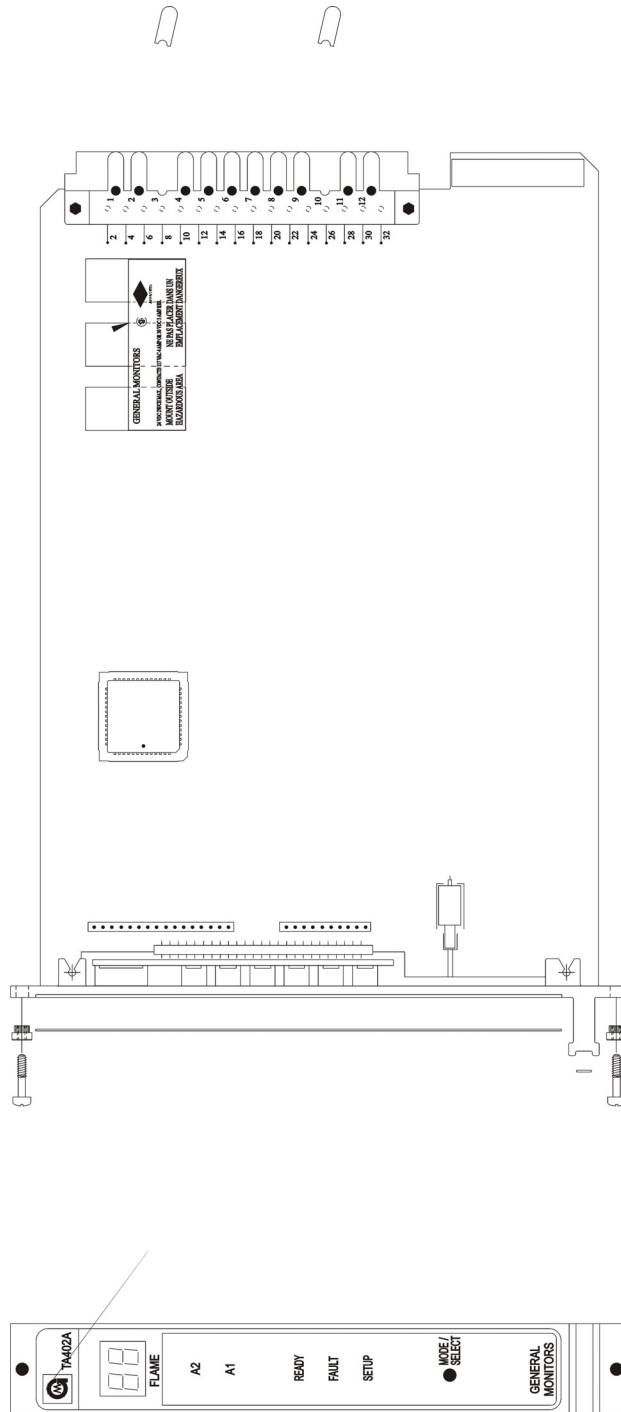


Figure 31

Zero Two Series Modules

Model 2602A

Zero Two Series Control Module for Hydrogen Sulfide Gas Applications

Model 4802A

Zero Two Series Control Module for Combustible Gas Applications

Model TA102A

Zero Two Series Trip Amplifier Module for Combustible Gas Applications

Model TA202A

Zero Two Series Trip Amplifier Module for Hydrogen Sulfide Gas Applications

Model TA402A

Zero Two Series Trip Amplifier Module for Flame Detection Applications

Model TA502A – 3 DIGIT

Zero Two Series 3 Digit A flexible multipurpose module for a variety of GM products.

Model FM002A

Zero Two Series Facilities Module Performs Common Functions for Zero Two Systems

Model RL002*

Zero Two Series Relay Module Provides Extra Output Capacity for Zero Two Systems

Model ZN002A

Zero Two Series Zone Control Module Performs Zoning and Voting Functions for Zero Two Systems

Model MD002

Zero Two Series Driver Card for Monitoring / Driving High-Current Output Devices

Model IN042

Zero Two Series Four Zone Input Card for Callpoints, Smoke & Thermal Detectors

Model PS002*

Zero Two Series Power Supply Module for Zero Two Systems

* = Non-European Countries Only.



Customer Satisfaction Questionnaire

Attention Field Operations:

We would appreciate your help in assessing and thus improving the quality of our Equipment and Service and would therefore be grateful if you would complete the Questionnaire below and return it to:

General Monitors Ireland Ltd,
Ballybrit Business Park,
Galway,
Republic of Ireland.

Thank you for your assistance



Client _____

Client Order No. _____

General Monitors Sales Order No. _____

(Please tick appropriate box)

Yes

No

- | | | |
|------------------------------------------------------------------------------|--------------------------|--------------------------|
| 1. Was the equipment the correct option? | <input type="checkbox"/> | <input type="checkbox"/> |
| 2. Are sensors correct type and range? | <input type="checkbox"/> | <input type="checkbox"/> |
| 3. Is mechanical assembly good?
(everything proper fit and tight) | <input type="checkbox"/> | <input type="checkbox"/> |
| 4. Did you receive the necessary accessories
to commission the equipment? | <input type="checkbox"/> | <input type="checkbox"/> |
| 5. Has the equipment been commissioned? | <input type="checkbox"/> | <input type="checkbox"/> |
| 6. Any problems encountered during commissioning? | <input type="checkbox"/> | <input type="checkbox"/> |
| 7. Is the equipment functioning correctly at present? | <input type="checkbox"/> | <input type="checkbox"/> |

If you have answered **NO** to any of the above, please provide further details overleaf. **Thank you.**

Completed by: _____

Date: _____