



MINE SAFETY APPLIANCES COMPANY Pittsburgh, Pennsylvania, USA 1-800-672-2222

TRANSAIRE 5 AND TRANSAIRE 10 Escape, Open-Circuit, Continuous-Flow, Self-Contained Breathing Apparatus

THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS:

THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS: RESPIRATOR COMPONENTS													
TC-	PROTECTION ¹		RRIER SSY.	ALT. CYL. & VALVE ASSY.				ALTERNATE HOOD ASSEMBLY			REGULATOR	SHOULDER STRAP	CAUTIONS AND LIMITATIONS ²
		10006294 CARRIER ASSEMBLY NYLON , 8 CU FT. 5 MIN.	10006295 CARRIER ASSEMBLY NYLON, 15 CU. FT. 10 MIN.	10006298 CYLINDER & VALVE ASSY, ALUMINUM 5 MIN.	10006299 CYLINDER & VALVE ASSY, ALUMINUM 10 MIN.	484346 CYLINDER & VALVE ASSY, COMPOSITE 10 MIN.	10042423 CYLINDER & VALVE ASSY, 17.0 SCF, 3000 PSI, CARBON, 10 MIN.	484351 HOOD ASSY., POLYURETHANE, STANDARD	10008302 HOOD ASSY., POLYURETHANE, DRAWSTRING	485046 HOOD ASSY., STANDARD, TEFLON	10006296 REGULATOR ASSEMBLY, BRASS	474929 SHOULDER STRAP	
	SC/CF/ESC/5min 2216psig	Х		Х				Х	Х	Х	Х	Х	JMNOS
13F-446	SC/CF/ESC/10min 3000psig		Х		Χ	Х	Х	Χ	Χ	Х	Х	Χ	JMNOS

1. PROTECTION

SC - Self Contained CF - Continuous Flow ESC - Escape

2. CAUTIONS AND LIMITATIONS

- J Failure to properly use and maintain this product could result in injury or death.
- M All approved respirators shall be selected, fitted, used and maintained in accordance with MSHA, OSHA, and other applicable regulations
- N Never substitute, modify, add or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.
- O Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
- S Special or critical user's instructions and/or specific use limitations apply. Refer to User's Instructions before donning.

CONTROL BOX
Mat: '10009334
Doc: 10000018993
REV 13 5/18/07
TRANSAIRE 5 & 10 RESP FAMILY
TAL 6-8-07