

Ultima® XIR Gas Monitor Quick Start-Up Guide

A WARNING

This Guide is not a substitute for the manual contained in the Product Literature CD. The Ultima X Series Gas Monitor Manual must be carefully read by all individuals who have or will have the responsibility for using or servicing the product. Failure to follow this warning can result in serious personal injury or loss of life.

- Remove the lid and the electronics from the enclosure (FIGURE 1).
- Mount the enclosure in the desired location and run wiring to the enclosure per instructions on the enclosed Installation Outline Drawing. The XIR sensor should be mounted horizontally as shown in FIGURE 1.
- Connect 8 to 30 VDC power lead to J8-1 (FIGURE 2).
- 4. Connect the signal ground wire to J8-3.
- 5. Connect J8-2 to the 4 20 mA input on remote system.
- 6. Connect the sensor module to J-1 on the main pc board.
- 7. Wire for optional acknowledge push-button (J10) and/or optional relays (FIGURE 3).
- 8. Connect the optional HART barrier to J9 (FIGURE 3).
- Assemble the electronics assembly and the lid on the enclosure.
- 10.Apply power and observe the LCD as all segments light, software version displays, and a 30-second (self-check) countdown occurs.
- 11. After 30-second countdown, observe that the gas type and gas concentration alternately display. (For units with LEDs, green LED is ON and red LED is OFF).
- 12. Perform a gas check to ensure proper operation.

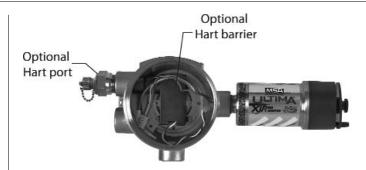


Figure 1

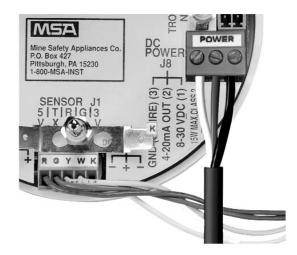


Figure 2

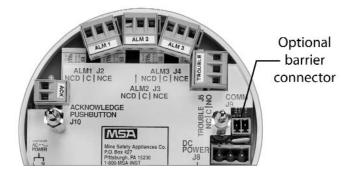


Figure 3