




1. Connect the alphaTAG writer to the Computer

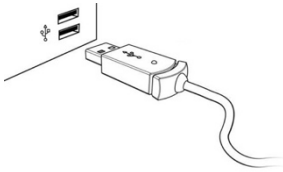


2. Change to alphaLINK module

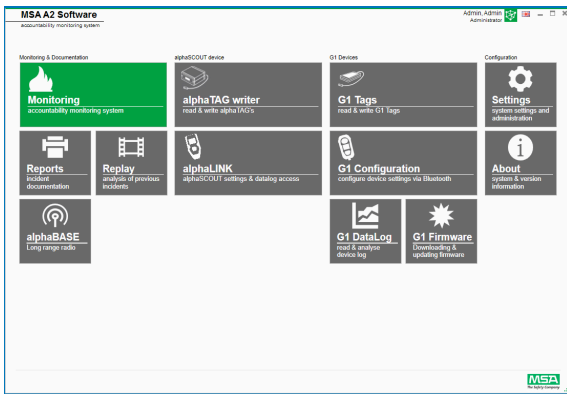

3. Press green button on alphaSCOUT until Data displayed

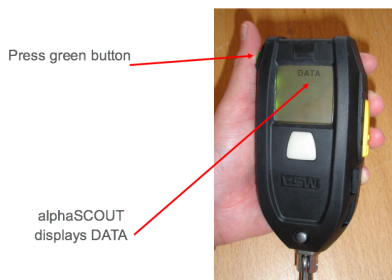

 4. Press read out button on Software



Read firmware settings (depending on the installed firmware, some features might not be displayed)

5. Firmware information is displayed on the left side

