

contigo®

Stainless Steel Kids' Bottle Care and Use Instructions

⚠ CAUTION

- Not for use with hot, carbonated, pulpy, or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use product if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.

 
 
 
USAGE RECOMMENDATIONS:

- Removable spout unscrews from body for easy cleaning and adding ice cubes.



CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- RINSE IMMEDIATELY AFTER EACH USE with warm water.
- Lid and any UNPAINTED body are top-rack dishwasher safe. HAND-WASH ONLY any PAINTED stainless steel body.
- To wash by hand, unscrew lid and soak product for 10 minutes in hot, soapy tap water. Rinse thoroughly.
- For best cleaning results, use a Contigo® bottle brush, www.GoContigo.com.

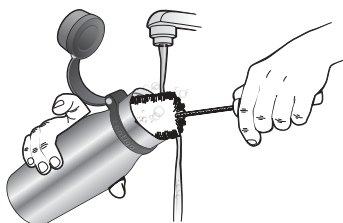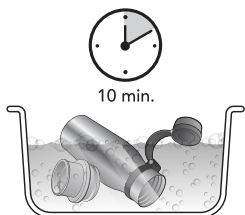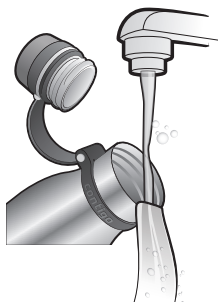

- ALWAYS STORE BOTTLE WITH LID REMOVED to allow parts to dry completely.



ADDITIONAL CLEANING TIPS

For additional product cleaning tips visit GoContigo.com.



For complete warranty information, see GoContigo.com.

www.GoContigo.com

©2016 Ignite USA, LLC. All Rights Reserved.

Should you have any questions about your purchase, please contact us at 1-888-262-0622 or GoContigo.com.

036030-04