



Movie Screen

Installation Instructions for
Movie screen

Tools Needed

- Tape Measure
- Safety Glasses
- Safety Gloves
- Screwdriver
- Drill
- Level

Hardware Needed

- All parts included

Installation

Pre-Installation

1. Carefully unpack the screen.
2. Always handle the screen in a level position on a clean surface.
3. In order to protect the screen from exposure to stains, keep the screen away from dusty areas.
4. Mark the location of where the screen will be installed according to the item size.

Note: Never pull the screen out of casting before the screen is installed to mount at leveled position. Otherwise, damage may happen to the screen and you will void warranty.

Methods of Installation




1. Wall Mount

- The screen can be wall-mounted with the fitting provided. Use the pre drilled holes to mark the desired position on your wall, ensure that the wall is clean and free of dust prior to installation.
- Mount the screen from the key hole located on back of the screens left and right end cover.



2. Ceiling Mount

- Hanging the screen from the ceiling is another method of installation. (Does not include the fitting)

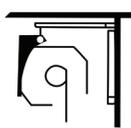

3. Tripod Mount

- The screen can also be used on the tripod (optional).

Operating Instructions

- Extending the Screen
 - Pull down the screen gently by using the handle located in the central position. Find your desired projection size and the screen will automatically lock to the position when you stop pulling down.
- Retracting the Screen
 - Pull down the screen 2 inches down to unlock it, hold the screen handle whilst it retracts itself up, only let go of the screen once it has been fully retracted.

Note: To avoid damage, be sure to retract the screen slowly. Falling to assist while retracting may damage the and tension, resulting to internal damage.

