

MARTIN®

FURNITURE

SET-UP INSTRUCTIONS FOR ITEM

IMSF3072D - LOWER DOOR BOOKCASE

info@martinfurniture.com

619-671-5100


No:	Part List	Q'TY
A	 Lower Door Bookcase	1 PC

No:	Hardware List	Q'TY
1	 Anti-Tip Hardware Kit	1 SET
2	 Metal bracket	1 PC
3	 Screws	2 PCS

Tool Required: Philip Screw Driver
(not provided)

Caution: Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment. It is recommended to use two or more people during the assembly process.



Step 3: Anti-tip hardware kit (1) must always be used to prevent the case from tipping. Attach anti-tip restraint at top of the bookcase inline to meet attachment on wall. Screw anti-tip into wall stud or use appropriate anchor for the type of wall if not drywall. Adjust levelers if needed.

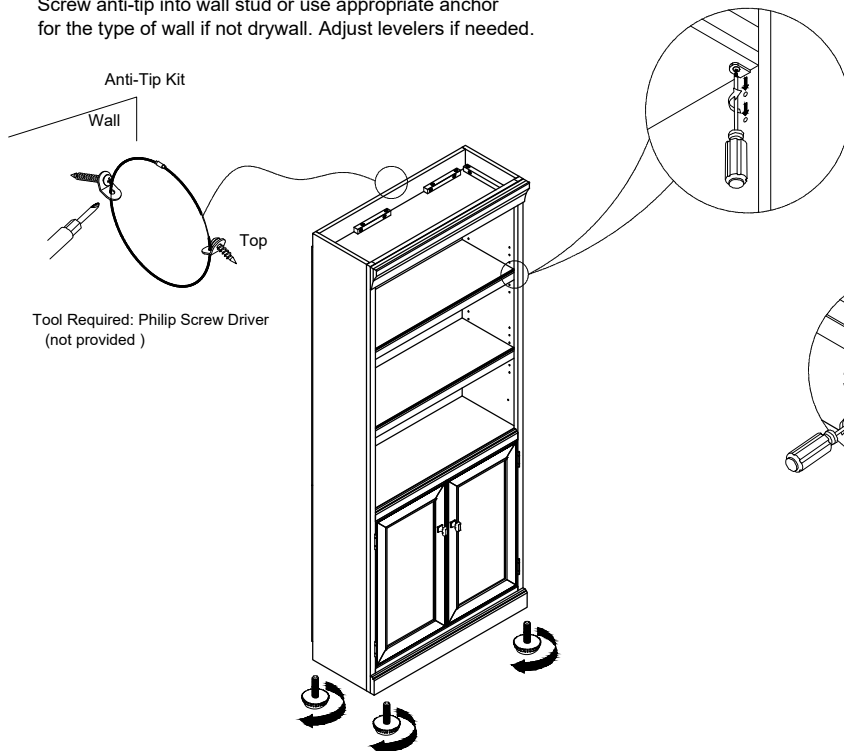

Tool Required: Philip Screw Driver
(not provided)

Step 4: Shelves are secured in place with screws through a metal shelf pin for packing and shipping. In order to adjust the shelf remove the screw with Philips head screwdriver (not included) and reposition to desired height.
Tool Required: Philip Screw Driver (not provided)

Step 5: If you purchase more than one bookcase and would like to secure them together follow this step. Align bookcases together then secure in place at the top of the bookcase with the (2) metal bracket and (3) screws as shown.

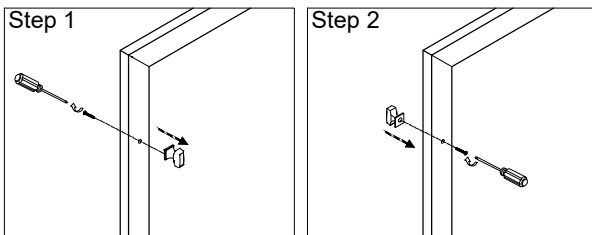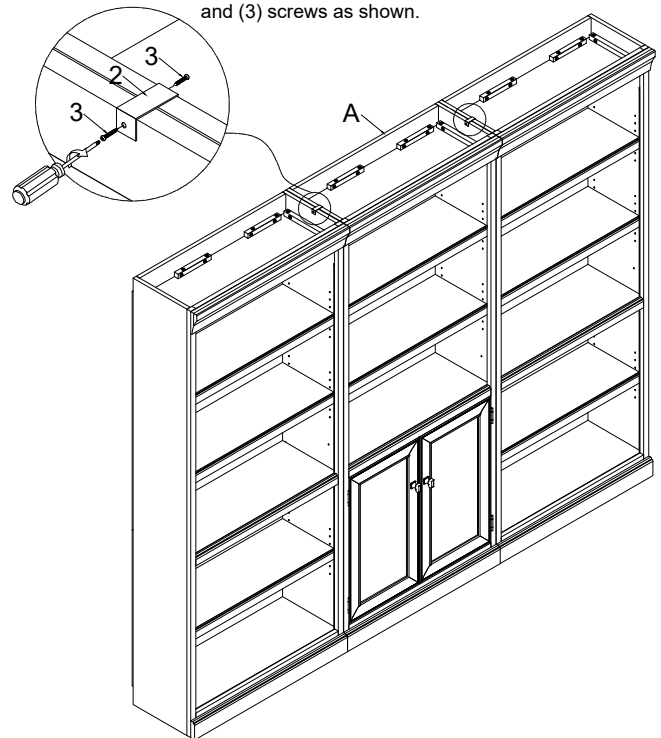

WARRANTY PROTECTION

Please register your product at MartinFurniture.com. You'll find the warranty link on the bottom of the Home Page

CARING FOR YOUR FURNITURE

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage your furniture finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Direct sunlight may damage wood finishes.
- Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled environment.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.