



 
MNDESK






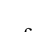 
SETUP INSTRUCTIONS

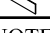

P06-INST.MNDESK

REV 070622A

TOOL REQUIRED
PHILLIPS SCREWDRIVER.

No:	Parts List MNDESK	Qty
1	 SIDE PANELS	2
2	 TOP	1
3	 MODESTY PANEL	1

No:	Parts List MNDESK	Qty
A	 BOLT	4
B	 ALLEN WRENCH	1
C	 BRACKET	8
D	 3/4" DRYWALL (BLACK) SCREW	32
E	 MOUNTING BRACKET	5
F	 3/4" DRYWALL (ZINC) SCREW	10

No:	Parts List MNDESK	Qty
G	 LEVELER	4
H	 GROMMET	2

NOTE:

- 1 - Locate the Hardware Pack.
- 2 - Once all items are removed from carton, inspect carton for any parts that may have come loose during shipment.
- 3 - Please read through the instructions before you attempt to assemble.
- 4 - It is recommended to use two people during the assembly process.

INSTRUCTIONS:

1. Unpack all from box.
 2. Place the TOP (#2) top down on soft surface (can use protective foam from packaging material)
- Fig.1.

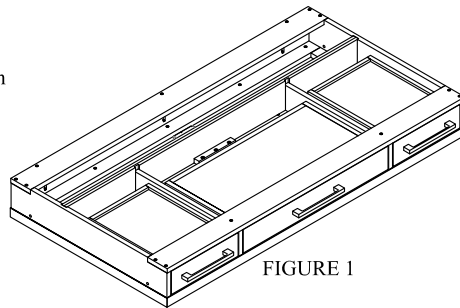


FIGURE 1

3. open the drawers to gain access to assembly points.
4. Position the SIDE PANELS. (#1)
5. Insert two BOLTS ("A") into holes and secure with ALLEN WRENCH ("B") Fig.2.

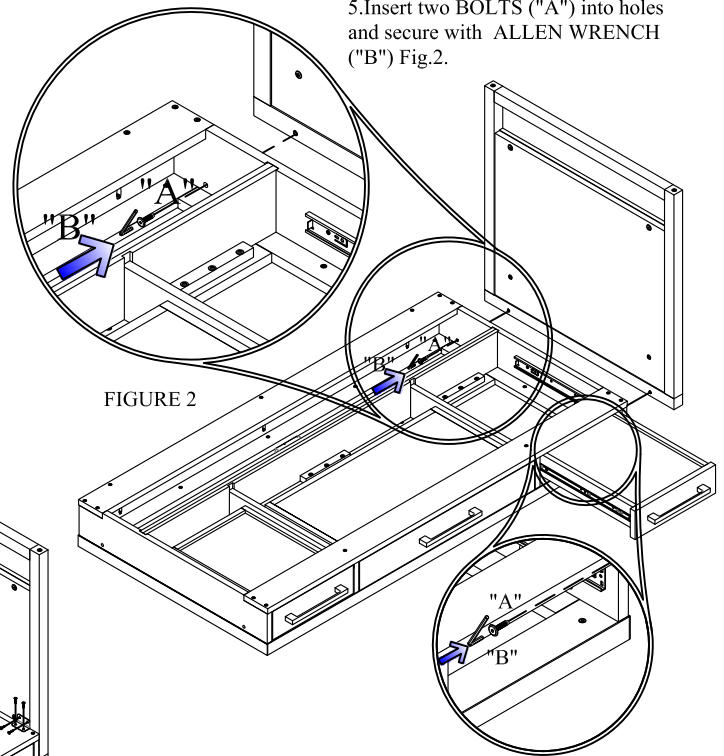


FIGURE 2

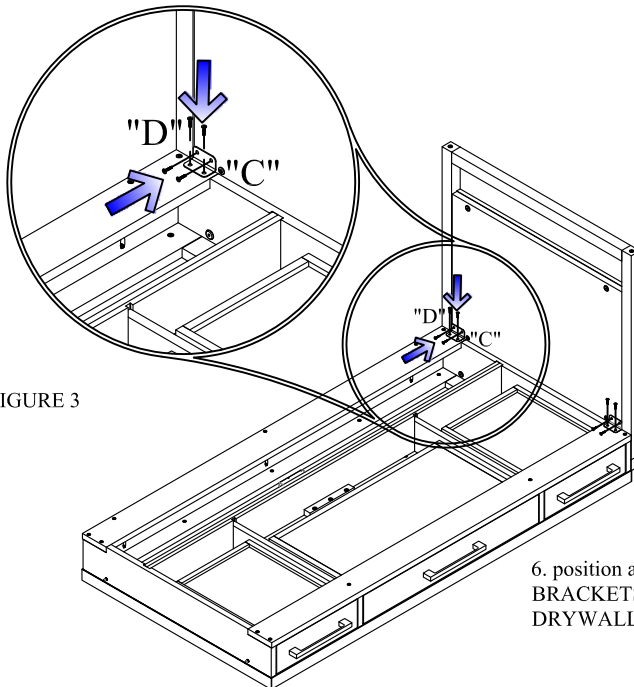


FIGURE 3

6. position and secure two BRACKETS ("C") using eight 3/4" DRYWALL SCREWS ("D") Fig.3.

CARING FOR YOUR FURNITURE:

- * Use a soft, clean cloth that not scratch the surface when dusting
- * Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- * Using solvents of any kind on your furniture may damage your furniture finish.
- * Never use water to clean your furniture as it may cause damage to the finish.
- * Always use coasters under beverage glasses and flowerpots.
- * Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- * Direct sunlight may damage wood finishes.
- * Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled environment.
- * Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- * In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

MNDESK SETUP INSTRUCTIONS

P06-INST.MNDESK

REV 070622A

7. repeat steps 5 & 6 to attach the second SIDE PANELS(#1)

8. Utilizing the remaining four BRACKETS ("C"), position MODESTY PANEL (#3) and secure with remaining 3/4" BLACK DRYWALL SCREWS ("D") as shown in Fig.4.

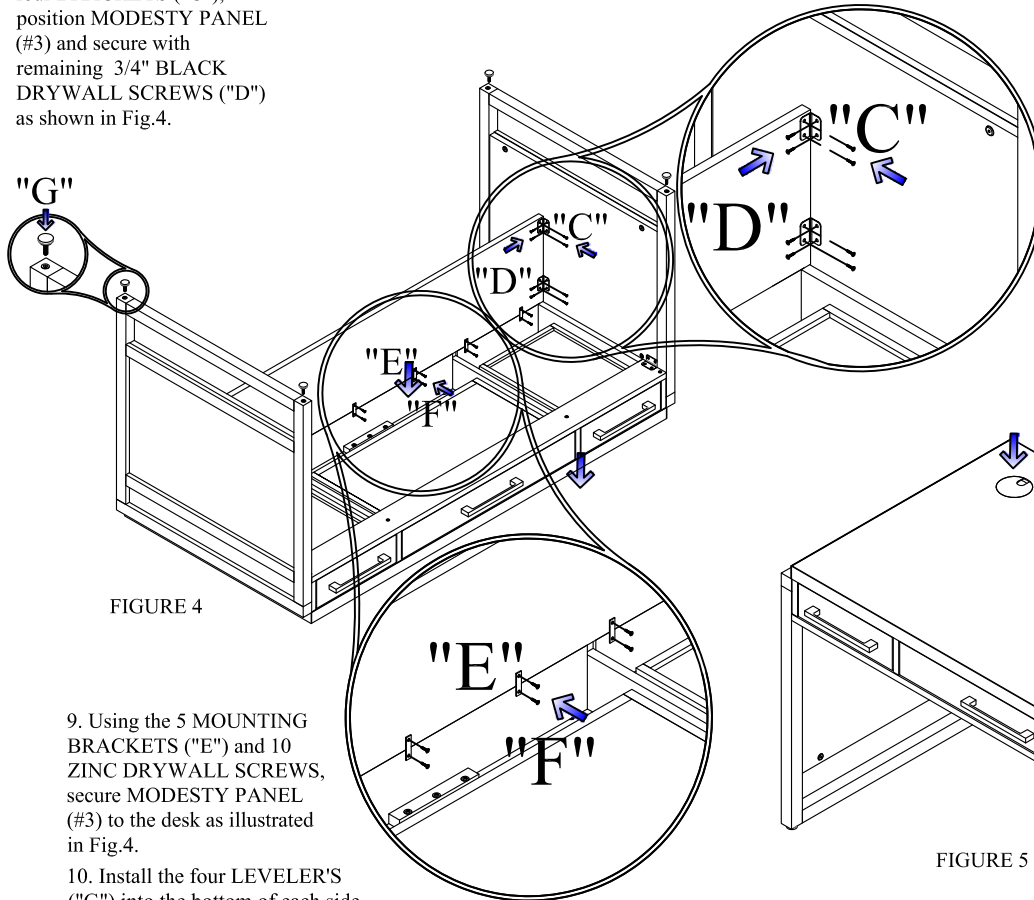


FIGURE 4

9. Using the 5 MOUNTING BRACKETS ("E") and 10 ZINC DRYWALL SCREWS, secure MODESTY PANEL (#3) to the desk as illustrated in Fig.4.

10. Install the four LEVELER'S ("G") into the bottom of each side panels.

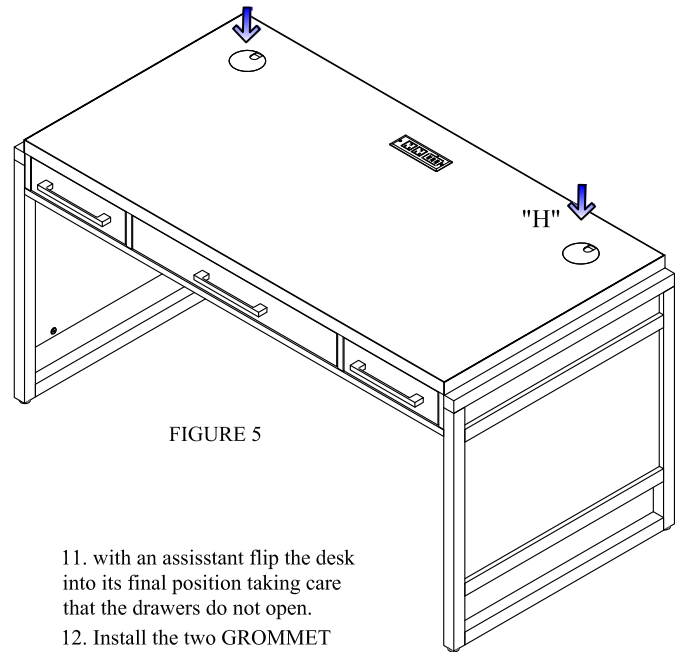


FIGURE 5

11. with an assistant flip the desk into its final position taking care that the drawers do not open.

12. Install the two GROMMET ("H") into the top Fig.5.

CARING FOR YOUR FURNITURE:

- * Use a soft, clean cloth that not scratch the surface when dusting
- * Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- * Using solvents of any kind on your furniture may damage your furniture finish.
- * Never use water to clean your furniture as it may cause damage to the finish.
- * Always use coasters under beverage glasses and flowerpots.
- * Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- * Direct sunlight may damage wood finishes.
- * Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled environment.
- * Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- * In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.