


UPWARD COLLECTION Height Adjustable Desk ASSEMBLY INSTRUCTIONS UPWARD COLLECTION Height Adjustable Desk ASSEMBLY INSTRUCTION

 
Congratulations on the purchase of your new Signature Series product!

COMPONENTS

(A) Desktop x 1	B Adj Table Frame with Lifting Columns x 1	C Foot with Leveling Glides x 2	D Top Support Bracket x 2
(SKU#: TOP7230/TOP6030/TOP4824 Separately Packed)			
E Programmable Handset x 1	(F) Cable Management Tray x 2	G Power Cord x 1	AT-CB2
			(Separately Packed)

HARDWARE & TOOLS

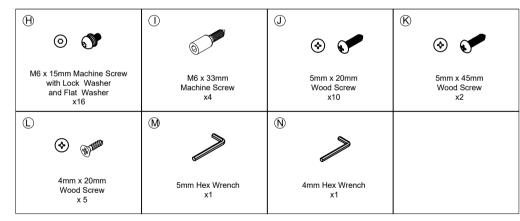




NOTE: Two-person assembly is recommended.

CAUTION ! Adjustable frame is heavy and care should be used when moving it during assembly.

NOTE: Lifting columns are pre-installed to adjustable frame and are folded down toward center of adjustable frame for shipping.

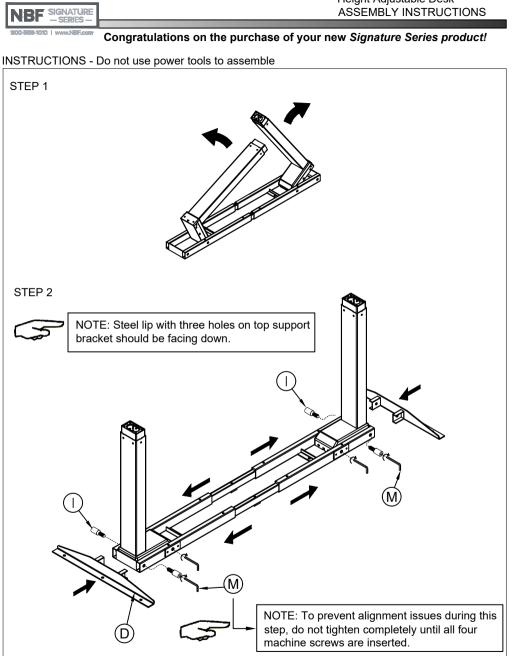

AT22



UPWARD COLLECTION Height Adjustable Desk ASSEMBLY INSTRUCTIONS

INSTRUCTIONS - Do not use power tools to assemble





NOTE: Adjustable frame is designed to fit desktops that are 48-72" long and 24-30" wide. Extend adjustable frame as needed to position desktop.

For 48 x 24" desks, top support brackets should be approximately $1\frac{1}{2}$ " from side edges of desktop and approximately $2\frac{1}{2}$ " from front and back edges of desktop.

For 60 x 30" desks, top support brackets should be approximately $1\frac{1}{2}$ " from side edges of desktop and approximately $5\frac{1}{2}$ " from front and back edges of desktop.

For 72 x 30" desks, top support brackets should be approximately 6" from side edges of desktop and approximately $5\frac{1}{2}$ " from front and back edges of desktop.

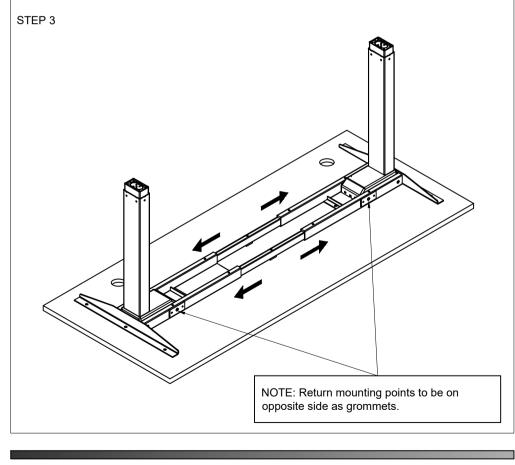

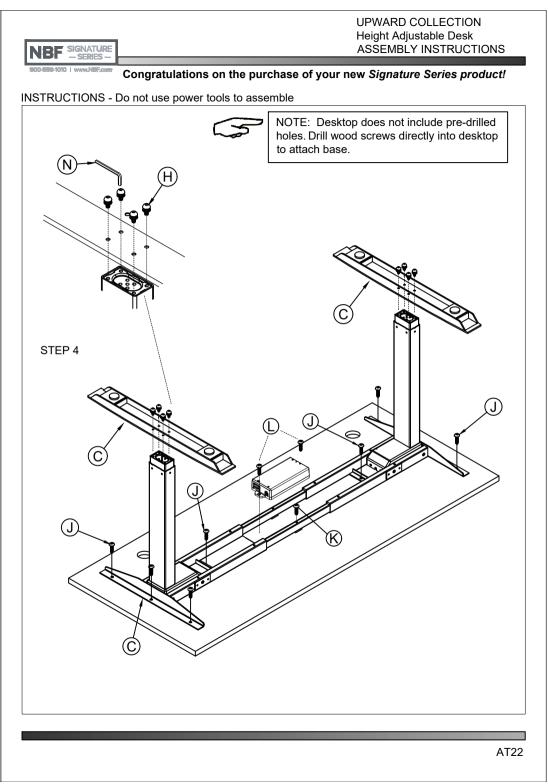




UPWARD COLLECTION Height Adjustable Desk ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!

INSTRUCTIONS - Do not use power tools to assemble

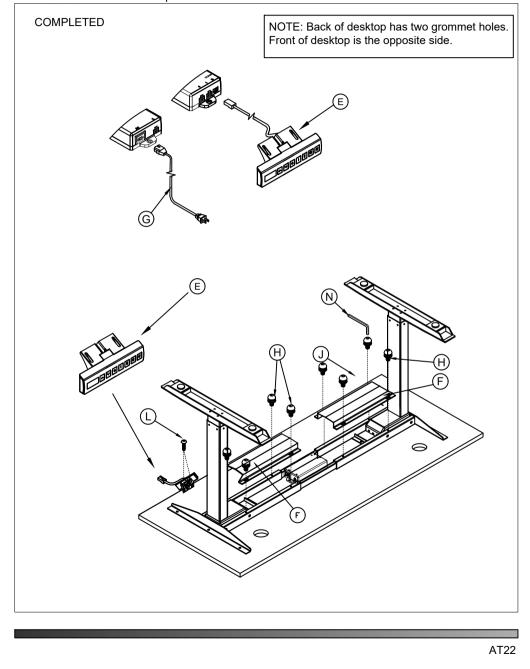



UPWARD COLLECTION Height Adjustable Desk ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!


INSTRUCTIONS



Make sure no obstacles are in the desk's path. Make sure the desktop is not touching any walls. Make sure all cords are appropriate length to accommodate the change in height.

IMPORTANT: You must INITIALIZE the desk prior to first use.

Controller Initialization- Press and hold the Down button on the controller until the desk reaches its lowest height, slightly raises, and stops. Release the down button, your desk is now ready for use. (Follow the "USER MANUALS" to use your desk)

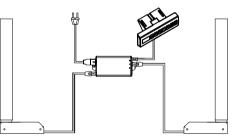

TROUBLESHOOTING

If the table is not functioning properly it may need to be reset.

Unplug the power cord for 20 seconds.

Plug the power cord back in and follow the RESET procedures.

If the error message persists after the reset procedure, please contact your dealer.

If the height between the legs exceeds 1.5 inches, stop the reset procedure, please contact your dealer.

AT22