

 
# MARTIN®

## FURNITURE

### IMUR3672DC PART LIST

No	Parts List	Qty	Part No.
A	Top Panel	1	IMUR3672DC-TP
B	Bottom Panel	1	IMUR3672DC-BP
C	Fixed Panel	1	IMUR3672DC-FP
D	Side Panel Left	1	IMUR3672DC-SPL
E	Side Panel Right	1	IMUR3672DC-SPR
F	Shelf	3	IMUR3672DC-SH
G	Top Rail	1	IMUR3672DC-TR
H	Bottom Front Rail	1	IMUR3672DC-BFR
I	Bottom Back Rail	1	IMUR3672DC-BBR
J	Back Board	1	IMUR3672DC-BB
K	Leveler Block	2	IMUR3672DC-LB
L	Door Left	1	IMUR3672DC-DL
M	Door Right	1	IMUR3672DC-DR
N	Hardware Pack	1	IMUR3672D-HP

No	Hardware Pack	Qty	Part No.
1	Camlock: Nut Ø15x15 mm	15	IM-CN15
2	Camlock: Pin Ø6x11,Ø7x28 mm	15	IM-CP6
3	Bolt M6x25 mm	8	IM-CP6
4	Screw Ø5x40 mm Flat	4	IM-D5-40F
5	Screw Ø6x25 mm Flat	4	IM-D6-25F
6	Screw Ø4x20 mm PanHead	23	IM-D4-20P
7	Screw Ø4x15 mm CSK	12	IM-D4-15C
8	Shelf Support Pin: L-Shaped	12	IM-D4-SSP
9	Leveler M6x20 mm	4	IM-LA
10	Anti-Tip Hardware	1	IM-ATH
11	Door Stopper Ø6x14,Ø8x8	2	IM-DS
12	Rubber Cap	2	IM-RC
13	Door Handle L-128	2	IMUR-DH
14	Bolt M4x17 mm	4	IM-M4-17
15	Hinge (Inset) D35	4	IM-HI35
16	Screw Ø5x15 mm	24	IM-D5-15
17	Instruction Sheet	1	IMUR3672D-AI

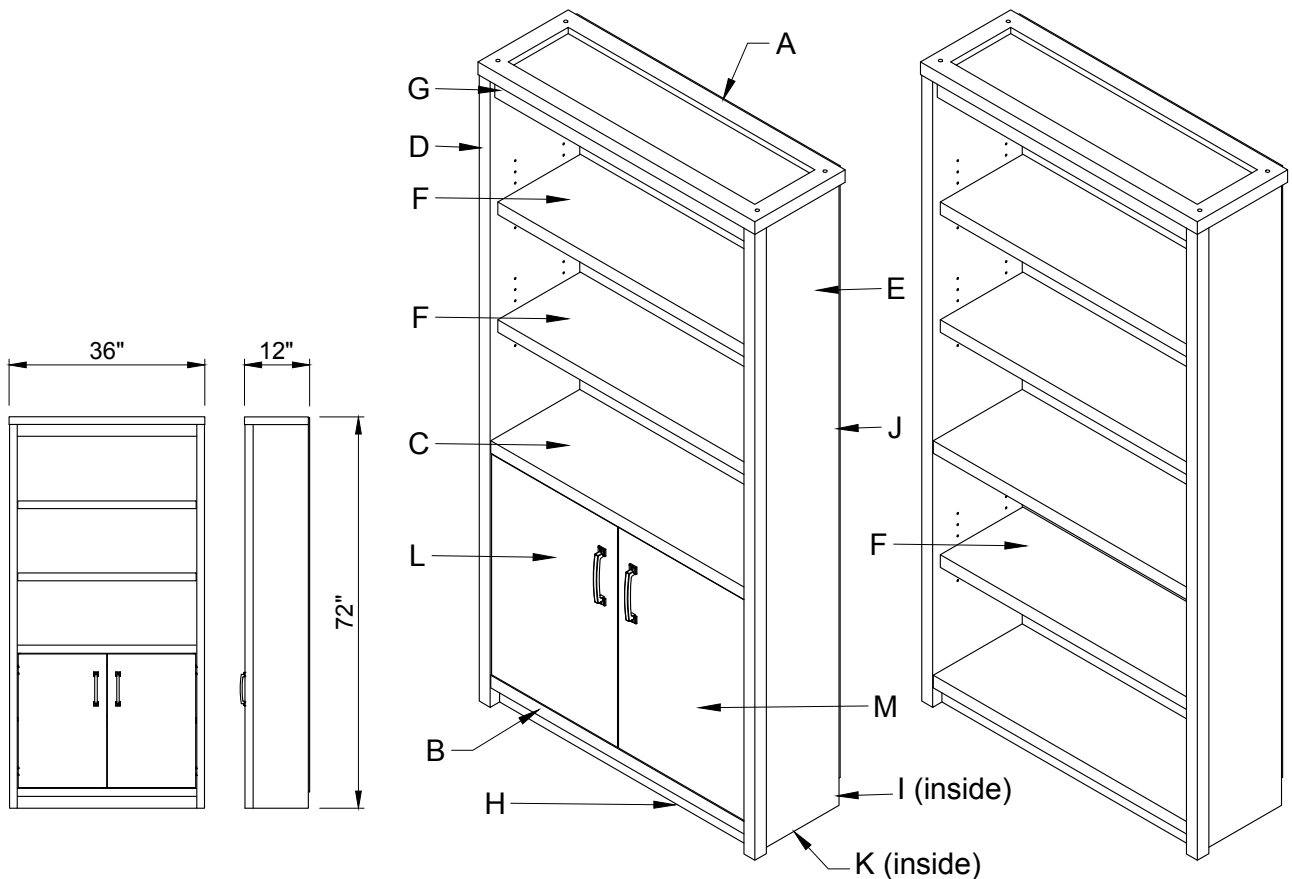

**OVERALL DIMENSIONS: 36" W X 12" D X 72" H**

 
# MARTIN®

## FURNITURE

### IMUR3672D PART LIST

No	Parts List	Qty	Part No.
A	Top Panel	1	IMUR3672D-TP
B	Bottom Panel	1	IMUR3672D-BP
C	Fixed Panel	1	IMUR3672D-FP
D	Side Panel Left	1	IMUR3672D-SPL
E	Side Panel Right	1	IMUR3672D-SPR
F	Shelf	3	IMUR3672D-SH
G	Top Rail	1	IMUR3672D-TR
H	Bottom Front Rail	1	IMUR3672D-BFR
I	Bottom Back Rail	1	IMUR3672D-BBR
J	Back Board	1	IMUR3672D-BB
K	Leveler Block	2	IMUR3672D-LB
L	Door Left	1	IMUR3672D-DL
M	Door Right	1	IMUR3672D-DR
N	Hardware Pack	1	IMUR3672D-HP

No	Hardware Pack	Qty	Part No.
1	Camlock: Nut Ø15x15 mm	15	IM-CN15
2	Camlock: Pin Ø6x11,Ø7x28 mm	15	IM-CP6
3	Bolt M6x25 mm	8	IM-CP6
4	Screw Ø5x40 mm Flat	4	IM-D5-40F
5	Screw Ø6x25 mm Flat	4	IM-D6-25F
6	Screw Ø4x20 mm PanHead	23	IM-D4-20P
7	Screw Ø4x15 mm CSK	12	IM-D4-15C
8	Shelf Support Pin: L-Shaped	12	IM-D4-SSP
9	Leveler M6x20 mm	4	IM-LA
10	Anti-Tip Hardware	1	IM-ATH
11	Door Stopper Ø6x14,Ø8x8	2	IM-DS
12	Rubber Cap	2	IM-RC
13	Door Handle L-128	2	IMUR-DH
14	Bolt M4x17 mm	4	IM-M4-17
15	Hinge (Inset) D35	4	IM-HI35
16	Screw Ø5x15 mm	24	IM-D5-15
17	Instruction Sheet	1	IMUR3672D-AI

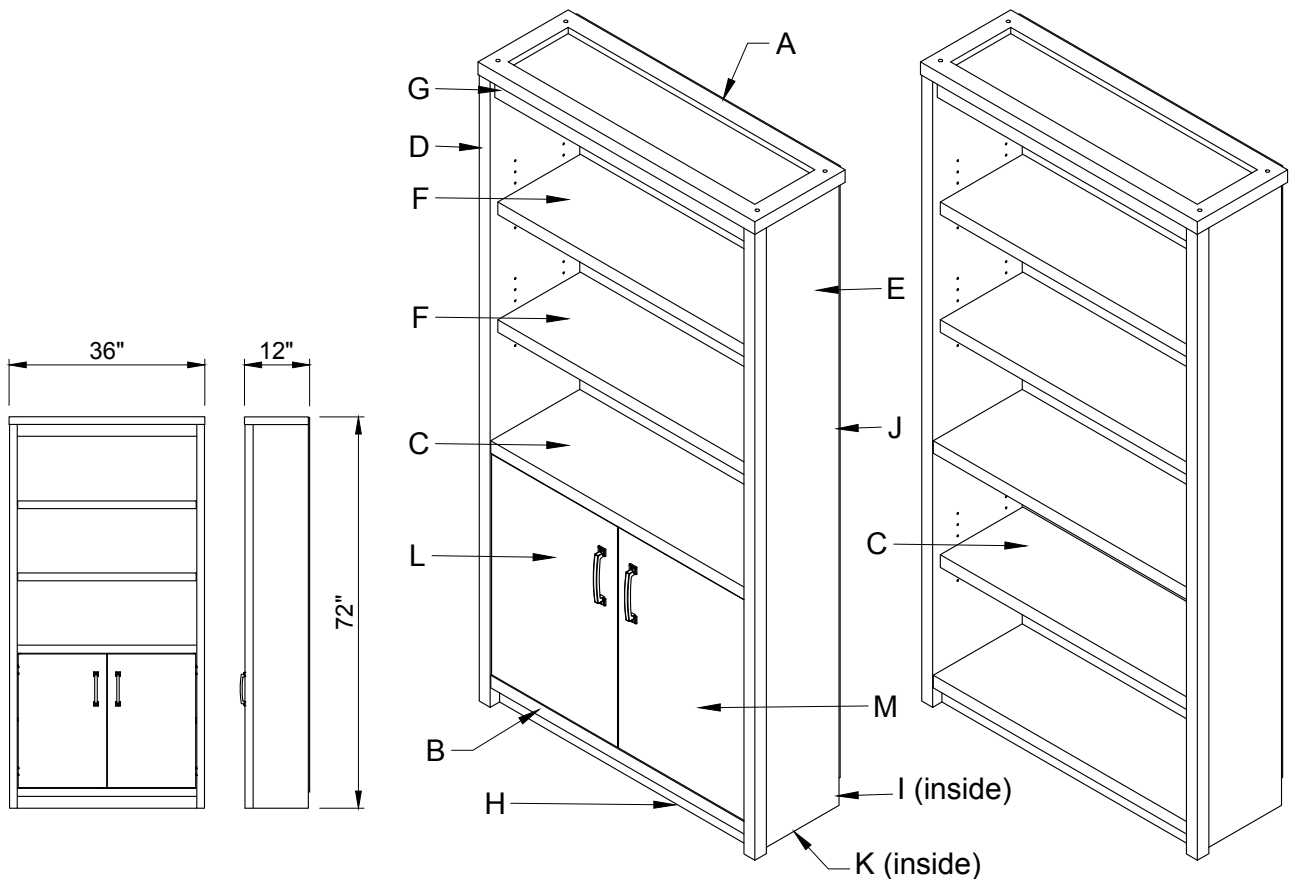


 
 
 
 
 



 
 


**OVERALL DIMENSIONS: 36" W X 12" D X 72" H**

# MARTIN®

## FURNITURE

### SETUP INSTRUCTIONS

#### IMUR3672D LOWER DOOR BOOKCASE

No	Parts List	Qty
A	 Top Panel	1
B	 Bottom Panel	1
C	 Fixed Panel	1
D	 Side Panel Left	1
E	 Side Panel Right	1
F	 Shelf	3
G	 Top Rail	1
H	 Bottom Front Rail	1
I	 Bottom Back Rail	1
J	 Back Board	1
K	 Leveler Block	2
L	 Door Left	1
M	 Door Right	1

No	HardwareList	Qty
1	Camlock: Nut Ø15x15 mm	15
2	Camlock: Pin Ø6x11, Ø7x28 mm	15
3	Bolt M6x25 mm	8
4	Screw Ø5x40 mm Flat	4
5	Screw Ø6x25 mm Flat	4
6	Screw Ø4x20 mm Panhead	23
7	Screw Ø4x15 mm CSK	12
8	Shelf Support Pin L-Shaped	12
9	Leveler M6x20 mm	4
10	Anti-Tip Restraint Hardware	1
11	Door Stopper Ø6x14, Ø8x8	2
12	Rubber Cap	2
13	Door Handle L-128	2
14	Bolt M4x17 mm	4
15	Hinge (Inset) D35	4
16	Screw Ø5x15 mm	24

#### CARING FOR YOUR FURNITURE

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage your furniture finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Direct sunlight may damage wood finishes.
- Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled room.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

# MARTIN®

 
## FURNITURE

### SETUP INSTRUCTIONS

#### IMUR3672D LOWER DOOR BOOKCASE

1


Lay the Bottom Panel (B) on a smooth and clean surface. Using a Philip Screwdriver (not included) screw the Camlock Pin (2) into the holes on the Bottom Panel. Locate the Bottom Front Rail (H) Bottom Back Rail (I). Insert the Camlock Nut (1) into the holes as indicated making sure the arrows are pointing outwards. Attach the both Rails to the Bottom Panel and turn the Nut clockwise to secure the two parts together.

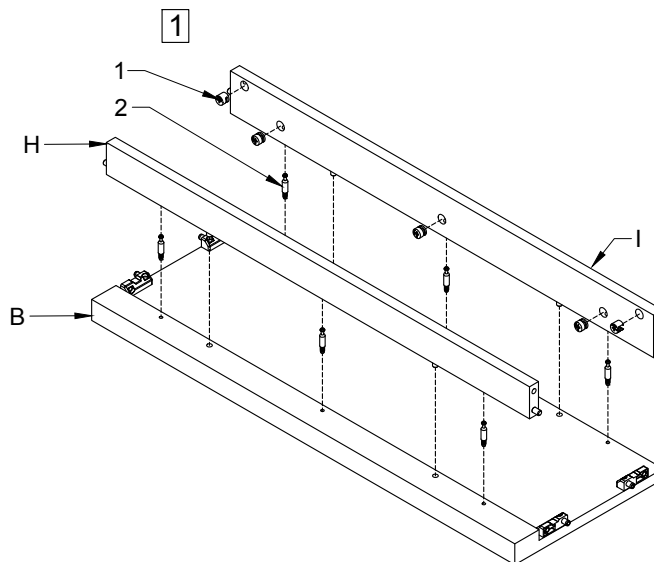

2

Lay the Side Panel Left (D) on a smooth and clean surface. Screw the Camlock Pin (2) into the holes on the Side Panel.

 Attached the previous assembled parts from step (1), Fixed Shelf (C) and Top Rail (G) onto the Side Panel Left (D). Turn the Camlock Nut clockwise to secure the parts and at the same time, use the Bolts (3) to screw the Fixed Shelf (C) and Bottom Panel (B) onto the Side Panel Left (D)

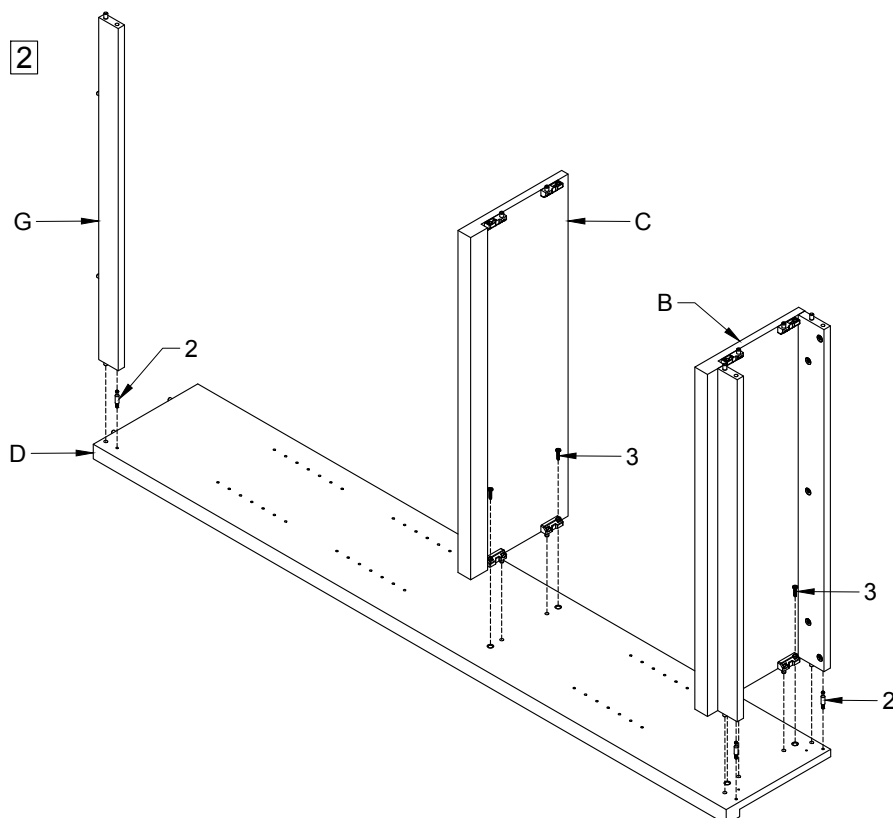

# MARTIN®

 
## FURNITURE

### SETUP INSTRUCTIONS

#### IMUR3672D LOWER DOOR BOOKCASE


3

Repeat for the Side Panel Right (E) and screw the Camlock Pin (2) as indicated.

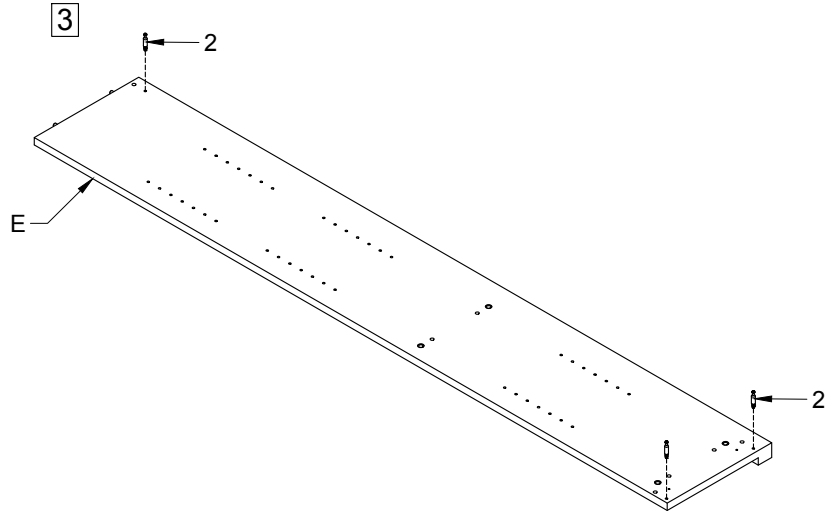

4

 Attach the Side Panel Right (E) to the assembled parts from step (2). Secure using the Bolts (3) and by turning the Camlock Nuts (1) clockwise. Use the Screws (5) to screw the Leveler Block (K) to the bottom of the Side Panels (D,E) and Leveler (9) to the Leveler Blocks (K)

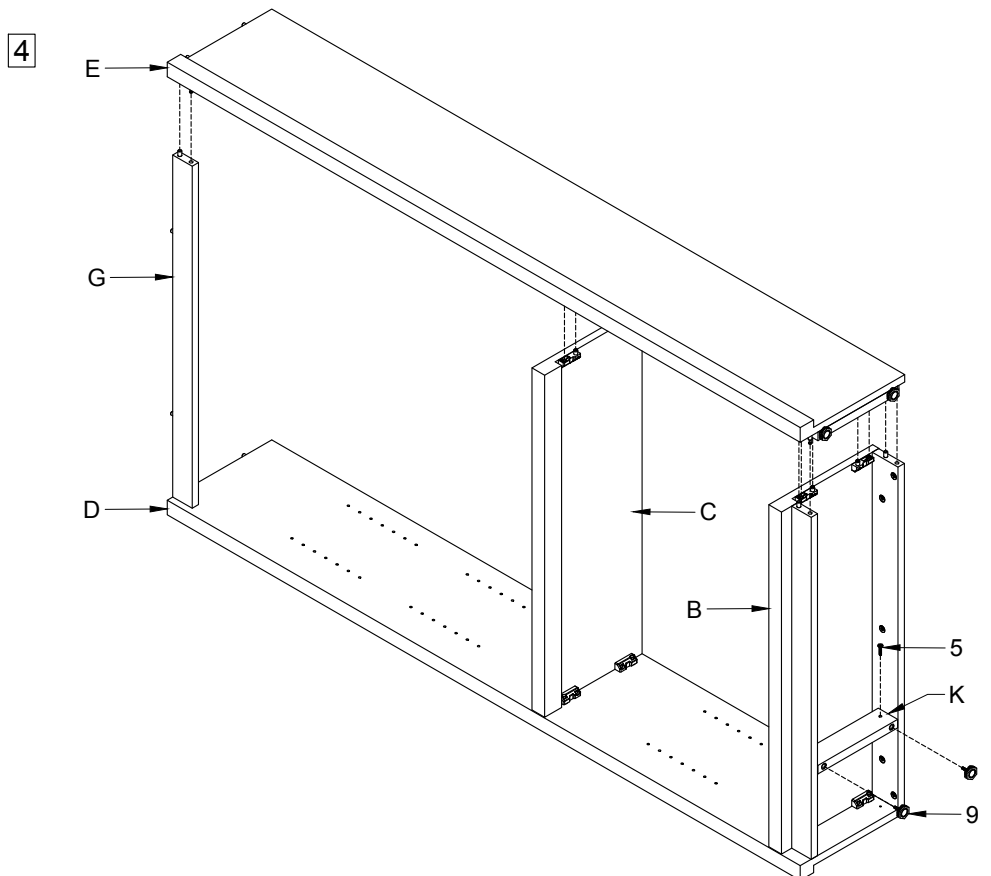

# MARTIN®

## FURNITURE

### SETUP INSTRUCTIONS

 
#### IMUR3672D LOWER DOOR BOOKCASE

**5**

Locate the Top Panel (A) and screw the Camlock Pin (2) onto it.

Then attach the Top Panel to the Side Panels (D,E) using the Screws (4) and turn the Camlock Nut to secure the Top Rail (G)

At the same time, screw the Door Stopper (11) at the bottom of the Fixed Shelf (C) followed by the Rubber Cap (12)

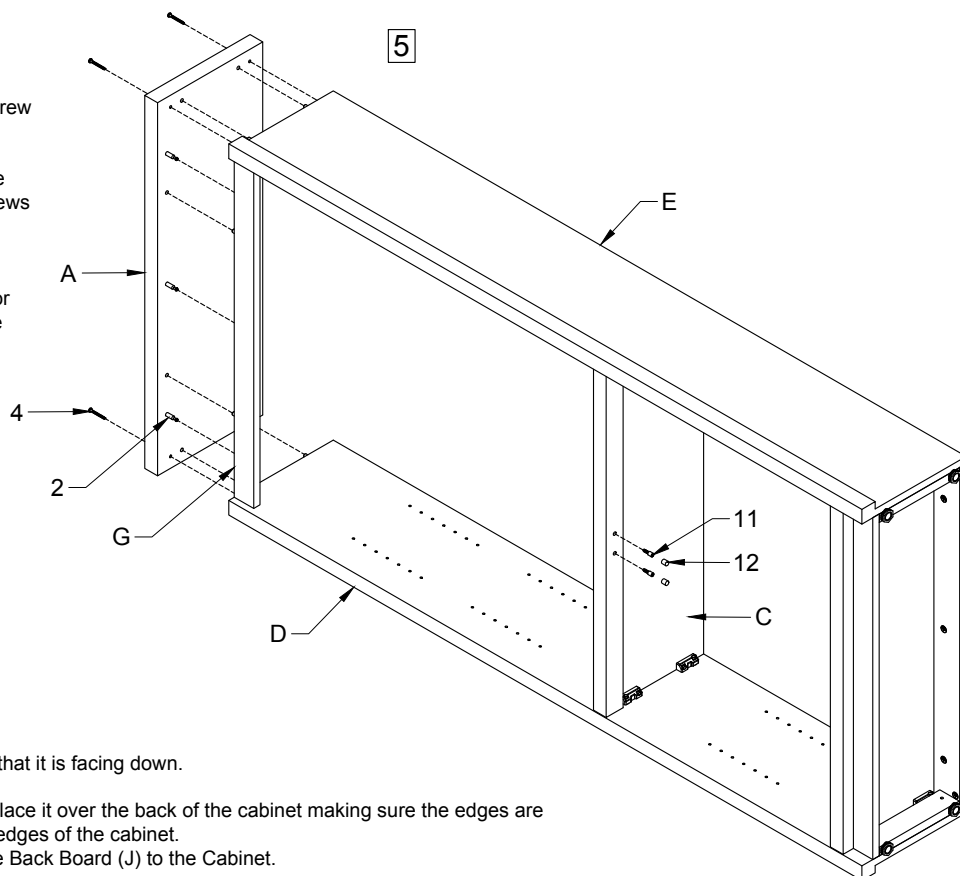


**6**

Turn the assembled Cabinet so that it is facing down.

Locate the Back Board (J) and place it over the back of the cabinet making sure the edges are about 2 to 3 mm away from the edges of the cabinet. Use the Screws (6) to secure the Back Board (J) to the Cabinet.

 Raise the assembled Cabinet upright.

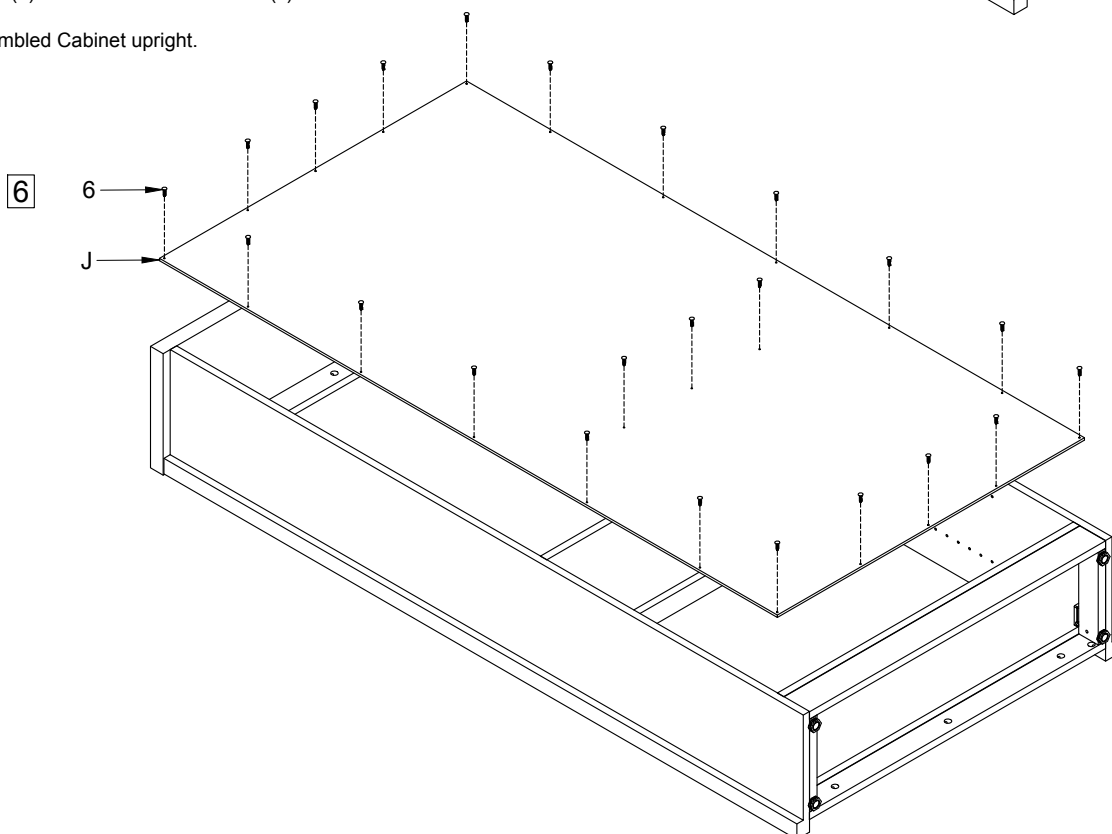

# MARTIN®

## FURNITURE

 
### SETUP INSTRUCTIONS

#### IMUR3672D LOWER DOOR BOOKCASE

**7**

Put in the Shelf Support Pins (8) into the holes on the Side Panels (D,E) at desired height.

Put in the Shelves (F) onto the Shelf Support Pins (8) and screw the Shelves from the bottom using the Screws (7)

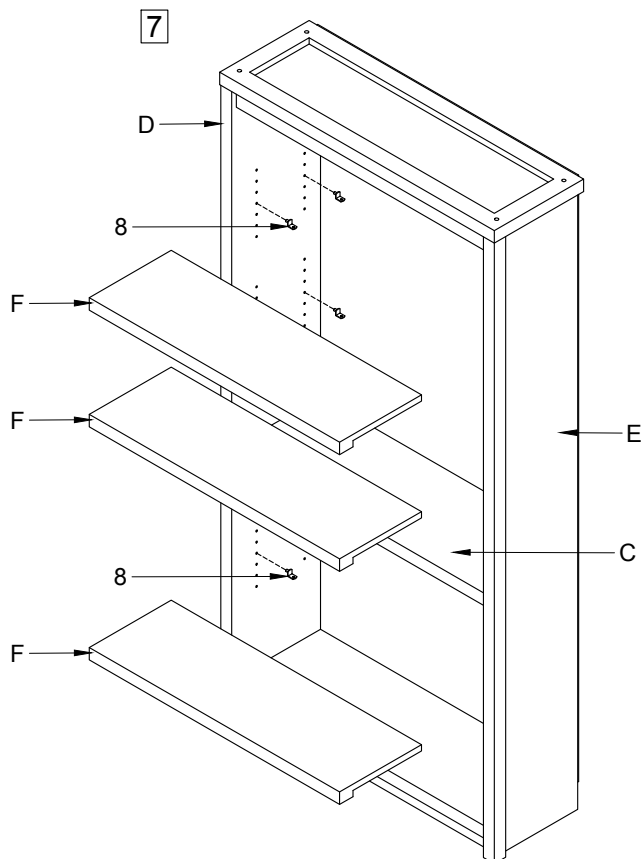


**8**

Locate the Door Left (L).

Screw the Hinges (15) onto the Door (L) using the Screws (16).

At the same time also assemble the Door Handle (13) to the Door using the Bolts (14).

 Repeat for Door Right (M)

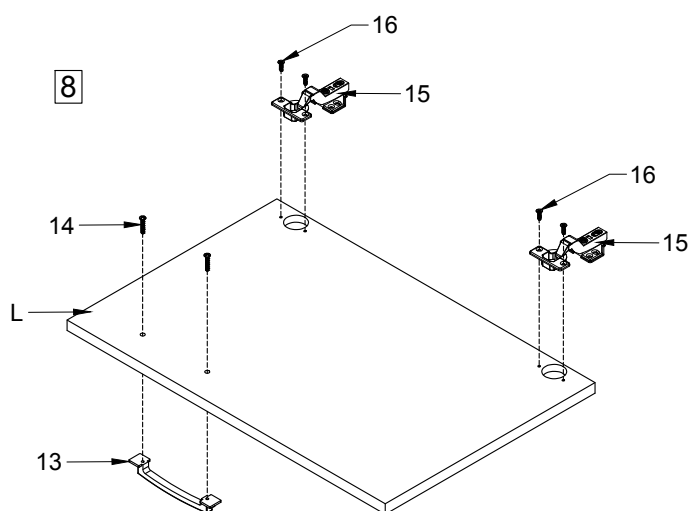

# MARTIN®

## FURNITURE

### SETUP INSTRUCTIONS

#### IMUR3672D LOWER DOOR BOOKCASE

9

 
 
Screw the Hinges (15) on the Door Left (L) to the holes on the Side Panels Left (D). Secure them with the Screws (16).

Lock the Screws on the elongated holes (a1) on the Hinges first making sure the Door is at correct height. Only then lock the screws on the round holes (a2) to tighten the hinges.

Repeat for the other Door.

If you need to adjust the doors, do so in the following manner.

- To adjust door left or right, turn screws (b) on both hinges, in and out.
- To adjust door in or out, loosen screws (c) on both hinges, adjust door, and retighten the screws.

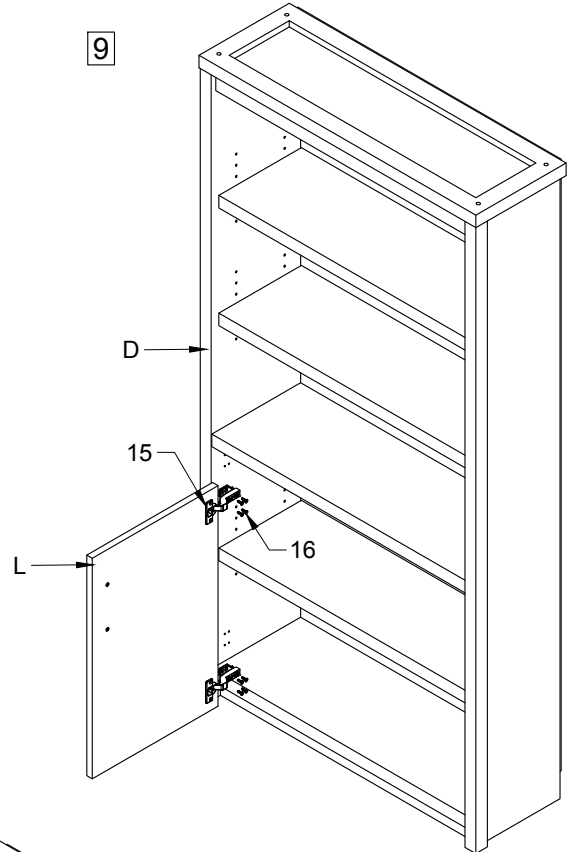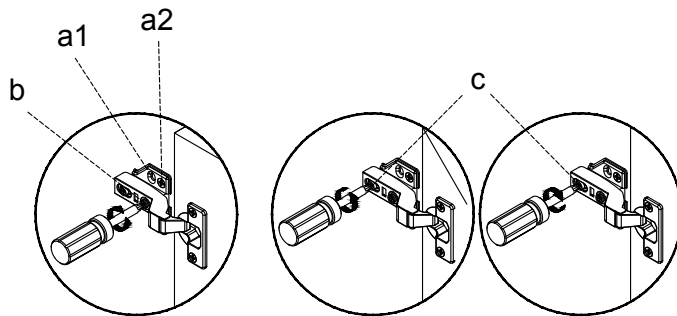

10

The Bookcase is now fully assembled. Do adjust the Leveler (9) if necessary.

Please secure the cabinet to the wall using the Anti-Tip Restraint hardware (10).

