

UR4821 ASSEMBLY INSTRUCTIONS

FIGURE 1A

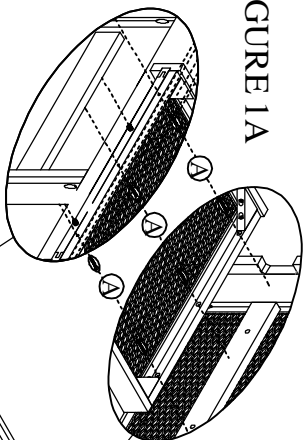


FIGURE 1

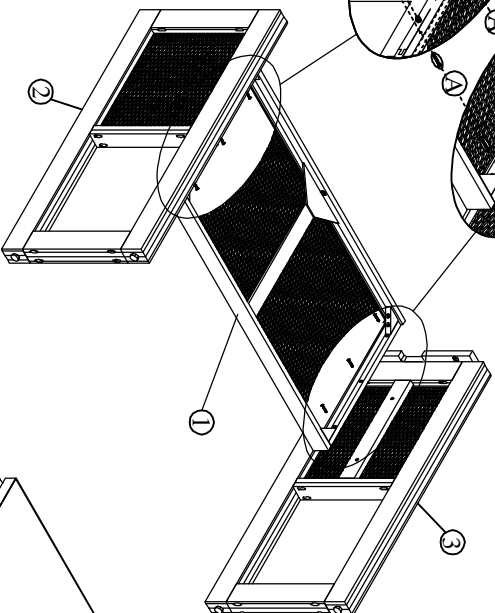


FIGURE 2B

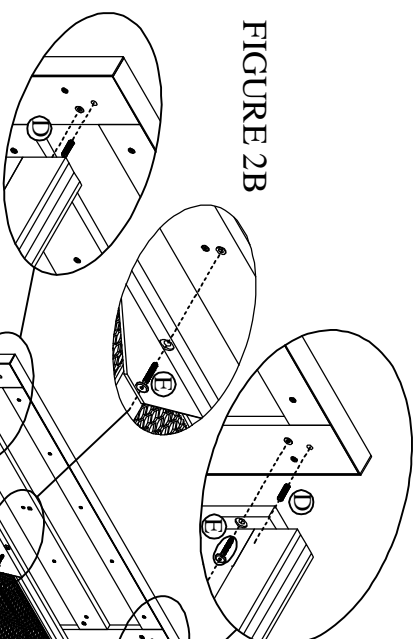


FIGURE 2

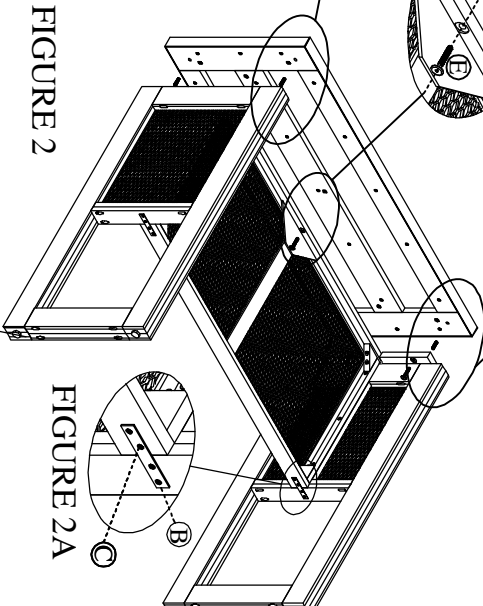


FIGURE 2A

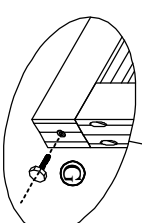


FIGURE 2C

INSTRUCTIONS:

1. Unpack all parts from the box and align parts as show in the FIGURE 1 on a soft surface to avoid scratching the parts.
2. Align the Dowels of the Screen Panel (1) into the holes on the Left (2) and Right (3) Legs FIG. 1A.
3. Using a Phillips screwdriver (not included), secure with the six screws (A) FIG. 1A.
4. Place two Metal Brackets (B) onto the union of the Screen Panel and the Leg with Screws (C). FIG. 2A
4. Insert four dowels (D) into the locator holes on the bottom side of the Top. FIG. 2B.
5. Align and secure Side to Top with four Allen Bolts (E) using the supplied Allen Wrench (F)
6. Secure Screen Panel to Top with three Allen Bolts (E) FIG. 2B.
7. Install four Levelers (G) FIG 2C.
8. With an Assistant, Flip and Position Unit into it final position.

Tools Required : Phillips Screwdriver

No:	Hardware List	Qty
A	1 1/4" P-BUGLE DRYWALL	6
B	METAL BRACKET	2
C	PHIL. FLAT PBS BLACK	8
D	DOWEL 08X30MM	4
E	BOLT 40mm	7
F	4mm ALLEN WRENCH	1
G	LEVELERS	4