

## 1. ADVANCED PROGRAMING FUNCTIONS

### 1. HEIGHT CONTROL UP AND DOWN

The UP and DOWN buttons are used for moving the table up and down when the user presses the button.

### 2. FOUR MEMORY PRESETS


Use the UP/DOWN button to find a desired height, then press “M” and release, the handset will display “set”, choose number 1-4.

### 3. LOCK FEATURE

Press “M” and release, the handset will display “set”, hold the UP button for 5 seconds immediately, the handset will then display “LOC”.  
Your desk now is locked.

#### TO UNLOCK

Press “M” and release, the handset will display “set”, hold the DOWN button for 5 seconds immediately, the handset will then display the current height.  
Your desk now is unlocked.

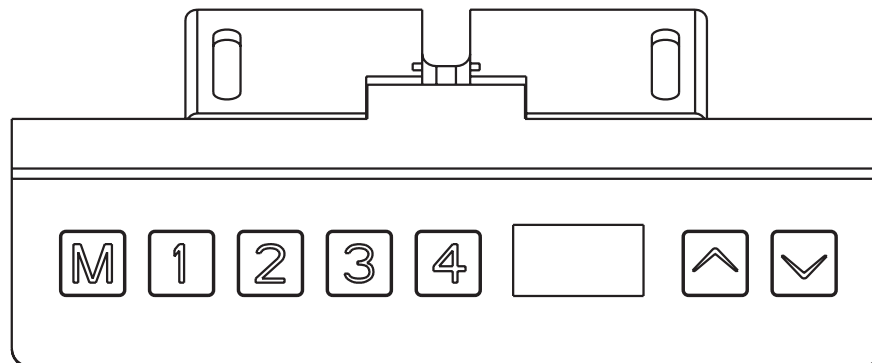

7

## 2. TROUBLESHOOTING

### --Reset Instructions--

If experiencing error messages showing on the Handset or no response when trying to raise or lower:

- Unplug the power cord and hold the down button key for 20 seconds.
- Plug the power cord back in. Continue to hold down button unit will lower to lowest height then reset.
- Press and hold the DOWN button on the handset (Part #7) until the desk reaches its lowest height. Release the DOWN button. Press and hold the DOWN button again for about 10 seconds until the desk lowers a little bit more, slightly rises and stops. Release the DOWN button. Your desk is now ready to use.
- The Handset will then display the current height, and you should be able to operate it now.
- You may need to do this if the desk is ever unplugged or loses power.

If the handset displays “Er1” or “Er2”, confirm that all wired connections are secure (legs to cables, cables to control box). Then perform the reset procedure above. If the error message persists after the reset procedure or if the height between the legs exceeds 5cm (1.5 inches) stop the reset procedure and contact us or local distributors.

If the handset displays “Hot”, let the base cool down for 20 minutes.

If the keypad shows an error after following reset procedure, please follow the below procedure:

Unplug the power for 10 sec. then plug back in, Follow the reset procedure again.

After the reset procedure, unplug the power for 10 sec and plug back in.

If this does not correct the lift function, please call customer service.

If the desk seems to be uneven, try the reset instructions above. If that does not work you may need to adjust the levelers at the bottom of the foot.



In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary (see Reset Instructions above)



This product is designed with a duty cycle of 10% (2 min. on, 18 min. off)



Keep Children away from electric height-adjustable desks, control units and handsets. There is a risk of injury and electric shock



Do not open any of the components: lifting columns, control box, or handset. There is a danger of electric shock



Keep all electrical components away from liquids

