


Congratulations on the purchase of your new Signature Series chair!


PARTS

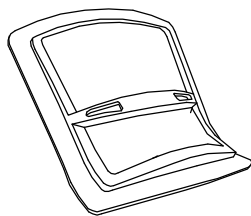


Backrest / QTY:1




Seat QTY:1

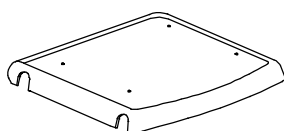


Seat Cover QTY:1

 


Seat Screw + Washer / QTY: 4

 

Backrest Screw / QTY: 4

 

Steel Cross Bar / QTY:2

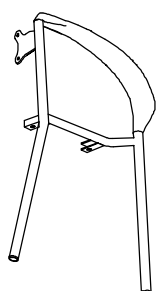

Arm / Leg Frame / QTY:2

INSTRUCTIONS

Remove all parts from carton and verify part quantities as indicated on parts lists.

Step 1. Attach both Cross Bars between Leg Frames. Secure Leg Frames and Cross Bars to Seat using 4 Long Screws w/Washers


Step 2. Secure Backrest to Leg Frames using 4 Short Screws.
FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH.

Step 3. Attach Plastic Cover to bottom of Seat.

Attention: MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING CHAIR.


Step 1.

Screw in Screws, but do not fully tighten.

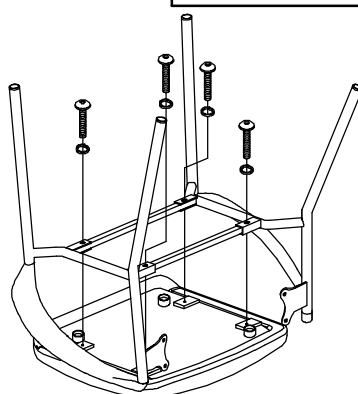



Step 2.

Fully Tighten Backrest Screw s. Then securely tighten Seat Screws.

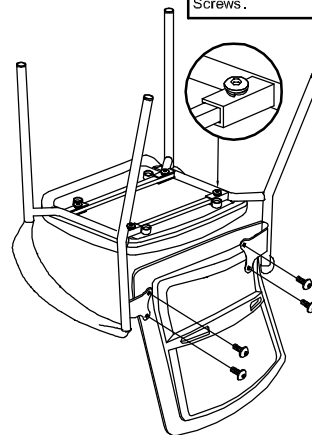

Step 3.

Push hard until you hear a clicking sound to indicate that the plastic cover is locked in place.

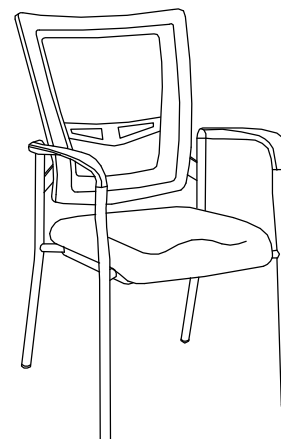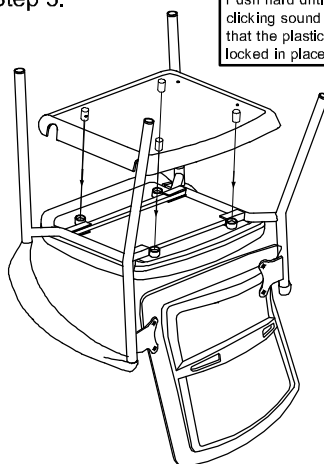

Warnings

1. This product should be used by only one person at a time.
2. Do not use this chair unless all bolts, screws and knobs are securely tightened.
3. Dispose of packing material properly. Do not use the plastic cover as a head covering. It may cause suffocation.
4. Do not use the chair as a stepladder.
5. Use this chair for its intended purpose only.
6. Save Allen Wrench. Check and tighten all bolts, screws and knobs every 3-6 months; ensure they are fully tightened to ensure stability.

CUSTOMER SERVICE HOTLINE

800-626-6060

WWW.NBF.COM



ALLEN WRENCH SPARE PART
(SAVE FOR FUTURE TIGHTENING)