

Mr. Coffee® latte™



SINGLE SERVE ICED AND HOT COFFEEMAKER WITH MILK FROTHER

USER MANUAL

NWL0001311939

www.mrcoffee.com

INTRODUCTION

Hey! Welcome to the Mr. Coffee Product Family and congratulations on the purchase of your new Mr. Coffee Latte™ Coffeemaker. Your coffeemaker brings the coffeehouse home with the ability to make iced and hot coffee and froth milk with one machine. Easily create lattes and cappuccinos with the step-by-step guide and integrated measuring system. To create refreshing iced coffee, use the tumbler to measure water and ice, and the scoop to measure coffee grounds. The perfect ratio of hot, concentrated coffee is brewed over the ice, leaving you with flavorful iced coffee that's never watered down. Your coffeemaker can also make single servings of pod-free hot coffee, giving you better taste and reducing waste. As always, Mr. Coffee creates the great tasting coffee and you make it special - add in your favorite flavorings and mix-ins to customize exactly how you like it!

Our number one goal is to give you great-tasting coffee every time. If you have any questions about your new Mr. Coffee Latte™ Coffeemaker, please contact us at **1-800-MRCAFFEE (1-800-672-6333)**.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
5. Unplug from outlet when either the appliance or display clock (if provided) is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an Authorized Service Center for examination, repair or adjustment. Do not attempt to replace or splice a damaged cord.
7. The use of an accessory not recommended by the appliance manufacturer for use with this appliance may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet (for appliances with detachable cords). To disconnect, turn any control to the off position, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. All lids should be closed during use.
14. Scalding may occur if the lid is removed or brew basket door is opened during or immediately after the brewing cycles. Contents may be hot. Allow to cool before opening the lid.

For appliances with sealed capsules:

15. **WARNING:** To avoid the risk of injury, never open or disengage the brew chamber during the brew cycle.
16. Only use capsules intended for this appliance. If the capsule does not fit, do not force the capsule into the appliance.

IMPORTANT SAFEGUARDS CONT.

For appliances with glass containers:

17. The container is designed for use with this appliance. It must never be used on a range top.
18. Do not set a hot container on a wet or cold surface.
19. Avoid sudden temperature changes, such as rinsing, washing, filling, or immersing a hot container with cold liquids.
20. Do not use a cracked or chipped container or a container having a loose or weakened handle.
21. Do not clean container with cleansers, steel wool pads, or other abrasive material.

For appliances with service panels:

22. **WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT REMOVE THIS COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Polarized plug

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS

A short power-supply cord (or detachable power-supply cord) may be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- a. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
- b. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
- c. The longer cord should be arranged so that it will not drape over the counter top or table where it can be pulled on by children or tripped over unintentionally.

Do not pull, twist or otherwise abuse the power cord.

PRODUCT NOTICES

1. Place the appliance on a hard, flat, level surface to avoid interruption of airflow underneath the coffeemaker.
2. Glass decanters only: Discard the decanter immediately if it is ever boiled dry.
3. Glass decanters only: Protect the decanter from sharp blows, scratches or rough handling.
4. Do not operate the appliance with an empty water tank.
5. Keep the area above the appliance clear during use, as hot steam will escape the appliance.

GET TO KNOW YOUR SINGLE SERVE COFFEEMAKER & FROTHER



1. **Scoop Storage**
2. **Drip tray** - helps keep countertop tidy and free from mess. Clean after a few uses to prevent any overflow
3. **Drip tray cover** - handwash only
4. **Over ice button** - press to brew refreshing single servings of iced coffee
5. **Hot brew button** - press to brew flavorful single servings of hot coffee
6. **Frother**
7. **Brew spout** - place your cup or tumbler underneath to catch your delicious brew
8. **Lid**

9. **Showerhead**
10. **Reusable coffee filter** - is dishwasher
11. **Brew basket** - is dishwasher, insert filter filled with grounds here
12. **Hot Froth** - press to make hot froth for lattes or cappuccinos
13. **Cold Foam** - press to make cold foam for iced lattes

Lux Version:

14. **Hot Capp button** - press to make hot cappuccino froth
15. **Hot Latte button** - press to make hot latte froth



Frother

Frothing jar - is dishwasher safe

Frothing jar lid - is dishwasher safe

Frothing whisk - is dishwasher safe

Coffee ground scoop - dual sided for measuring iced or hot coffee grounds

Mr. Coffee Iced Tumbler - is 22 oz. double-wall insulated and BPA-free, handwash only

Lid - handwash only, BPA-free

Straw - handwash only, BPA-free

CLEAN COFFEEMAKER BEFORE FIRST USE

Just follow these simple steps:

1. Wash the frother jar, frothing whisk, frothing jar lid, tumbler, tumbler lid, tumbler straw, reusable coffee filter, coffee ground scoop and brew basket in a mixture of mild detergent and water. Rinse each thoroughly.
2. Fill tumbler with water to the water line and pour into reservoir. Replace brew basket in position and nylon filter (or paper 5-cup basket style paper filter) into brew basket.
3. Position tumbler under brew spout, plug in unit and press HOT BREW.
NOTE: the unit is on when the LED is lit.
4. When brewing is complete, discard water from tumbler and rinse tumbler thoroughly with clean water.
5. Your Mr. Coffee Latte™ Coffeemaker is now ready for use!
NOTE: Wait a few minutes before brewing your next coffee to allow the heater to cool. It is normal for steam to occur if brewing back to back.

DISHWASHER SAFE PARTS OF YOUR COFFEEMAKER

To thoroughly clean your coffeemaker, you can put the following parts into the top-rack of the dishwasher:

1. Reusable coffee filter
2. Brew basket
3. Milk frothing jar
4. Jar lid
5. Frothing whisk

CAUTION: The electrical base, power cord and plug are not dishwasher safe and should never be immersed in water or other liquids.

FROTHING MILK TYPES

	Experiment and Find Your Favorite Type! Not all alternative milk brands froth the same
Whole Milk	Preferred milk type for creating a thick, creamy froth and the best outcome for a latte or cappuccino.
Reduced Fat Milk	Creates a lighter foam due to lower fat content. Skim milk will create a more stable foam that is easier to shape.
Oat Milk	Foam results vary based on different brands. Try using an oat milk based creamer for better results!
Almond Milk	Creates smaller foam bubbles which will dissipate quickly. Try using an almond based creamer for better results!

LET'S MAKE A HOT LATTE OR CAPPUCINO!

1. Plug the coffeemaker in.
2. Fill your favorite mug with clean, filtered water to brew a concentrated coffee shot.
3. Lift the lid of the unit and pour the water in to the water reservoir to the 4-ounce mark. Discard any excess water in your mug.
4. Place the reusable coffee filter (or standard 5-cup basket-style paper filter) into the brew basket.
5. Using the HOT side of the coffee scoop, add 1½ scoops of coffee grounds to the coffee filter. Move the shower head over the coffee filter and grinds. Close the lid.
NOTE: If you want a stronger coffee shot, add an additional ½ scoop of coffee grounds.
6. Place the mug under the brew head. Press the Hot Brew button - ensure the LED is illuminated.
7. While your coffee is brewing, prepare your frothed milk.
NOTE: Before adding milk, ensure that your whisk is properly placed at the bottom of frother jar by clicking in-place and securely fastening it.

For a Hot Latte:

8. Add 6.5 ounces of the milk of your choice to the latte line indicator in the frothing jar.
9. Place frothing jar on mount. Put lid back on the frothing jar.
10. Press the Hot Froth or Hot Latte button (depending on your model). Ensure the LED is illuminated and frothing will begin. Frothing jar will stop automatically once the cycle is complete.
NOTE: Do not fill frothing jar past lines for best froth outcome. Do not remove frothing jar from mount mid-cycle. If removed, turn off frother by pressing Hot Froth or Hot Latte button again. Cycle will need to be re-started if desired.
11. Add frothed milk into mug and enjoy!

NOTE: Please ensure to handle frothing jar by the silicone sleeve as the bottom of the frothing jar gets hot!

NOTE: Clean frothing jar after each use.

NOTE: Wait a minute or so before frothing again to allow the heater to cool.

NOTE: Do not touch frothing warming plate after use as it is hot.

For a Hot Cappuccino:

8. Add 5 ounces of the milk of your choice to the capp line indicator in the frothing jar.
9. Place frothing jar on mount. Put lid back on the frothing jar.
10. Press the Hot Froth or Hot Capp button (depending on your model). Ensure the LED is illuminated and frothing will begin. Frothing jar will stop automatically once the cycle is complete.
NOTE: Do not fill frothing jar past lines for best froth outcome. Do not remove frothing jar from mount mid-cycle. If removed, turn off frother by pressing Hot Froth or Hot Capp button again. Cycle will need to be re-started if desired.
11. Add frothed milk into mug and enjoy!

LET'S MAKE AN ICED LATTE OR CAPPUCCINO!

1. Plug the coffeemaker in. Add clean filtered water to your Mr. Coffee Iced tumbler to brew a concentrated coffee shot. Lift the lid of the unit and pour the water in to the water reservoir to the 4-ounce mark. Discard any excess water in your tumbler.
2. Place the reusable coffee filter (or standard 5-cup basket-style paper filter) into the brew basket.
3. Using the HOT side of the coffee scoop, add 1 ½ scoops of coffee grounds to the coffee filter. Move the shower head over the coffee filter and grinds. Close the lid.
NOTE: If you want a stronger coffee shot, add an additional ½ scoop of coffee grounds.
4. Fill your Mr. Coffee Iced Tumbler with ice to the Ice line indicator.
5. Place the tumbler under the brew head. Press the Hot Brew button - ensure the LED is illuminated.
6. While your coffee is brewing, prepare your frothed milk.
NOTE: Before adding milk, ensure that your whisk is properly placed at the bottom of frother jar by clicking in-place and securely fastening it.

For an Iced Latte:

7. Add 6.5 ounces of the milk of your choice to the latte line indicator in the frothing jar.
8. Place frothing jar on mount. Put lid back on the frothing jar.
9. Press the Cold Froth button to create a creamy cold foam. Ensure the LED is illuminated and frothing will begin. Frothing jar will stop automatically once the cycle is complete.
NOTE: Do not fill frothing jar past lines for best froth outcome. Do not remove frothing jar from mount mid-cycle. If removed, turn off frother by pressing Cold Foam button again.
10. Pour frothed milk into tumbler, add straw and lid then enjoy!

NOTE: Clean frothing jar after each use.

For an Iced Cappuccino:

7. Add 5 ounces of the milk of your choice to the latte line indicator in the frothing jar.
8. Place frothing jar on mount. Put lid back on the frothing jar.
9. Press the Cold Froth button to create a creamy cold foam. Ensure the LED is illuminated and frothing will begin. Frothing jar will stop automatically once the cycle is complete.
NOTE: Do not fill frothing jar past lines for best froth outcome. Do not remove frothing jar from mount mid-cycle. If removed, turn off frother by pressing Cold Foam button again.
10. Pour frothed milk into tumbler, add straw and lid then enjoy!


LET'S MAKE ICED COFFEE!

1. Plug the coffeemaker in.
2. Fill the tumbler to the "WATER" marking with clean, filtered water.
3. Lift the lid of the unit and pour the water into the reservoir.
4. Place the reusable coffee filter (or standard 5-cup basket-style paper filter) into the brew basket.
5. Using the ICED side of the coffee scoop, pour 1 scoop of grounds into the reusable coffee filter. Close the lid.
NOTE: if you want a bolder cup of iced coffee, you can use 1½ - 2 scoops of grounds.
6. Fill the tumbler with large ice cubes to the "ICE" marking.
7. Place tumbler full of ice under brew spout and press the "OVER ICE" button - ensure the LED is illuminated.
8. Wait 3-4 minutes for brewing to complete. Once dripping slows and stops, grab tumbler from underneath the spout.
NOTE: a few sparse coffee drips may come from the brew spout post brew - the drip tray will catch these and keep your countertop mess free.
9. Add in your favorite coffee mix-ins for coffee just how you like it.
10. Insert the straw in lid, place on tumbler and enjoy!



LET'S MAKE HOT COFFEE!

1. Plug the coffeemaker in.
2. Grab desired coffee cup or mug and fill with as much water as you would like coffee.
Tip: Taller coffee mugs work best to avoid any splashing during brewing.
3. Pour water into the reservoir. Observe how much water your poured on the water ladder.
NOTE: do not pour above 16 oz. max fill line as water reservoir will overflow.

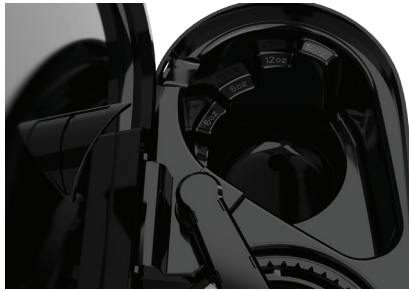

4. Place reusable coffee filter in brew basket.
5. Using the HOT side of the coffee scoop, measure coffee grounds that correspond to amount of water poured.

HOT BREW	
Water	Scoop
8 oz	1
12 oz	1½
16 oz	2

6. Pour coffee grounds into reusable coffee filter.
NOTE: ensure grounds to not spill into water reservoir when filling coffee filter. Removing coffee filter to fill with grounds can help prevent accidental spills into the reservoir.
7. Close the lid.
NOTE: if you prefer bolder hot coffee, you can use an extra ½ - 1 scoops of coffee grounds.
8. Place the mug that was used to measure water under the drip spout. Press "HOT BREW" button.
9. Add in your favorite coffee mix-ins for coffee just how you like it. Enjoy!

FAQ

Why is the hot brew or over ice button flashing?

Please wait until the button is no longer flashing before brewing your cup of coffee.

Why is my milk not frothing?

- Make sure your whisk is properly inserted at the bottom of your frothing jar.
- Ensure you're not adding milk past the latte/cappuccino line in the frothing jar.
- Try using a different kind or brand of milk.

My iced or hot coffee isn't strong enough for my taste - what now?

- Try adding an extra 1/2-1 scoop of coffee grounds.
- Try using finer coffee grounds.
- Try selecting the "OVER ICE" setting for Hot Coffee, as this pre-infuses the coffee for best extraction.

Is the tumbler dishwasher safe?

No, the tumbler, lid and straw should be hand-washed only.

Why is there no ice left in my cup after brewing iced coffee?

Try using bigger ice cubes when making your iced coffee - these will melt slower and give you ice in your drink for longer! Also be sure you have filled your tumbler all the way to the "ICE" marking.

Why are there coffee grounds in my coffee?

You may have over-filled your reusable coffee filter with coffee grounds, and they could have spilled over the top. Although this is uncommon, try using a little less grounds next time and that should solve this problem! Decaf coffee can also cause grounds to spill over the top, try using a little less grounds next time. Using a paper filter inside of the permanent filter can also cause grounds to spill over the top.

Can I use a different tumbler or cup for making iced coffee?

Sure thing! Just ensure you keep the same ratio of water-ground-ice to create the best tasting iced coffee!

Why does my coffeemaker continue to drip after the light turns off?

Using paper filters can cause dripping to continue for longer. We suggest using the included nylon filter.

REPAIRS

If your coffeemaker requires service, do not return it to the store where you purchased it. All repairs and replacements must be made by Sunbeam or by an authorized MR. COFFEE® Service Center. If you live in the U.S. or Canada, please call us at the following toll-free telephone numbers to find the location of the nearest authorized service center: **U.S. 1-800-MR COFFEE (1-800-672-6333)**. To assist us in serving you, please have the coffeemaker model number and date of purchase available when you call. The model number is on the bottom of the coffeemaker. We welcome your questions, comments or suggestions. In all your communications, please include your complete name, address and telephone number and a description of the problem.

WARRANTY INFORMATION

1-YEAR LIMITED WARRANTY

Sunbeam Products, Inc. ("Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty from Sunbeam.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the Limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, or conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for damages arising from any tort, including negligence or gross negligence, or fault committed by Sunbeam, its agents or employees or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-672-6333 and a convenient service center address will be provided to you.

USER MAINTENANCE

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See warranty available online.

SERVICE MAINTENANCE AND WARRANTY

Visit our website, mrcoffee.com or call us toll-free at the Consumer Service Department, 1-800-672-6333

Mr. Coffee[®]
latte[™]

© 2022 Sunbeam Products, Inc. All rights reserved. Product of Sunbeam Products, Inc.
Boca Raton, Florida 33431. Made in China. SPR-151121-201P