

Cord/Cordless Clipper Instruction Manual

• For Household Use Only •

For Model Numbers:
78522

Oster
animal care™

IMPORTANT SAFEGUARDS

Household Clipper

When using an electrical appliance, basic precautions should always be followed, including the following:
Read all Instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

4. Keep cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this appliance with a damaged or broken comb, as facial injury may occur.
8. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off" then remove plug from outlet.
9. Avoid contact with moving blades.
10. Replace damaged/broken combs/blade immediately to avoid injury.
11. Young children should be supervised to ensure that they do not play with the appliance.
12. This appliance is intended for trimming purposes only.
13. The battery must be removed from the appliance before it is scrapped.
14. The appliance must be disconnected from the supply mains when removing the battery.
15. The battery is to be disposed of safely. For battery removal or maintenance and/or repair of this appliance please contact an Authorized Service Center.
16. The appliance is only to be used with the power supply unit provided with the appliance. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the

hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the appliance and its cord out of reach of children less than 8 years.)

SAVE THESE INSTRUCTIONS

DO NOT USE THIS CLIPPER UNTIL YOU HAVE READ THESE OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS

Use on voltage specified on appliance, A.C. or D.C. all cycles. This appliance has been made with extreme care. It has been thoroughly tested and inspected at every stage of its manufacture and assembly. As with most precision instruments, that last polish on the running parts which bear upon each other comes only after a period of "breaking in" – in this case 4 to 6 weeks. If the speed of the motor varies (indicated by a change in its sound), it is normally the result of a change in the position of the appliance or a fluctuation in your line of voltage. When the appliance is lubricated in accordance with instructions, it will deliver ample power and speed for haircutting requirements.

These Tips Help Make Your Job Easier:

1. Wash hair first; it can reduce blade damage and improve blade efficiency.
2. Oil blades before and after each use. Apply 1–2 drops of oil to the blade that move and to the "contact" section of stationary blades.

ABOUT THIS CLIPPER

Cord or cordless—it's your choice. Use the power cord when the batteries are not fully charged, or choose the cordless option.

HOW TO USE

Charging the Unit

Unit must be fully charged before operating. Otherwise damage to the battery

and electrical components could result. Follow these directions and allow unit to charge for at least 16 hours before initial operation. Failure to follow these directions could result in your warranty being voided.

 ZDJ050100BS: Use only with ZDJ050100BS supply unit

 ZDJ050100AU: Use only with ZDJ050100AU supply unit

Please watch the DVD before use.

1. Ensure that the switch on the unit is in the "Off" position.
2. Plug the auxiliary power cord into an outlet with the rated voltage for your unit.

Note: Never leave the charger plugged in when not in use. Future charging should take approximately 10 hours.

Caution: Only use the clipper in the bathroom when the unit is charged and unplugged from electrical outlet.

Never use the clipper in the bathroom with the charger plugged into an electrical outlet.

Never use the clipper near any source of water with the charger plugged into an electrical outlet.

With auxiliary power cord:

3. Attach the other end of the cord to the clipper, aligning the contacts on the clipper with the contacts on the cord.



Operating the Unit

The clipper is designed to operate in either cordless or corded mode.

The preferred method is cordless as it ensures a longer life for the battery.

Always apply one to two drops of the provided blade lubricant to the blades before use.

Cutting efficiency may drop and the blades and motor may be damaged if hair is dirty or hair styling agents have been applied. Always ensure that hair is clean before using the clipper.

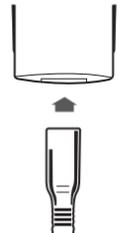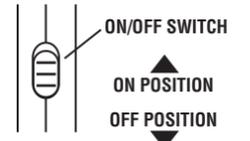

FRONT

Cordless Operation

1. Turn the clipper on using the “On-Off” switch and use the clipper.
2. Turn the clipper off when finished using.
3. Cover the blades with the provided blade guard to protect the blades.
4. Insert clipper into the auxiliary power cord. (See section titled “Charging the Unit”.)

Corded Operation

The clipper has been designed to use the auxiliary power cord if the battery is low and the unit will not turn on as a result.

1. If the battery is low and the unit has stopped working or you notice that the power has decreased, then you may still operate the unit by plugging in one end of the auxiliary cord into the unit.
2. Turn the clipper on using the “On-Off” switch and use the clipper. If the clipper does not turn on, then the battery may be fully depleted and may have to be partially charged prior to re-use. Follow the charging procedure and let the battery charge for approximately 10 minutes.
3. Turn the unit off when finished using.
4. Cover the blades with the provided blade guard to protect the blades.
5. Insert clipper into charging stand or plug into the auxiliary power cord. (See section titled “Charging the Unit”.)

Power Button

This feature can be operated at any time while the clipper is ON by pressing the button. The feature is intended for short durations of clipping where higher speed is required. The button must be held in the depressed position.



Recharging Precautions

1. Do not let clipper recharge continuously for more than 3 full days. Overcharging can shorten battery life.
2. Do not recharge or store clipper when room temperature is under 0°C (32°F) or over 40°C (104°F), or in a damp, humid place. This can also shorten battery life.
3. Do not recharge or store clipper near radiators or other heat sources, or where it is exposed to strong sunlight.
4. Always unplug the power supply when recharging is complete.

User-Maintenance Instructions

1. The appliance has no user serviceable parts.
2. The product is for household use.
3. Keep cord straight while cutting. If cord becomes kinked or tangled, stop cutting and straighten it.
4. Do not wrap cord around the clipper when storing. This can damage the cord insulation.
5. Always take care not to tangle the cord while using or storing the clipper.
6. We recommend storing the clipper and cord in the original carton when not in use.

COMB ATTACHMENTS

Your unit comes with comb attachments. These are provided to increase the functionality and enjoyment of your unit.

Inserting the Comb Attachment

1. Insert the cutting edge of the blade into the comb attachment.
2. Snap it tight at the back end of the blade by pushing down on the Guide Comb.

Removing the Comb Attachment

1. Push up on the Guide Comb until it releases from the metal blade.
2. Continue lifting the Comb Attachment away from the cutting edge of the blade until the Comb Attachment is free.

CLEANING AND MAINTENANCE

Proper cleaning and care can extend the life and improve performance of your clipper.

1. Turn the clipper’s On/Off switch to OFF.
2. Use the cleaning brush to sweep the clipper body and to keep blades clean of hair.
3. Apply 1–2 drops of oil to the blade that move and to the “contact” section of stationary blades.

DO NOT IMMERSE IN LIQUIDS

WARNING

**CONTAINS NICKEL-METAL HYDRIDE BATTERIES.
BATTERIES MUST BE RECYCLED OR
DISPOSED OF PROPERLY.**

WARRANTY

Our goods come with guarantees that cannot be excluded under law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods replaced if the goods fail to be acceptable quality and the failure does not amount to a major failure.

Please contact the number listed at the back of this manual for warranty details.



www.osteranimalcare.com

In Hong Kong, please contact:
Yvonne Hair Styling Wholesale Co., Ltd.
Flat F, G/F, Block 4, Yau Tong Industry Building,
Sze Shan Street, Yau Tong, Hong Kong.
依韻美髮用品有限公司
九龍油塘四山街油塘工業大廈第四座中層地下F
Tel: (852) 2565 7021 / 2346 8115
Fax: (852) 2349 8741
Email: yvonnehsw@yahoo.com.hk

In Australia, please contact:
Botany Bay Imports
24 Underwood Ave Botany Nsw 2019
Ph: 02 9700 0800
info@botanybayimports.com.au
www.botanybayimports.com.au

© 2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Holmes Products (Far East) Ltd., 40/F Manhattan Place, 23 Wang Tai Road, Kowloon Bay, Hong Kong. One Year Limited Warranty – see inside for details. Sunbeam Products, Inc. and Holmes Products (Far East) Ltd. are subsidiaries of Jarden Corporation (NYSE: JAH).

Printed in China
P.N. 910030000216 Rev A

GCDS-OST36433-BB
078522-101_14EM2

BACK