



# QUICK TIPS FOR USING YOUR OSTER® COUNTERTOP OVEN

Model: TSSTTVCG02

## BEFORE USING YOUR COUNTERTOP OVEN

- Remove any stickers and papers in and on the countertop oven.
- Clean the wire oven rack and baking/cookie pan with soap and water.
- During initial start up, a slight smell and/or smoke may be detected -- this is normal. Turn the temperature to max and let run for approximately 5 minutes to allow for any residue to burn off.

**Warning:** Make sure there is a 6-inch (15.24 cm) clearance between the countertop oven and any other surface, including cords. Before using, please refer to the Instruction Manual for Important Safeguards.

## TO USE THE TOAST FUNCTION

We simplified toasting for more precise, consistent results with less hassle.

- 1 Place food on Wire Rack. (use top rack for best results)




- 2 Close glass door completely.




- 3 Turn Function dial to Toast.



- 4 Turn the temperature control knob to the 450°/TOAST setting.

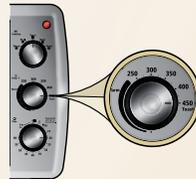

- 5 To set the timer, turn the timer past the 20 minute mark to engage timer switch and set back to desired toast time.\*

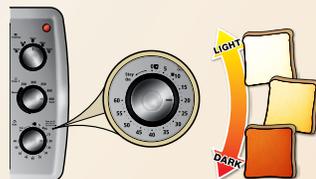

- 6 When toasting is complete, a bell will sound. Open door completely and remove food. For best toasting results, position the rack in the upper position.

\* **NOTE:** Different types of bread require different settings. Lighter breads and waffles require lighter setting. Darker breads, muffins and English muffins require a darker setting.


## TO USE THE TURBO CONVECTION HEAT FUNCTION

The Turbo Convection Heat Function turns on a built in fan that circulates hot air in the oven chamber. Preheat oven 5-7 minutes at desired temperature with oven rack in place.

- 1 Place baking pan with food inside on wire rack.



- 2 Close glass door completely.

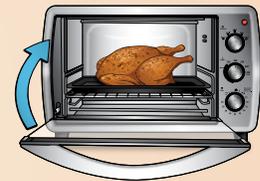


- 3 Turn the Function dial to Turbo.



- 4 Turn the Temperature dial to desired setting.



- 5 Turn the Timer to desired cook time.

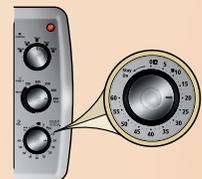

- 6 When baking is complete a bell will sound. Open door completely and remove food. \*\*

Need Help?  
Do Not Return Product to the Place of Purchase!



Or go online [www.Oster.com](http://www.Oster.com)

\*\* **WARNING:** Cooked food and metal rack can be very hot, handle with care. Never leave Countertop Oven unattended while in use.

© 2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Printed in China. P.N.157159 CBA-061912