

Cord/Cordless Clipper Instruction Manual

• For Commercial Use Only •

For Model Numbers:
078004 and 076550



Tondeuse avec ou sans fil Mode d'emploi

• À usage commercial uniquement •

Pour les références de modèles :
078004 et 076550



Cortadora inalámbrica / con cable Manual de instrucciones

• Solamente para uso comercial •

Para modelos con número:
078004 y 076550



fold

fold

fold

fold

Cord/Cordless Clipper Instruction Manual

• For Commercial Use Only •

IMPORTANT SAFEGUARDS

Commercial Clipper • When using an electrical appliance, basic precautions should always be followed, including the following: Read all Instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Unplug this appliance before cleaning, putting on, or taking off parts.
5. Do not lay metal objects across positive (+) and negative (-) battery terminals, charger terminals, or clipper terminals.
6. Keep unit dry at all times.
7. Always return hand unit to wall unit after using.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when it is plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.

SAVE THESE INSTRUCTIONS

IMPORTANTES CONSIGNES DE SÉCURITÉ

Tondeuse commerciale • Lorsque vous utilisez un appareil électrique, observez toujours les mesures de précaution élémentaires, dont les suivantes : Lisez toutes les instructions avant d'utiliser l'appareil.

DANGER

Pour réduire le risque de choc électrique :

1. N'essayez pas d'atteindre un appareil qui est tombé dans l'eau. Débranchez-le immédiatement.
2. Ne pas essayer d'appeler en prenant un bain ou sous la douche.
3. Ne placez pas ou ne rangez pas l'appareil dans un endroit où il risque de tomber et être entraîné dans une baignoire ou un lavabo. Ne placez pas ou ne faites pas tomber l'appareil dans l'eau ou un autre liquide.
4. Débranchez cet appareil avant de le nettoyer, de remettre ou de retirer des pièces.
5. Ne placez pas d'objets métalliques en travers des bornes positive (+) et négative (-) de la pile, du chargeur ou de la tondeuse.
6. Maintenir l'appareil tout le temps au sec.
7. Replacez toujours l'unité manuelle sur l'unité murale après une utilisation.

AVERTISSEMENT

Afin de réduire le risque de brûlures, d'incendie, de choc électrique ou de blessures :

1. Ne jamais laisser l'appareil sans surveillance lorsqu'il est branché.

GARDER CES INSTRUCTIONS

ADVERTENCIAS IMPORTANTES

Cortadora comercial • A la hora de utilizar aparatos eléctricos siempre deberán tenerse en cuenta las precauciones básicas, incluidas las siguientes: Lea todas las instrucciones antes de utilizar este aparato.

PELIGRO

Para reducir el riesgo de descarga eléctrica:

1. No intente coger un aparato que se ha caído al agua. Desconéctelo inmediatamente.
2. No utilice el aparato durante el baño o en una ducha.
3. No coloque o guarde el aparato en un lugar del que pueda caer o ser empujado a una bañera o lavabo. No lo introduzca en agua u otros líquidos.
4. Desconecte este aparato antes de limpiarlo, arañarle o quitarle partes.
5. No apoye objetos metálicos juntos a terminales de baterías positivas (+) y negativas (-), cargadores o cortadoras.
6. Mantenga la unidad seca en todo momento.
7. Devuelva siempre la unidad manual a la unidad de muro después de usarla.

ADVERTENCIA

Para evitar el riesgo de quemaduras, incendios, descargas eléctricas o daños a personas:

1. Un aparato nunca debería quedar desatendido mientras esté enchufado.
2. Es necesario supervisar de cerca este aparato durante su utilización por parte de niños o personas minusválidas.

CONSERVE ESTAS INSTRUCCIONES

ABOUT THIS CLIPPER

CHARGING THE CLIPPER

- 13. To disconnect, move all controls to "OFF", then remove plug from outlet.
- 14. During use, do not place or leave the appliance where it is expected to:

 - 1) subject to damage by animal, or
 - 2) exposed to weather

15. Do not discard exhausted battery packs into fire.

16. This appliance is for cutting purpose only.

17. Avoid tangling or kinking the cord while clipping. Should the cord become tangled or kinked, stop clipping and straighten the cord.

18. This appliance is not intended for use by persons, (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

19. Use only the battery or battery pack supplied by the manufacturer.

20. Store the charger and battery pack at room temperature.

21. Use the Volt or Aspen hair clipper only with specifically designated Volt or Aspen battery packs.

22. Recharge only with the Oster Volt/Aspen charger.

23. Charge the Li-ion batteries prior to first use.

24. When battery pack is not in use, keep it away from other metal objects such as: paper clips, coins, keys,

nails, screws or other small metal objects, or anything that can make a connection from one terminal to another.

25. For wall-hung mounting use Pan Head screws with a minimum diameter of Ø10mm and a screw diameter of Ø5mm. The choice of the screw for wall mounting depends on the wall material.

26. Ensure that your clipper is serviced only by a qualified repair person.

27. Periodically inspect the wall unit for secure mounting.

DO NOT USE THIS CLIPPER UNTIL YOU HAVE READ THESE OPERATING INSTRUCTIONS

OPERATE ON VOLTAGE SPECIFIED ON CLIPPER

NOTE: If the LED does not turn on then there may be dirt or grease on the contacts of the charging stand or clipper. Clean the contacts with an approved cleaning solution and re-insert the clipper into the charging stand. If the LED still fails to turn on then follow the return procedure under the warranty and service section.

CHARGING THE SPARE BATTERY

• Put the power cord of the charging stand into an outlet with the rated voltage for your unit.

• Ensure that the switch on the unit is in the "Off" position.

• Test the contacts of the clipper and the battery for foreign particles and contamination.

• Insert clipper with the battery inserted into the charging stand so that the top of the unit is facing you and the contacts on the clipper are aligned with the contacts on the charging stand.

The top of the unit is the side with the switch. (Figure 1)

• While the unit is being charged the LED will display a red solid light until fully charged. Once the battery is fully charged, the LED will display a continuous green light and is ready for use. This charging stand has one control LED.

LED INDICATOR

Charging	red solid
Fully Charged	green solid
Charging Stand Ready	green solid

• If the LED will not turn on, then remove and re-insert the clipper into the charging stand and push down gently on the clipper to engage the contacts.

CHARGE THE SPARE BATTERY

1. Test the contacts of the battery for foreign particles and contamination.

2. Put the spare battery gently into the provided charging cavity of the charging station.

3. Keep the spare battery in the charging station for the recommended charging time: 45 minutes.

4. The battery is charging when the control light is illuminating red. As soon as the battery is fully charged, the green control light will light up and the charger will switch to trickle charge.

IMPORTANT: If the clipper and the spare battery are standing simultaneously in the charging station, only the battery in the clipper is charging. The spare battery is only charging when the clipper is taken out of the charging station.

5. Hold the clipper firmly with one hand and pull the clipper or the battery out with the other.

CHANGING THE BATTERIES

1. Move the switch to the off position.

2. Push the battery interlock on both sides inward and pull the battery out of the clipper.

3. Fit the charged battery in the clipper, then the battery interlock is engaged on both sides.

4. Turn the clipper on using the "On-Off" switch located on the top of the unit and use the clipper.

5. Cover the blades with the provided blade guard to protect the blades.

NOTE: Except when charging, always unplug this appliance from the electrical outlet immediately after using.

ABOUT THE LI-ION BATTERY

NOTE: To ensure that the new battery reaches its full potential, the battery should be completely drained after the first use. This operation will only have to be performed once.

It will take no more than 120 minutes for the battery to be fully charged when fully discharged.

Additionally, to ensure the longevity of this powerful battery, the clipper must be operated with properly cleaned, sharpened and oiled blades at all times. When the battery is fully charged, the clipper can be used for up to 2 hours without recharging. This capacity is typically attained after approx. 1 - 5 charging cycles.

These batteries are not replaceable. For instructions on disposal of the Li-ion battery please refer to the "BATTERY DISPOSAL" section at end of this manual.

CORDLESS OPERATION

- Remove the clipper from the charging stand. (See section titled "CHARGING THE UNIT" before initial use.) The charging stand LED should stay green or switch to red when the spare battery is not fully loaded.
- Turn the clipper on using the "On-Off" switch located on the top of the unit and use the clipper.
- Turn the clipper off after use.
- Cover the blades with the provided blade guard to protect the blades.

5. Tenez le chargeur fermement d'une main et retirez la tondeuse ou la pile de l'autre.

REMARQUE : Sauf lors d'un chargement, débranchez toujours cet appareil de la prise électrique immédiatement après une utilisation.

INFORMATIONS CONCERNANT LA PILE LI-ION

REMARQUE : Pour s'assurer que la nouvelle pile atteint sa pleine capacité, il convient de la vider complètement après la première utilisation. Cette opération ne devra être réalisée qu'une seule fois.

La durée de charge maximale d'une pile entièrement déchargée est de 120 minutes pour une charge complète. Par ailleurs, afin de garantir la longévité de cette puissante pile, la tondeuse doit toujours être utilisée avec des lames bien nettoyées, aiguisées et huilées. Mettez quelques gouttes d'huile au-dessus et sur les côtes des lames de la tondeuse. Essayez tout excès d'huile à l'aide d'un chiffon doux et sec. Les vaporiseurs de lubrifiant ne contiennent pas assez d'huile pour assurer un bon graissage, mais suffisamment pour refroidir les lames. Les lames endommagées ou dentelées doivent immédiatement être remplacées afin d'éviter les blessures.

AVERTISSEMENT Ne jamais laisser l'appareil sans surveillance lorsqu'il est en marche ou que le bouton marche-arrêt est sur la position ON. Placez toujours l'appareil en position OFF avant de le placer sur le support de charge ou avant d'utiliser le cordon auxiliaire.

UTILISATION EN MODE SAN FIL

- Reliez la tondeuse du support de charge et appuyez délicatement sur celle-ci pour enclencher les lames.
- REMARQUE : Si la LED ne s'allume pas, il est possible que les lames du support de charge ou de la tondeuse soient encrassées ou grasseuses. Nettoyez les lames à l'aide d'une solution nettoyante appropriée et replacez la tondeuse dans le support de charge. Si la LED ne s'allume toujours pas, suivez la procédure de retour décrite dans la section relative à la garantie et à la réparation.

MISE EN CHARGE DE L'APPAREIL

• Branchez le cordon d'alimentation du support de charge sur une prise de courant dont la tension nominale correspond à votre appareil.

• Assurez-vous que le bouton marche-arrêt de l'appareil est en position "Off" (Arrêt).

• Testez les lames de la tondeuse et de la pile afin de détecter les particules étrangères et salissures éventuelles.

• Assurez-vous que le bouton marche-arrêt de l'appareil est en position OFF.

• Placez la tondeuse contenant la pile dans le support de charge de manière à positionner la partie supérieure de l'appareil face à vous et à aligner les lames de la tondeuse sur les bornes du support de charge.

• La tête de l'appareil est la face qui comporte le bouton marche-arrêt (Figure 1).

• La LED reste allumée en rouge pendant le chargement de l'appareil, jusqu'à ce que celui-ci se charge entièrement. Dès que la pile est entièrement chargée, la LED reste allumée en vert, indiquant que l'appareil est prêt à être utilisé. Ce support de charge comporte une LED de contrôle.

IMPORTANT : Si la tondeuse et la pile de recharge sont simultanément placées dans le support de charge, seule la pile qui se trouve dans la tondeuse se charge. La pile de recharge ne se charge qu'une fois la tondeuse retirée du support de charge.

• Si la LED ne s'allume pas, retirez et

• Placez délicatement la pile de recharge dans le compartiment de recharge prévu dans le support de charge.

• Laissez la pile de recharge dans le support de charge pendant la durée de charge recommandée : 45 minutes.

• Le voyant de contrôle est allumé en rouge pendant le chargement de la pile. Dès que la pile est entièrement chargée, le voyant de contrôle verte s'allume et le chargeur passe en mode charge d'entretien.

IMPORTANT : Si la tondeuse et la pile de recharge sont simultanément placées dans le support de charge, seule la pile qui se trouve dans la tondeuse se charge. La pile de recharge ne se charge qu'une fois la tondeuse retirée du support de charge.

• Placez délicatement la pile dans le support de charge.


• Laissez la pile de recharge dans le support de charge jusqu'à ce que le verrouillage de

• Importante: Si el cargador y la batería de repuesto se instalan simultáneamente en la base de carga, solo se cargará la batería en la cortadora de cable. La batería de repuesto solo cargará cuando se retire la cortadora de cable de la base de carga.

- Insert clipper into charging stand. (See section titled "CHARGING THE UNIT".)

BLADE REPLACEMENT

To Remove:
IMPORTANT! STOP MOTOR; lift blade away from clipper, and slide off tongue. Some models may require you to push in locking mechanism located below the heel of the blade before removing.

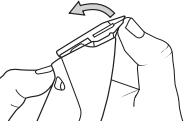

To Replace:
Turn motor on; insert blade on tongue and fully insert blade then snap blade into place.

CLEANING

To receive optimal clipping results and to increase the durability of the clipper and the clipperhead, it is necessary to apply a thin coat of oil between top and bottom blade.

CLIPPERHEAD AND HINGE

Clean clipperheads and hinge between the different clippings.

Charging Station

- Disconnect the charging station from the power supply.
- If necessary, remove hairs from both charging cavities.

- If dirty, clean the contacts (1) and (2) with a dry cloth.

CONTACTS

If required, clean the contacts of the batteries and the clipper with a dry cloth.

WARNING: BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY.

- The battery must be removed from the appliance before it is scrapped.
- The battery is to be disposed of safely.

TROUBLESHOOTING

- The tasks described here for troubleshooting can be done mostly by the operator.
- Some tasks may only be done by specially trained personal or by an authorized service center. These tasks are marked with (S).

Battery Disposal

Do not dispose of batteries with household refuse and do not throw them into fire or water.

Defective or exhausted batteries must be collected and recycled or disposed of in environmentally compatible ways according to directive 2006/66/EC.

