



For product questions contact:

Jarden Consumer Service

USA : 1.800.334.0759

Canada : 1.800.667.8623

[www.oster.com](http://www.oster.com)

©2015 Jarden Products, Inc. doing business as  
Jarden Consumer Solutions. All rights reserved.

Distributed by Sunbeam Products, Inc. doing business as  
Jarden Consumer Solutions, Boca Raton, Florida 33431.



## User Guide



*Safety*



*How to use*



*Cleaning*



*Warranty*

P.N. 182327

GCDS-OST40281-BB

Printed in China

7 Minutes Grill\_15EM1

[www.oster.com](http://www.oster.com)


# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instructions before using.**
2. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
3. To protect against electrical shock, do not immerse UNIT or CORD in water or other liquid.
4. Do not touch hot surfaces. Use handles.
5. This appliance should not be used by children.
6. Extreme caution must be exercised when any appliance is used near children.
7. Unplug from wall outlet when not in use and before cleaning. Allow to cool before cleaning or storing this appliance.
8. Never yank the cord to disconnect the cooking unit from the outlet. Instead, grasp the plug and pull to disconnect.
9. Do not operate any appliance if the cord is damaged. Do not use this appliance if the unit malfunctions, if it is dropped or has been damaged in any manner.
10. In order to avoid the risk of an electric shock, never try to repair the appliance yourself. Take it to an authorized service center for examination and repair. An incorrect reassembly could present a risk of electric shock when the appliance is used.
11. The use of accessories or attachments not recommended by the manufacturer may cause fire, electrical shock or injury.
12. Do not use outdoors or for commercial purposes.
13. Do not use this appliance for purposes other than the one for which it was designed.
14. Do not let the electrical cord hang over the edge of the table or countertop, or touch hot surfaces.
15. Do not place on or near a hot gas or electric burner or heated oven.
16. Use on a heat-resistant, flat level surface only.
17. Use extreme caution when moving any appliance containing hot food, water, oil or other liquids.
18. To disconnect, remove plug from outlet.
19. Always unplug after use. The appliance will remain on unless unplugged.

20. **CAUTION:** This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fire or other damage to persons or property.
21. When using this appliance, provide adequate ventilation above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.

## THIS UNIT IS INTENDED FOR HOUSEHOLD USE ONLY



**POLARIZED PLUG**

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

## EXTENSION CORD USE

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. AN EXTENSION CORD MAY BE USED WITH CARE; HOWEVER, THE MARKED ELECTRICAL RATING SHOULD BE AT LEAST AS GREAT AS THE ELECTRICAL RATING OF THE APPLIANCE. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.


## SAVE THESE INSTRUCTIONS



Thank you for purchasing the Oster® 7 Minute Grill. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements. To learn more about Oster® products, please visit us at [www.oster.com](http://www.oster.com) or call us at 1-800-334-0759.

**Congratulations on your purchase of the Oster® 7 Minute Grill with DuraCeramic™ coating!** This appliance features a DuraCeramic™ non-stick natural ceramic coating which is 4X more durable than other non-stick coatings. This means there's no flaking or peeling off to worry about. Furthermore, the ultra-durable ceramic coating cooks faster than other non-stick coatings, saving time and energy. The natural DuraCeramic non-stick coating also offers greater health and benefits as it's free of PTFE and PFOA. 4X More Durable – DuraCeramic™!


## LEARNING ABOUT YOUR OSTER® 7 MINUTE GRILL

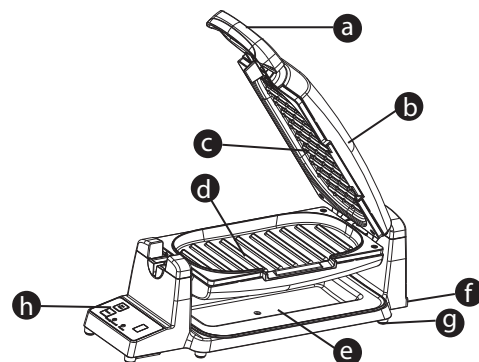

- a Cool touch handle
- b Cover
- c Top DuraCeramic® cooking plate
- d Bottom DuraCeramic® cooking plate
- e Removable drip tray
- f Cord wrap (underneath unit)
- g Skid-resistant feet
- h Timer control

### Timer control

- i LED display
- j Red Power indicator light
- k Green Ready to Cook indicator light
- l Start Timer button
- m Set Timer button

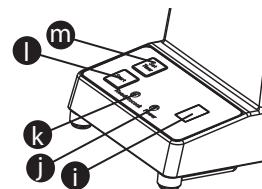



## HOW TO:

### Before First Use

- Remove and peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust.
- Clean the grill and drip tray as instructed in the Care and Cleaning section.
- Place unit on a flat, level surface allowing enough space around the unit for heat to flow without causing damage to walls or cabinets.
- When using your 7-Minute Grill for the first time, you may notice smoke and a slight odor. This is normal when heating the appliance for the first time and there is no reason for concern.

### Using Your 7-Minute Grill

1. Unwrap power cord from cord wrap underneath the base of the unit and plug into a standard electrical outlet.
2. Slide drip tray in place below the bottom cooking plate.

**Tip:** The grill must be in the horizontal position for the drip tray to fit into position.

3. Plug the unit into a standard electrical outlet.
4. The red Power indicator light illuminates. The unit starts preheating.
5. Once the preheating temperature is reached, the green Ready to Cook indicator light illuminates. The LED display shows "0"

6. Using the handle, lift the cover to the open position (Figure 1).
7. Carefully place food to be cooked onto bottom cooking plate.



**Figure 1**

**Note:** You can cook up to 2 servings in this grill; for example, 2 hamburgers. Make sure you do not overload the grill.

8. Using the handle, close the cover. Thick foods may cause grill to not fully shut. If this happens, thin food item so top cooking plate can be closed.
9. Turn the handle to the right (clockwise) to change the grill to the vertical position (Figure 2). As you turn the handle, the cover is locked and cannot be opened until the grill is placed back in the horizontal position.

**Note:** If cooking foods with fillings, like a grilled cheese sandwich, it is recommended to cook in the horizontal position to prevent the filling from being released out of the plates.



**Figure 2**



## Setting the Timer

1. Press the Set Timer button to select a cooking time from 1 to 7 minutes. The unit beeps once for each minute increment.
2. Use suggested cooking times in the Grilling Chart.
3. Once you have selected desired cooking time, press the Start button. The timer starts the countdown process to 0.

**Note:** As the timer counts down, the LED display shows each number flashing to let you know that the cooking cycle countdown is in progress.

4. **If you need to change the selected cooking time:** press and hold the Start button to reset the timer and repeat steps 1 - 3 to select a new cooking time.
5. Once the cooking cycle ends, the unit beeps 4 times.
6. To check your food, turn the handle to the left (counterclockwise) to change the grill to the horizontal position and carefully lift the cover by the handle.

**Warning:** The cooking plates may contain hot steam built up during the cooking cycle, make sure to keep away from the cooking plates when opening the cover. Escaping steam can burn.

7. Carefully open the cover. If additional cooking time is needed, close the cover and set the time. If food is cooked as desired, remove using a plastic utensil like a spatula or tongs.

**Important:** Always use heat-resistant plastic, silicone or wood utensils to avoid scratching the nonstick ceramic coating. It is suggested not to use metal skewers, tongs, forks or knives that may damage the nonstick ceramic coating.

8. To empty the drip tray, allow it to cool completely before removing it from the bottom of the unit.
9. Remove the plug from electrical outlet.

## Tips & Recommendations

- Do not overfill the cooking plates.
- If the first time you cook your food, it is not cooked to your liking, you can adjust the time as instructed under "Setting the Timer" section.
- To prevent heat loss, do not open the cover frequently.
- Some frozen foods may need to be thawed before cooking on the grill (please refer to any notes in the cooking chart if this is needed).



## COOKING CHART

FOOD	AMOUNT	WEIGHT	GRILL POSITION	TIME
<b>MEATS (Fresh)</b>				
Beef Hamburger	1 or 2	5 oz., each	Vertical	4 to 5 minutes to medium (160° F)
Turkey Burger	1 or 2	5 oz., each	Vertical	4 to 5 minutes to medium (160° F)
Boneless steak	1	8 oz	Vertical	6 to 7 minutes to medium (160° F)
Boneless Chicken Breast	1	7 oz	Vertical	6 to 7 minutes (170° F)
Boneless Pork Chop	1	5 ½ oz	Vertical	6 to 7 minutes (160° F)
Sausage Patties	3	1 ½ oz.,ea	Vertical	6 to 7 minutes (165° F)
Sausage Links	4	1 oz.,ea	Vertical	6 to 7 minutes (165° F)
Hot dogs	2	1 ½ oz.,ea	Vertical	4 to 5 minutes (165° F)
<b>MEATS (Frozen)</b>				
Beef Hamburger	1	5 ¼ oz	Vertical	6 to 7 minutes to medium rare
<b>VEGETABLES</b>				
Zucchini	2 to 3 strips or 4 to 5 slices	½-inch thick	horizontal	4 to 5 minutes
Yellow squash	2 to 3 strips or 4 to 5 slices	½-inch thick	horizontal	4 to 5 minutes
Onion slices	2	½-inch thick	horizontal	6 to 7 minutes
Asparagus spears	4 to 6	Medium to large	horizontal	4 to 5 minutes
Green or red pepper	1 medium	½-inch slices or strips	horizontal	4 to 5 minutes



FOOD	AMOUNT	WEIGHT	GRILL POSITION	TIME
<b>FRUIT</b>				
Pineapple slices	2	½-inch slices	horizontal	3 to 4 minutes
Peach halves	2	Medium peach stone removed	horizontal	4 to 5 minutes
<b>FISH</b>				
Salmon fillet	1	6 ½ oz	horizontal	4 to 5 minutes (145°F)
<b>SANDWICHES</b>				
Grilled Cheese	1	2 oz cheese	horizontal	2 to 3 minutes
Grilled Ham and Cheese	1	1 ½ oz cheese And 1 ½ oz ham	horizontal	2 to 3 minutes

Our lives are busy and hectic but the Oster® 7 Minute Grill can help you cook and serve freshly made, healthy meals for you and those you love... in under 7 minutes. Visit [www.oster.com](http://www.oster.com) for delicious and inspiring recipes that are quick and easy to make.



## CARE & CLEANING

- Make sure your 7-Minute Grill is unplugged and allow it to cool completely before cleaning.
- Wipe exterior surfaces with a soft, damp cloth. If further cleaning is needed, you can clean it with water and mild detergent. Dry thoroughly.
- Remove and empty drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface. Rinse and dry thoroughly with a clean, soft cloth.
- Wipe the cooking plates with a damp, soft cloth, sponge or paper towel to remove food residue.

**NOTE:** To remove stubborn stains from the DuraCeramic™ nonstick coating:

1. Sprinkle some baking soda on the stained area.
  2. Add enough water to moisten the baking soda, making a paste like texture.
  3. Let sit for a few minutes (for tougher stains let sit up to an hour).
  4. Lightly scrub with a plastic scouring pad or damp cloth, rinse and dry thoroughly.
  5. Repeat if necessary.
- Never immerse grill, cord or plug in water or any other liquid.
  - Do not use abrasive cleaners or scouring pads that can scratch the nonstick ceramic or surface.
  - DO NOT place in the dishwasher.
  - NEVER clean or rinse the appliance under running water.

### Storage

For your convenience, the power cord can be stored using the cord wrap underneath the unit. Simply insert it into the clips to keep it in place.





# 1 Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

## What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

## How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

