FoodSaver[®] QUICK START GUIDE – V2244



Easy-Lock Latch

Accessory Port



Vacuum Channel

Easy Clean Removable Drip Tray

START HERE TO MAKE A BAG FROM A FOODSAVER[®] ROLL:



MEASURE AND CUT ROLL Allow enough room to hold item

while leaving an extra 3 inches at the top. Cut roll straight across.



PLACE BAG ON **HEAT SEAL STRIP** Open the appliance lid and place

an open end of your bag in the center of the removable drip tray. This ensures perfect placement over the heat seal strip.



CLOSE AND LOCK THE LID Close the lid, and turn the latch to "Operate". Push the lever firmly all the way down to the "Operate" text.



SEAL END OF ROLL **TO CREATE A BAG** Press "Seal". A red light will turn on, indicating the appliance is sealing. When the red indicator light turns off, sealing is complete. Move on to Step 5 to vacuum seal your items!

START HERE TO VACUUM SEAL WITH FOODSAVER® BAG:



FILL VACUUM SEALING BAG Do not overfill bags. Leave 3 inches between contents and the opening of the bag.



PLACE BAG IN VACUUM CHANNEL Open the appliance lid and place

the open end of your bag in the center of the removable drip tray. This ensures perfect placement in the vacuum channel.

Note: Make sure the opening of the bag is clean and straight. A wrinkle or moisture can impact the seal.



CLOSE AND LOCK THF I ID

Close the lid, and turn the latch to "Operate". Push the lever firmly all the way down to the "Operate" text.



VACUUM SEAL YOUR ITEMS Press "Vac/Seal". A green light will turn on, indicating the appliance is vacuuming. Next, a red light will turn on, indicating the appliance is sealing. When the red indicator light turns off, vacuum sealing is complete. Turn the latch to "Open" to remove your bag.

Let appliance cool for 20 seconds after each use. Store your appliance with the latch in the open position.

TIPS FOR SEALING MOIST AND LIQUID ITEMS: Pre-freeze until solid. Moisture or food material (such as juices, grease or crumbs) can prevent the bag from sealing properly. Wipe the top of your bag and then seal.

MORE QUESTIONS? Call 1-877-777-8042 or consult your User Manual