

## CLEANING/STORAGE

### FAN CLEANING

- Always unplug the fan before cleaning or period after disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzine.

### Fan Blade Cleaning

1. To access the fan blade, remove the front grill and securing screw.
2. Clean the fan blade, front and rear grills with a soft, moist cloth.
3. Replace blade, tighten securing screw and securely fasten the front grill (see detailed instructions in the Fan Head Assembly section).

### Fan Head, Base and Pole Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base, pole and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

### FAN STORAGE INSTRUCTIONS

Your fan should be stored in the off-season in its original box. It is important to keep it in a safe, dry location.

- We recommend using the original (or appropriately sized) box.
- Please remember to protect the fan from dust or moisture.

If you have any questions regarding your product or would like to learn more about other Bionaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at [www.bionaire.com](http://www.bionaire.com).

## WARRANTY INFORMATION

### 3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### What are the limits on JCS’s Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### How to Obtain Warranty Service

 
#### In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**



pure indoor living

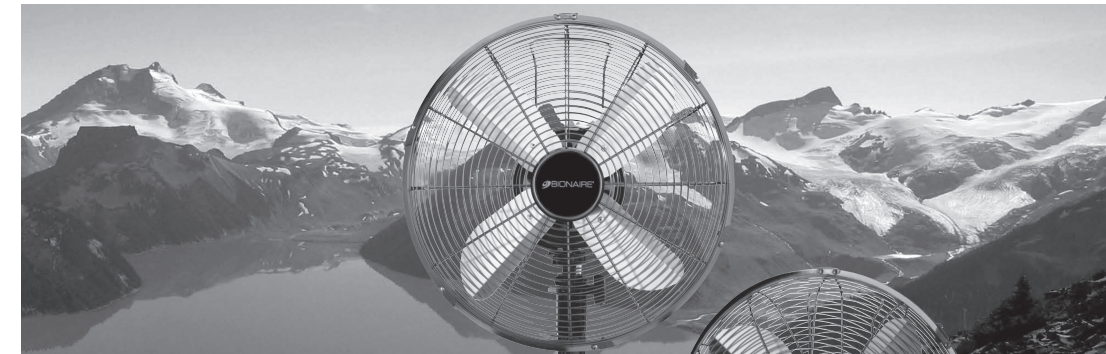

## 2-IN-1 DUAL Desk/Stand FAN

MODEL: BSF1211C

## Instruction Leaflet

Read instructions before operating. Retain for future reference.

 


Questions? Comments? Call 1-800-253-2764 in North America or visit our website at [www.bionaire.com](http://www.bionaire.com).

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.

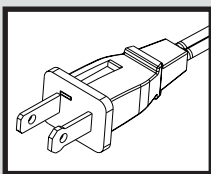

**THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.**

**DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.**

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of electrical shock and injury to persons, do not use in window.
19. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
20. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

## FEATURES - OPERATIONS

### ASSEMBLY INSTRUCTIONS

Assembly Time: 10-15 minutes.

 
Tools Required: Phillips head screw driver.

**NOTE:** Make sure you remove all contents from the package. Please check packaging materials for parts that could be required to operate your fan.

### Base/Pole Assembly

You will need the base cover (R), weight (S), outer pole (P), washer (T) and T-shaped locking lever (U).

1. Turn the base cover upside down and place the weight into the base cover.
2. Insert the threaded end of the T-shaped locking lever into the hole of the washer, weight and through the base cover.
3. While holding the base cover and weight with one hand vertically, connect the outer pole to the base,

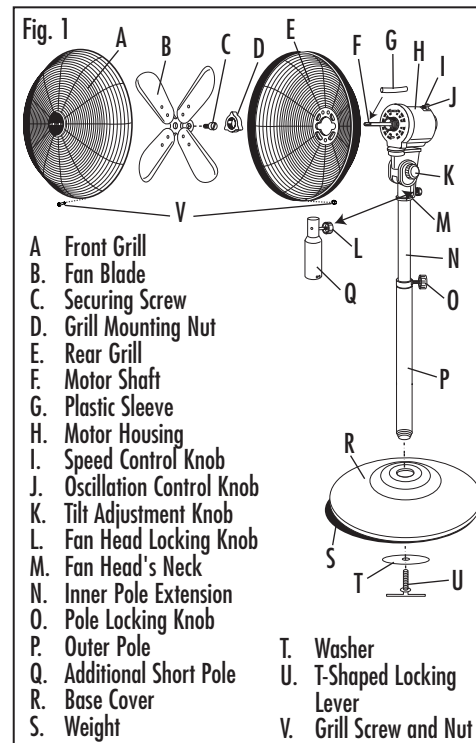

sliding the T-shaped locking lever into the bottom of the outer pole with your other hand.

4. Turn the T-shaped locking lever clockwise to securely attach the pole to the base.
5. Set the base on the floor, weight side down.

### Fan Head Assembly

You are now ready to assemble the fan head.

1. Remove the protective sleeve (G) and unscrew grill mounting nut (D) by turning counter-clockwise from the motor shaft (F). Position the rear grill (E) over the motor shaft (F), making certain that the vertical slots at the top and bottom of the rear grill fit over the prongs on the motor housing (H). Make sure that the carry handle is topmost on the motor assembly.
2. Secure the rear grill (E) in its place using the rear grill mounting nut (D). Turn this nut clockwise and tighten firmly.
3. Loosen the securing screw (C) on side of the fan blade (B) to slide the fan blade onto the motor shaft (F) through the rear protrusion. Make sure the securing screw (C) rest on the notch (flat side) of motor shaft and tighten the screw (C).

4. Centre the front grill (A) by aligning the Bonaire® logo on the logo plate so that it is horizontal and parallel with the floor. Then place the bracket at the top over the front and rear grills with the hole on the bracket going through the center vertical bar. Fasten the other clips, making sure they go over both the front and rear grills.
5. Replace grill screw and nut (V) and tighten with screw driver.

### Final Assembly

**NOTE:** The fan head locking knob (L) is attached with the additional short pole (Q) when shipped.


1. Slide the inner pole extension (N) up from the outer pole (P), first loosening the pole locking knob (O), to securely hold this position. Tighten the pole locking knob (O).
2. Place the fan head assembly into this extension pole, inserting the fan's head neck (M) into the pole opening.
3. Add the fan head locking knob (L) to the hole in the fan head's neck (M), making sure holes are aligned, and tighten.

## FEATURES - OPERATIONS CLEANING/MAINTENANCE

### Converting to a Table Fan

An additional short pole (Q) is supplied which allows the fan to be converted into a table fan (see Figure 2). To change to this short pole, remove the fan head assembly from its position on top of the inner pole extension (N) and unscrew the T-shaped locking lever (U) at the base. Remove the outer pole (P), replace with the short pole (Q) and reassemble as detailed above.

 Fig. 2

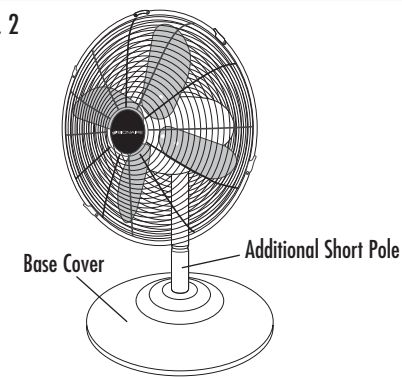

### OPERATING INSTRUCTIONS

1. Set fan base on a dry, level surface.
2. Plug cord into any standard 120 volt AC outlet. Please make sure the Speed Control Knob is in the OFF (O) position. Speed Control Knob is located on the Fan Motor Housing.
3. The SPEED is adjusted by turning the Speed Control Knob to the desired setting, 0-3-2-1.
4. The OSCILLATION control knob is located on the top of the Fan Motor Housing. To start Oscillation, push Control knob down. To stop Oscillation, pull Speed Control Knob up.

### ADJUSTMENT INSTRUCTIONS

#### Tilt-Adjustment

Follow these instructions to tilt the Fan Head for upward angle air movement.

1. To change the tilting angle of the fan head, simply loosen the tilt-adjustment knob (K).
2. Move the fan head to the desired angle and firmly tighten the tilt-adjustment knob to lock into place.

### Height Adjustment

Follow these instructions to adjust the height of the fan.

1. Turn the pole locking knob (O) counter-clockwise to loosen the pole.
2. Adjust the pole to the desired height and firmly tighten the locking knob in a clockwise direction.

### CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your fan. Please remember:

#### REPLACEABLE FUSE

If your (5 Amp, 125 Volt) replaceable fuse blows, please order a new fuse at 1-800-253-2764. Follow the below instructions to replace the fuse on the plug.

#### User Servicing Instructions

1. Unplug your fan. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover down towards the prongs.

**Note:** Ensure that fuse cover is completely open before attempting to remove fuse.

3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse (see Fig. 3).
4. Place plug on a solid, flat surface. Insert new 5 Amp, 125 Volt fuse into fuse compartment and use a small screwdriver to secure the metal ends of the fuse into the compartment.

**Caution:** Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.

5. Slide fuse cover closed completely. If fuse cover is difficult to close, make sure fuse is secured in place completely by pressing down on metal ends of the fuse.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

