

# Calphalon®



PRECISION CONTROL  
MULTI  
GRILL

## USER MANUAL

[WWW.CALPHALON.COM](http://WWW.CALPHALON.COM)

MODEL: CKCLIG3




# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use. Misuse can cause injuries.
13. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.

# SAVE THESE INSTRUCTIONS

## HOUSEHOLD USE ONLY

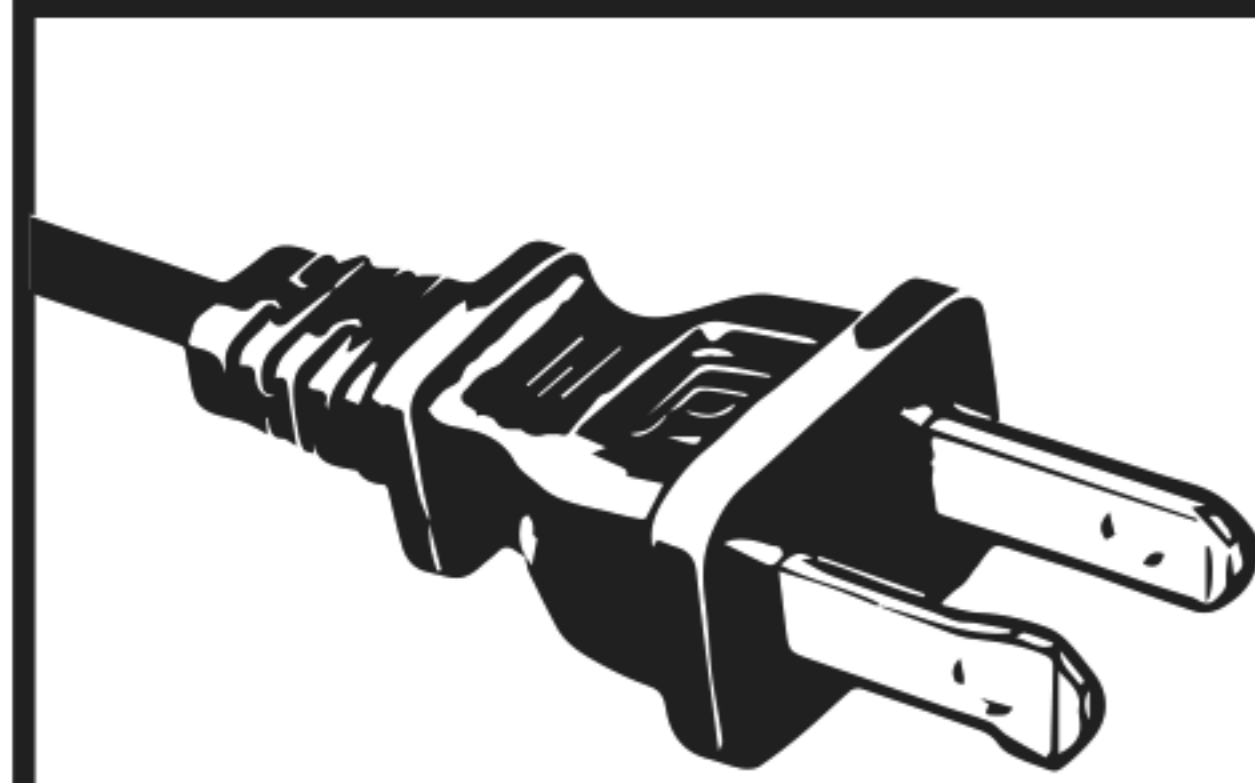

### POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

### POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

Do not pull, twist or otherwise abuse the power cord.

### NOTICES:

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your Multi Grill to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

# PRODUCT DIAGRAM

1. Temperature Control Dial
2. LED Indicator Lights
3. Removable Cooking Plates\*
4. Removable Drip Tray\*
5. Hinge Release Lever
6. Cooking Plate Release Button
7. Lid Handle
8. Cord Storage (underneath, not shown)

\*These parts can be replaced on [calphalon.com](http://calphalon.com) or at 1-800-809-7267

## PREPARING FOR USE

**NOTE:** Before you plug in the Multi Grill, make sure Temperature Control Dial is in the OFF position.

- Remove all packaging before using the Multi Grill.
- Remove and wash the Removable Cooking Plates and Removable Drip Tray, per cleaning instructions in this manual. Dry thoroughly.
- Re-attach the Removable Cooking Plates by aligning the plate guides with the clips, and pushing the plates gently into position.
- Place the appliance on a flat, non-temperature-sensitive surface, and do not put anything on top of it.
- Never immerse the grill, power cord or plug in water or any other liquid.



# USING YOUR MULTI GRILL

**NOTE:** Always ensure the appliance is OFF before plugging in.

- Insert the Removable Drip Tray into the slot at the rear of the Multi Grill. It collects excess fat. Do not use your Multi Grill without the Removable Drip Tray in place.
- With the lid closed, plug in the Multi Grill into the outlet, and use the Temperature Control Dial to select the desired cooking temperature, ranging from Low to 450°F.
- Once the Multi Grill is turned on and the desired temperature selected, the PREHEATING light will illuminate and the preheating process will start.
- When the Multi Grill reaches the selected temperature, the PREHEATING light will turn off and the READY light will illuminate.
- Lift the lid and place the food onto the bottom Removable Cooking Plate. Then close the lid.
- The Multi Grill will operate continually at the selected temperature, without a defined shut off time.
- Using the Lid Handle, lift the lid after the food has cooked for the desired length of time.
- Remove the food using non-metallic utensils. Never use metal tongs or a knife as these can cause damage to the ceramic coating.
- The Multi Grill can be opened to 180° (horizontal) for open grilling. To open to 180°, lift the Lid Handle to open position, and with the other hand, slide the Hinge Release Lever up. Push Lid Handle back and down until the Lid is laying horizontal beside the bottom cooking surface.
- Do not leave the grill plugged in if it is empty or unattended. Turn the Multi Grill off and unplug it from outlet.

**NOTE:** For further details on product features and usage instructions, please visit [www.calphalon.com](http://www.calphalon.com)

# CLEANING & MAINTENANCE

- Always clean the Multi Grill after each use.
- Always unplug the Multi Grill, and allow it to cool before cleaning.
- For easy cleaning, open the Multi Grill and remove the Cooking Plates one at a time.
- To remove the bottom Cooking Plate press and hold the Cooking Plate Release Button on the side of the base of the Multi Grill. With the other hand, lift the bottom Cooking Plate from the base and pull forward. To remove top Cooking Plate, press and hold the Cooking Plate Release Button on the side of the top housing. With the other hand, pull the Cooking Plate slightly forward and then slide up and off.
- Immerse Cooking Plates in warm, soapy water and rinse with clean water. Wipe dry with a soft cloth.
- Slide out the drip tray and discard the contents. Immerse the drip tray in warm soapy water and rinse with clean water, or clean using the dishwasher. Wipe dry with a soft cloth. Wash after each use.
- Use a damp cloth to wipe clean the exterior of the Multi Grill as needed.
- Ensure that the Removable Cooking Plates are correctly re-inserted by aligning the plate guides with the clips, and pushing the plates gently to lock them into position.
- Close the lid, and insert the drip tray into the slot at the rear of the unit.
- Wrap the cord in the cord storage area at the bottom of the unit.
- No other servicing should be performed.

**CAUTION:** DO NOT IMMERSE PRECISION CONTROL MULTI-GRILL IN WATER OR ANY OTHER LIQUID.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

## 1 YEAR WARRANTY

For additional information on your Calphalon Precision Control Multi Grill and more detailed warranty information, visit us at [www.calphalon.com](http://www.calphalon.com) or call us at 1-800-809-7267



P.N. 194927