

Calphalon®



DIGITAL SAUTÉ
SLOW
COOKER

USER MANUAL

WWW.CALPHALON.COM

MODEL: SCCLD1




IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. The heating base is subject to residual heat from cooking cycle. Do not touch heating base immediately after removing Cooking Pot. Allow to cool before handling.
14. Use caution when opening the lid during or after a cooking cycle. Escaping steam can cause burns.
15. Do not use appliance for other than intended use. Misuse can cause injuries.
16. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
17. Avoid sudden temperature changes, such as adding refrigerated foods or cold liquids into a heated pot.
18. The slow cooker lid is made of tempered glass. Always inspect the lid for chips, cracks or any other damage. Do not use the glass lid if it is damaged, as it may shatter during use.
19. CAUTION: To protect against electrical shock and product damage, do not cook directly in the heating base. Cook only in the Cooking Pot provided.
20. WARNING: Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

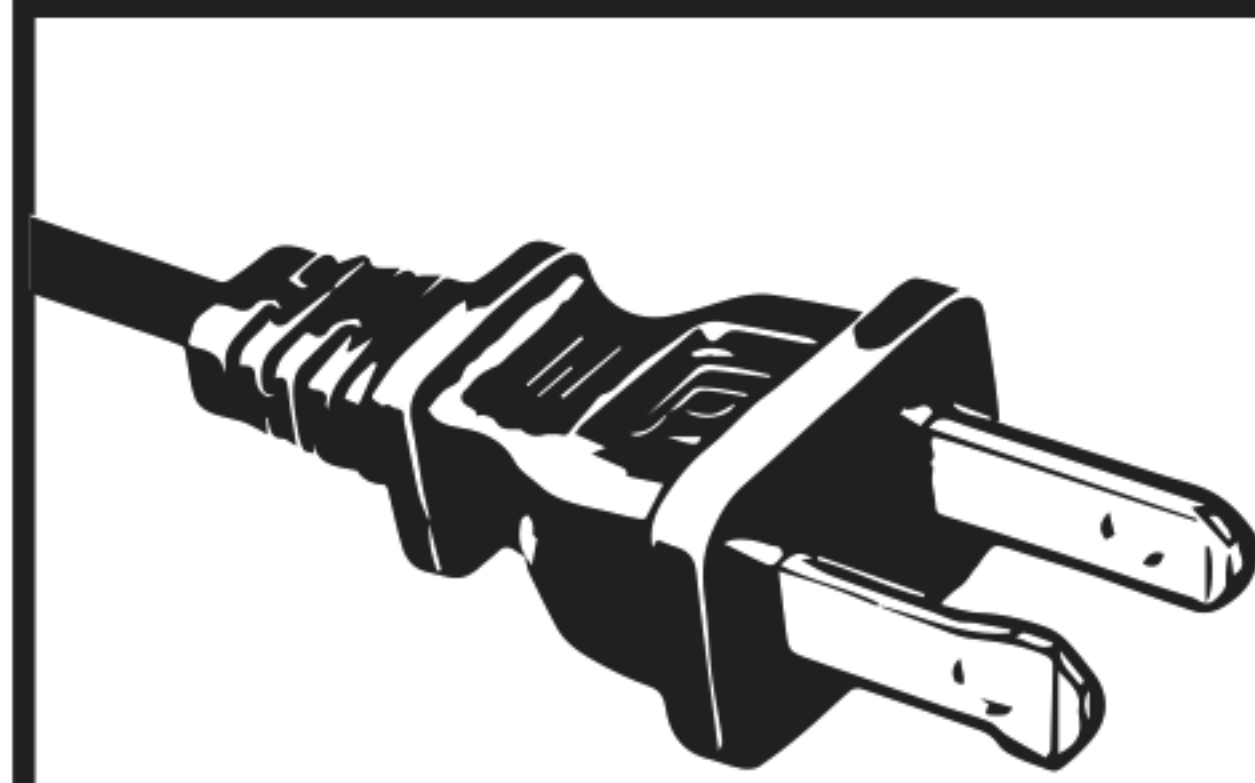

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS:

A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

NOTICES:

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your slow cooker to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.
- Please use caution when placing your Cooking Pot on a ceramic or smooth glass cook top stove, countertop, table or other surface. Due to the nature of the Cooking Pot, its rough bottom may scratch some surfaces if caution is not used. Always place heat resistant protective padding under the Cooking Pot before setting on a table, countertop or other surface.

PRODUCT DIAGRAM

1. Glass Lid* - Not Oven Safe
2. Ceramic-Coated Cooking Pot* - Oven, Stove Top (gas, electric) Safe & Induction Capable
3. Heating Base
4. Carrying Handles
5. Time Setting Display
6. Add (+), Subtract (-), and Cancel Timer Buttons
7. Temperature Control Dial

*These parts can be replaced on calphalon.com or at 1-800-809-7267



PREPARING FOR USE

- Before you use your slow cooker, remove all packaging.
- Wash the Glass Lid and Cooking Pot as per the Cleaning instructions in this manual. Dry thoroughly before use.
- Never immerse the heating base, power cord or plug in water or any other liquid.
- During initial use of this appliance, some slight smoke or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

HOW TO USE YOUR SLOW COOKER

- Place the Cooking Pot into the heating base, add your ingredients and cover with the lid. Plug in your slow cooker.
- Use Temperature Control Dial to select High/Low/Warm setting and then press timer buttons "-/+ " to set cooking time. Timer counts up in 15 minutes increments. For faster time selection, hold down "-/+ " buttons. By selecting temperature without selecting the desired time, the slow cooker operates continually in that mode without a defined shut off time. Select the time based on the length of time indicated in the recipe.
- When unit reaches allocated cooking time, unit will default to "Auto Keep Warm".
- To cancel the cooking timer, press CANCEL TIMER button. The Slow Cooker will continue to operate in the selected mode.
- To stop cooking, rotate Temperature Dial to WARM or OFF setting.
- Turn off slow cooker by rotating the knob counter-clockwise to OFF.
- The Cooking Pot can be used on the stove top (electric, gas or induction) to sauté and sear food. The Cooking Pot can then be transferred to the Heating Base to slow cook.
- The Cooking Pot can be used in the oven without the Glass Lid.

NOTE: Use pot holders when transferring Cooking Pot.

NOTE: The WARM setting is ONLY for keeping food warm that is already at cooked temperature. DO NOT cook or REHEAT on the WARM setting.

We do not recommend using the WARM setting for more than 4 hours.

USAGE NOTES

- If the main power has been interrupted (power cut), the display and lights will default to off setting when the power is restored; settings will have been lost. As a result, the food may be unsafe to eat. If you are unaware of how long the power was off, we suggest you discard the food inside.
- If desired, you can manually switch to the WARM setting when your recipe has finished cooking, by turning the knob to WARM.
- To avoid over or under-cooking, always fill the cooking bowl ½ to ¾ full and follow the recommended cooking times.
- Always cook with the lid on for the recommended time. To allow the heat to build up efficiently, do not remove the lid during the first two hours of cooking.
- Always wear pot holders when handling the lid or removable cooking bowl.
- Unplug when cooking has finished and before cleaning.

Part	Dishwasher Safe	Oven Safe	Microwave Safe	Refrigerator Safe
Lid	Yes	No	No	Yes
Cooking Pot	No	Yes	No	Yes

NOTE: For further details on product features and usage instructions, please visit www.calphalon.com

CLEANING & MAINTENANCE

- A.**
- ALWAYS unplug your slow cooker from the electrical outlet, and allow it to cool before cleaning.
 - CAUTION: Never immerse the heating base, power cord or plug in water or any other liquid.
 - Wash the glass lid and removable Cooking Pot with hot, soapy water. Do not use abrasive cleaning compounds or scouring pads.
 - A cloth, sponge, or rubber spatula will usually remove any food residue.
 - We recommend that you wash the removable Cooking Pot by hand only, with a non-abrasive cleaning product and cloth, to preserve the ceramic coating.
 - After cleaning by hand allow the Cooking Pot to air dry before storing.
 - The outside of the heating base may be cleaned with a soft cloth and warm, soapy water. Wipe dry. Do not use abrasive cleaners.
- B.** This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning & Maintenance Section should be performed by an Authorized Service representative only. See Warranty Section.

3 YEAR WARRANTY

For additional information on your Calphalon Digital Sauté Slow Cooker and detailed warranty information, visit us at www.calphalon.com or call us at 1-800-809-7267.



P.N. 194919