

## CLEANING / MAINTENANCE

6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

### FAN CLEANING


- Always unplug the fan before cleaning.
- Do not allow water to drip on or enter into fan housing.
- Be sure to use a soft cloth moistened with a mild soap solution.
- Do not use gasoline, thinner or benzene as a cleaner.

Clean the fan grills, extender screen, and extender panels with a soft, damp cloth. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water. Also, using a soft bristle brush attachment, a vacuum cleaner may be used to extract dust buildup on the grill areas. Note to turn the fan off before cleaning.

### FAN STORAGE

When storing your fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan head from dust. We strongly recommend using the original box from purchase.

### WINDOW FAN ACCESSORIES

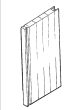Window Fan Extender Panel		To order please go to <a href="http://www.holmesproducts.com">www.holmesproducts.com</a> or call 1-800-546-5637
------------------------------	---	---

If you have any questions regarding your product or would like to learn more about other Holmes® products, please contact our Consumer Service Department at 1-800-546-5637 or visit our website at [www.holmesproducts.com](http://www.holmesproducts.com).

## WARRANTY INFORMATION

### 5 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of five years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

#### What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

#### How to Obtain Warranty Service

##### In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

##### In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

# Holmes®

## Owner's Guide

HAWF3095



# Window Fan with Digital Control

**PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS**

© 2011 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

153632/9100010012575  
GCDS-HOL22447-JC

HAWF309511EM1

 
Printed In China

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
19. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

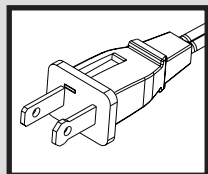

**THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.**

**DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.**

## FEATURES - OPERATIONS

### INSTALLATION INSTRUCTIONS

**NOTE: MAKE SURE YOU REMOVE ALL CONTENTS OF THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN.**

The window fan comes fully assembled and is ready for immediate installation.


This window fan has been designed to fit double-hung windows with minimum openings of 24 inches (60 cm) wide and 12 inches (30 cm) high.

**NOTE: THIS FAN IS DESIGNED AND RECOMMENDED FOR USE WITH A SCREEN IN THE WINDOW.**

#### Window Fan Installation

1. Align the Window Fan horizontally in the window with the controls facing you and the Built-In Extender Panel (J) to the right.
2. Set the fan into your window opening.
3. If the fan does not fit snugly to the left and right of the window casing, pull out the Built-In Extender Panel (J) until the fan sits safely in your window.
4. If the fan still does not fit snugly attach the Slider Safe® Extender Panel located in the polyfoam packaging in the original box. Align the slot in the Slider Safe® Extender Panel along the tab located on the left side of your Window Fan. Slide the Slider Safe® Extender Panel completely down the tab until it is flush on both the top and bottom of the Window Fan.

 Figure 1

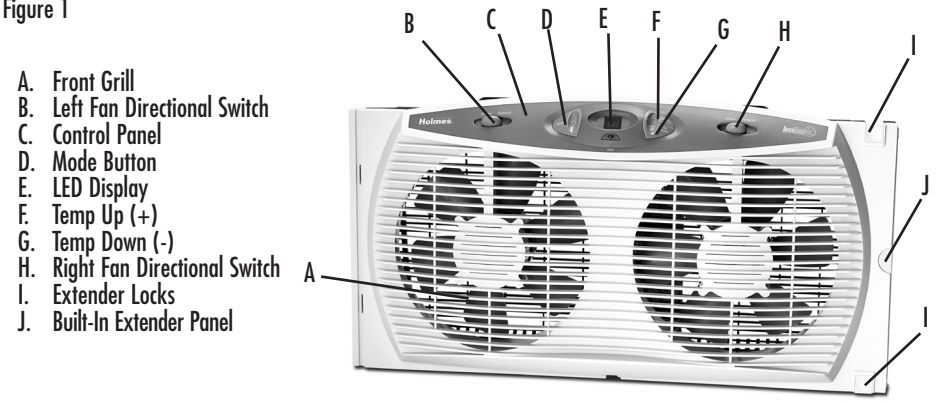

5. To keep the fan in place, carefully close the window so that the bottom edge of the window rests on the flat area on the top of the fan.

#### For Slider Windows

1. Set the Fan Vertically in your window opening with the left side of the fan situated on the bottom and the Built-In-Extender panel on top.
2. Set the fan into your window opening (note that in most cases the window screen does not have to be removed or left open).
3. If the fan does not fit snugly to the top and bottom of the window casing, attach the Slider Safe® Extender Panel and adjust the built-in extender screen until the fan fits securely in your window.

**WARNING: BE SURE FAN IS SECURELY INSTALLED IN YOUR WINDOW AT ALL TIMES. DO NOT LEAN OR PUSH ON THE FAN WHILE IT IS IN THE WINDOW.**

### OPERATING INSTRUCTIONS

1. Plug cord into any standard 120 volt AC outlet.
2. To turn the fan on and control the speed, press the Mode Button (D). Note that pressing the mode button will allow you to cycle through the speed setting (High = 3, Med = 2, Low = 1) as well as the Automatic Thermostat Temperature settings (Auto High = A3, Auto Medium = A2, Auto Low = A1). 0 indicates the Off position.

## FEATURES - OPERATIONS CLEANING / MAINTENANCE

3. Set the airflow direction by sliding the fan directional switches located above each fan blade. Note that the fan blades work independently from one another and can be used for air intake (bring fresh air in from outside), exhaust (push air out from within the room) or exchange (cycles air in and out of the room simultaneously).

#### Auto Mode

Your fan is equipped with the AccuTemp Plus™ Digital Thermostat that will automatically turn the fan ON and OFF depending upon the preset comfort temperature. This is ideal for nighttime operation when temperatures can drop below comfort levels.

#### Setting Auto Mode

1. Press the Mode button (D) to scroll to the desired auto speed setting (A3, A2, or A1).
2. Choose the desired temperature setting by pressing the Temp Up (+) or Temp Down (-) buttons. You may select a temperature between 60 and 80 degrees Fahrenheit. Once the desired temperature is set, the digital display will return to show the ambient room temperature. View the set temperature by pressing either the Temp Up (+) or Temp Down (-) buttons. For example, if you set your thermostat to 75 degrees then your fan will run until the set temperature is reached. Once the temperature rises above the set temperature the fan will automatically turn on again.

**IMPORTANT:** If the fan does not start in the Auto mode, please be sure that the set temperature is below the current room temperature. Lower the set temperature if you would like for the fan to start or switch over to the manual speed modes.

#### Setting the Timer

1. Hold both the Temp Up (+) and Temp Down (-) buttons down until the digital display flashes "00".
2. Press the (+) or (-) buttons to change time in 1 hour increments. Note selection ranges from 1 to 16 hours. When in the timer mode, the time remaining will be displayed.

#### NOTE:

- The Timer Light will glow indicating the timer function is active.

- If Timer is set when fan is ON, the time displayed will turn the fan OFF once elapsed. If Timer is set when fan is OFF, the time displayed will turn the fan ON. (The default ON speed setting is Manual Low)
- Timer function can be turned off by pressing the MODE key at any time.

### CLEANING / MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your fan. Please remember:

#### REPLACEABLE FUSE

If your (5 Amp, 125 Volt) replaceable fuse blows, please order a new fuse at 1-800-546-5637. Follow the below instructions to replace the fuse on the plug.

#### User Servicing Instructions

1. Unplug your fan. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover down towards the prongs.

**NOTE:** Ensure that fuse cover is completely open before attempting to remove fuse.

3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse. (see Figure 2)

4. Place plug on a solid, flat surface. Insert new 5 Amp, 125 Volt fuse into fuse compartment and use a small screwdriver to secure the metal ends of the fuse into the compartment.

**CAUTION:** Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.

5. Slide fuse cover closed completely. If fuse cover is difficult to close, make sure fuse is secured in place completely by pressing down on metal ends of the fuse.

