

TROUBLESHOOTING STORAGE INSTRUCTIONS/REPLACEMENT ACCESSORIES

TROUBLE	PROBABLE CAUSE	SOLUTION
Unit does not turn on	Not plugged in. Humidistat is set too low	Plug in unit. Set humidistat to high
Mist output minimal to none	Mist is invisible. Filter has not absorbed water	Wait 30 minutes for filter to absorb water
Filter turns brown	Your filter needs to be washed	Wash your filter (HWF65P/Part Number 7400001000425). Follow cleaning instruction located in manual In areas with particular hard water your filter will need to be cleaned frequently
FilterClean™ is not working	Takes 60 minutes to register	Allow the humidifier to run continuously for 60 minutes, FilterClean™ indicator will move from the OFF position and indicate your filter condition
Humidifier continuously displays 21%	Humidity at the humidifier is at or below 21%	Continue to operate humidifier to raise the room humidity
Humidifier continuously displays 90%	Humidity at the humidifier is at or above 90%	Stop operating the humidifier if the humidity level is too high

STORAGE INSTRUCTIONS

When not using your humidifier for an extended period of time:

1. Follow Filter Washing Procedure before storage. Ensure that the filter is completely dry before being stored.
2. Clean, rinse and thoroughly dry the humidifier as directed in weekly maintenance. DO NOT leave any water in the unit when storing. Leaving water in the unit may render the unit for the following season.
3. Place the humidifier in the original carton and store in a cool, dry place.

REPLACEMENT ACCESSORIES

To order the replacement accessories you can do any of the following:

- Visit your local retailer
- Go to www.holmesproducts.com
- Call consumer service at 1-800-546-5637

FREQUENTLY ASKED QUESTIONS

FREQUENTLY ASKED QUESTIONS

QUESTIONS

ANSWER

What are the variables that affect run time?

The estimated run time for this humidifier is based on average room conditions. The actual run time of your humidifier is dependent on numerous variables such as:

1. Air exchange in the room where the humidifier is placed.
2. Room construction where the humidifier is placed.
3. Temperature of the room where the humidifier is placed.
4. Humidity levels in the room where the humidifier is placed.
5. Movement of occupants and the opening and closing of doors in the room where the humidifier is placed.
6. Home furnishings in the room where the humidifier is placed.

How do I remove film on water tank?

See Daily Maintenance instructions. Regular cleaning is recommended.

How can I extend the run time?

1. Run your unit on the lowest setting.
2. If your unit has electronics, set it to your desired humidity level. The unit will turn on and off, which will extend the run time.
3. Fill the tank all the way full, place it on the base, let the water empty into the base until it stops bubbling, then refill the tank full again. This ensures maximum water capacity and will extend run time.

If you have any questions regarding your product or would like to learn more about other Holmes® products, please contact our Consumer Service Department at 1-800-546-5637 or visit our website at www.holmesproducts.com.

WARRANTY INFORMATION

2 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of two years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

Holmes®



**Owner's Guide
HM1865P**

INFO HOT-LINE: If, after reading this owner's guide you have any questions or comments, please call 1-800-546-5637 and a Customer Service Representative will be happy to assist you.
FILTER# : HWF65P/Part Number 7400001000425
FILTER TYPE : PERMANENT WICK


Cool Mist Humidifier with Permanent Filter

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. Keep the cord out of heavy traffic areas. To avoid fire hazard, NEVER put the cord under rugs or near heat registers.
4. DO NOT place humidifier near heat sources such as stoves, radiators, and heaters. DO locate your humidifier on an inside wall near an electrical outlet. The humidifier should be at least 4 inches (10 cm) away from the wall for best results.
5. NEVER place humidifier in an area where it is accessible to children. NEVER use humidifier in a closed room, particularly where a child may be sleeping, resting, or playing (a closed room may result in excessive humidity).
6. **WARNING:** Do not attempt to refill humidifier without first unplugging the unit from its electrical outlet. Failure to heed this warning may cause personal injury. Be sure to unplug the unit by pulling on the plug and not the cord.
7. Never place anything over moisture outlet when the unit is running.
8. NEVER drop or insert any object into any openings.
9. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
10. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer may cause hazards.
11. DO NOT use outdoors.
12. Always place humidifier on a firm, flat, level surface. A waterproof mat or pad is recommended for use under the humidifier. NEVER place it on a rug or carpet, or on a finished floor that may be damaged by exposure to water or moisture.
13. DO NOT allow the Moisture Outlet to directly face the wall. Moisture could cause damage, particularly to wall paper.
14. Humidifier should be unplugged when not in use.
15. NEVER tilt, move, or attempt to empty unit while it is operating. Shut off and unplug before removing the water tank and moving the unit.
16. This humidifier requires daily and weekly maintenance to operate appropriately. Refer to daily and weekly cleaning procedures. Use only cleaners and additives recommended by the manufacturer.
17. NEVER use detergents, gasoline, glass cleaner, furniture polish, paint thinner, or other household solvents to clean any part of the humidifier.
18. Excessive humidity in a room can cause water condensation on windows and some furniture. If this happens, turn the humidifier OFF.
19. Do not use humidifier in an area where humidity level is in excess of 50%. Use a hygrometer, available at your local retailer or through the manufacturer, to measure the humidity.
20. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
21. Never place housing under water flow or immerse in liquids.
22. Do not plug in the cord with wet hands: electric shock could result.
23. Do not pour water in any openings other than the water tank.

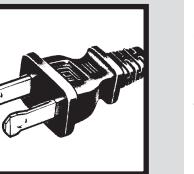

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

FEATURES - OPERATIONS

24. To prevent damage to surfaces, do not place humidifier under overhanging surfaces.
25. NEVER operate unit without water in the tank.
26. Do not move unit after it has been used until unit cools completely.
27. Use both hands when carrying full tank of water.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

CONSUMER SAFETY INFORMATION

NOTE: This is an electrical appliance and requires attention when in use.

NOTE: If moisture forms on the walls or windows of the room, turn off the humidifier. The room already has plenty of humidity and additional moisture may cause damage.

NOTE: DO NOT block air inlet or outlet.

CORD AND PLUG INSTALLATION SAFETY INSTRUCTIONS

Your humidifier is equipped with a technologically advanced AccuSet Plus™ digital Humidistat. You can set the humidifier to run continuously in manual mode or set the AccuSet Plus™ digital Humidistat to your desired humidity setting. The AccuSet Plus™ digital Humidistat will automatically turn the humidifier ON or OFF, depending on the preset comfort level. The comfort level ranges between 35% and 65% relative humidity.

Manual Mode Instructions:

1. Plug the humidifier into a 120V AC electrical outlet.
2. The display will show the current room humidity.

NOTE: The display range is 21% - 90%. If your room humidity level falls below 21%, the unit will display 21. If your room humidity level rises above 90%, the unit will display 90.

3. To start the unit, push the MODE () button twice within 3 seconds for the HIGH (3) manual setting.

NOTE: This humidification system provides a cool, invisible moisture output. It is normal not to see the mist.

NOTE: A humidity level below 20% can be unhealthy and uncomfortable. The recommended humidity level is between 40%-50%.

4. Press the button again for the MEDIUM (2) manual setting and again for LOW (1). After the selection is made, the display will return to show the current room humidity.

5. To stop the unit, press and hold the button for two seconds, or keep pressing the button until the display reads OFF (OF).

PRE-OPERATING INSTRUCTIONS

1. Be sure the humidifier is switched to OFF and the unit is disconnected from the electrical outlet.
2. Select a location for your humidifier, on a flat surface, about 4 inches (10 cm) away from the wall. DO NOT place the humidifier on a finished floor or near furniture, which can be damaged by moisture or water. Place on a moisture-resistant surface.

FILLING THE WATER TANK

1. Remove the tank from the base of the humidifier and bring to the faucet. Turn the tank upside down and twist off the tank cap by turning counter clockwise. Fill tank with cool, fresh tap water. DO NOT fill with warm water as this may cause leaking. Replace the cap on tank FIRMLY.
2. When full, carry tank to the humidifier and place onto the base. The tank holds 2.25 gallons of water and the base holds 1/4 gallons of water. The tank will immediately begin to empty into base.
3. Plug the power cord into a 120V AC electrical outlet.

OPERATING INSTRUCTIONS

By setting your humidifier to a specific humidity level, you are actually also extending the run time. Since the unit will turn on and off to maintain the set humidity level, less water will be used than on manual setting.

16 HOUR AUTO ON/OFF TIMER INSTRUCTIONS

The Auto On/Off timer will allow the user two options, to set a time to turn the unit off or to set a time to turn the unit on.

FEATURES - OPERATIONS

AccuSet Plus™ HUMIDISTAT INSTRUCTIONS

To take advantage of the AccuSet Plus™ Digital Humidistat, press the MODE () button until the speed is set in either the auto HIGH (A3), auto MEDIUM (A2) or auto LOW (A1) setting. Then adjust the set humidity by using the up and down buttons. Humidity will increase in increments of 5%. When the humidity level is set, the display will return to show the current room humidity. When the room humidity level rises above the set humidity, the humidifier will stop. When the humidity level drops below the set humidity, the humidifier will turn on automatically. Place on a moisture-resistant surface.

Auto Off Timer

While the unit is running, the off timer can be activated by holding down the up and down buttons simultaneously for 2 seconds, the screen will flash 00 and the up and down arrows can be pushed to adjust the timer up to 16 hours in increments of one, once 16 hours is reached, the next push of the timer button will cycle back to 00 hours. The Timer Light () will illuminate when the Timer is set. The unit will then shut off after the timer expires (in its current setting). While the unit is running, the timer should stay on even if other modes are being changed. The timer should only be deactivated if the unit is turned off.

Auto On Timer

While the unit is off, the up and down buttons are pressed simultaneously for 2 seconds and the display will flash 00 the up button may then be pushed again to increase the hours to turn on (in its last setting) from 1-16 in increments of 1 hour. The unit will then come on after the timer expires, if the unit is then turned on, the timer will be deactivated. The Timer Light () will illuminate when the Timer is set. Once 16 hours is reached, the next push of the timer button will cycle back to 00 hours.

FILTER WASHING PROCEDURE

1. The water tray should be cleaned when you clean the filter. The water tray is a convenient way to carry the filter to prevent dripping.
2. Mix 1 gallon warm tap water with 1 teaspoon concentrated antibacterial liquid dish washing soap.
3. Fully submerge filter in soap solution for 15-20 minutes.
4. Dunk filter in soap solution several times then gently press to release the soapy water. Be sure not to wring, pull or scrub filter as this will degrade the filter.
5. Run under cool tap water until there is no soap remaining. Some discoloration may still be visible, this is normal and does not affect performance.
6. Gently shake or press the filter to remove excess water.
7. The filter can be put directly into the humidifier while still damp if it is to be used right away, or allow filter to dry completely if humidifier is to be stored.

Should your filter become damaged or lost, please call the customer service number listed in the manual for a replacement part. The part number for this HWF65P filter is: 740001000425.

CLEANING AND MAINTENANCE INSTRUCTIONS

Humidifiers provide comfort by adding moisture to dry, heated indoor air. To benefit most from the humidifier and avoid product misuse, follow all instructions carefully. Please note that this is an electrical appliance and requires attention when in use.

In addition, if you do not follow the recommended care and maintenance guidelines, micro-organisms may be able to grow

CLEANING/MAINTENANCE

When the needle is in the (Wash Filter) section, this means the proper amount of moisture is not getting into your air due to the excessive minerals and sediment that have become trapped on your filter. At this point, you should wash your filter. It is important to wash your filter as indicated below to obtain stated performance level.

Daily Maintenance:

1. Be sure the unit is OFF and is disconnected from the electrical outlet.
2. Remove the housing and the tank from the humidifier and place in sink or tub.
3. Remove the filter and follow the filter and weekly cleaning procedure.
4. Insert the refreshed filter.
5. Repeat Operating Instructions.

It will take about 30 minutes for the humidifier to reach maximum output.

FILTER WASHING PROCEDURE

1. The water tray should be cleaned when you clean the filter. The water tray is a convenient way to carry the filter to prevent dripping.
2. Mix 1 gallon warm tap water with 1 teaspoon concentrated antibacterial liquid dish washing soap.
3. Fully submerge filter in soap solution for 15-20 minutes.
4. Dunk filter in soap solution several times then gently press to release the soapy water. Be sure not to wring, pull or scrub filter as this will degrade the filter.
5. Run under cool tap water until there is no soap remaining. Some discoloration may still be visible, this is normal and does not affect performance.
6. Gently shake or press the filter to remove excess water.
7. The filter can be put directly into the humidifier while still damp if it is to be used right away, or allow filter to dry completely if humidifier is to be stored.

Extended Run Time Setting:

By setting your humidifier to a specific humidity level, you are actually also extending the run time. Since the unit will turn on and off to maintain the set humidity level, less water will be used than on manual setting.

16 HOUR AUTO ON/OFF TIMER INSTRUCTIONS

The Auto On/Off timer will allow the user two options, to set a time to turn the unit off or to set a time to turn the unit on.

Figure 1

Figure 2

