



## How To Clean- Digital Coffeemaker

### Tip #1: Clean filter basket & Carafe

Remove the filter basket and carafe and wash them in a solution of hot water and mild liquid soap. Alternately you CAN place glass carafes & lids, filter baskets and permanent filters in the top rack of your dishwasher.



### Tip #2: Clean with White Vinegar

Fill the carafe to the 4 cup line with undiluted white household vinegar. Lift the lid and pour the vinegar into the water reservoir of the coffeemaker. Place a filter into the removable filter basket and close the lid.



### Tip #3: Let 3 Cups Brew Through & Wait

Press the Select/Off button until the red CLEAN indicator light turns on. The entire cycle will take 45-60 min. During the cleaning your coffeemaker will slow brew the 3 cups of vinegar and then pause for 30min.



### Tip #4: After 30min. Brew 4th Cup

After 30 minutes, your coffeemaker will brew the remainder of the vinegar. When complete, the CLEAN light will turn off and your coffeemaker will turn off. Discard the vinegar and rinse the carafe thoroughly with clean water.



### Tip #5: Brew Clean Water Through

Remove & discard the paper filter used. (If a permanent filter was used remove & rinse.) Pour a carafe full of clean, fresh water into the coffeemaker and let the water run through the brew cycle.

