



How To Clean- Manual Coffeemaker

Tip #1: Clean filter basket & Carafe

Remove the filter basket and carafe and wash them in a solution of hot water and mild liquid soap. Alternately you CAN place glass carafes & lids, filter baskets and permanent filters in the top rack of your dishwasher.



Tip #2: Clean with White Vinegar

Fill the carafe to the 4 cup line with undiluted white household vinegar. Lift the lid and pour the vinegar into the water reservoir of the coffeemaker. Place a filter into the removable filter basket and close the lid.



Tip #3: Let 3 Cups Brew Through & Wait

Place the empty carafe on the warming plate. Turn the switch to the "on" position. When three cups have flowed through, turn the coffeemaker to "off." Let stand for 30 minutes.



Tip #4: After 30min. Brew 4th Cup

After 30 minutes, turn coffeemaker to "on" and let the remaining vinegar pass through the coffee maker. Once the brew cycle is complete, discard the vinegar solution and rinse the carafe thoroughly with clean water.



Tip #5: Brew Clean Water Through

Remove & discard the paper filter used. (If a permanent filter was used remove & rinse.) Pour a carafe full of clean, fresh water into the coffeemaker, turn the switch to the "on" position. Allow water to cycle through.

