

*Sunbeam*®



advanced  
**remote  
trainer**



**STATIC**  
**INSTRUCTION MANUAL**

## IMPORTANT SAFEGUARDS

- This device should only be used when training dogs for deterring unwanted behaviors.
- This device is not a toy; keep out of reach of children.
- This device is not intended to provide protection against aggressive dogs.
- This basic remote trainer should only be used on one dog at a time.
- Your dog should be in good health when using this product.
- This product is not to be used on dogs less than 9 lbs.
- This product is not to be used on dogs less than 6 months old.
- Your dog should not be left unattended with this collar on. Avoid leaving the collar on the dog for more than 8 continuous hours per day. Prolonged collar use can cause pressure sores which may lead to skin irritation such as contact dermatitis or decubitus ulcers. If a rash is discovered discontinue use until the skin area heals completely. If condition persists for more than 48 hours, contact your veterinarian.
- Do not attach a leash to the Sunbeam® Advanced Remote Trainer. A separate collar or harness may be used provided it does not interfere with the remote trainer.
- **Warning:** This collar uses two Lithium (CR 2032) coin type batteries. Keep the batteries out of reach of children. If swallowed, immediately seek medical help as serious injury may occur.

## SAVE THESE INSTRUCTIONS

- This product should be used when training dogs to deter unwanted behaviors.
- This product can be used indoors and outdoors.
- Adjustable collar fits neck sizes between 6 and 28 inches.
- 3 levels of correction can be adjusted for your dog
- Low battery indicator
- Weatherproof

**DO NOT USE THIS REMOTE TRAINER UNTIL YOU  
HAVE READ THESE INSTRUCTIONS**

# Product Overview:

## Collar

### MAIN CONTROL BUTTON:

- On/Off
- Correction level adjustment
- System reset



### INDICATOR LIGHTS:

- Low • Med • High

#### Solid Green:

Correction level selected and functioning properly

#### Flashing Green:


Correction administered and received

#### All 3 Flashing Red:

Low battery

### BATTERY DOOR:

Located on bottom of unit for battery installation and removal

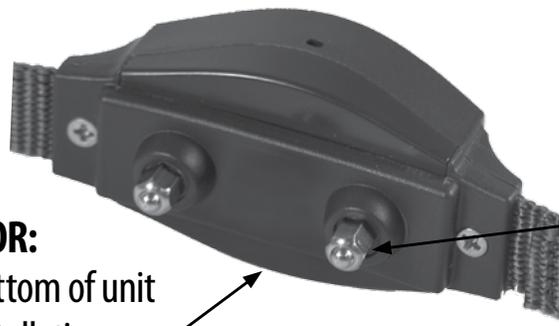

### STAINLESS STEEL PROBES:

Correction administering system

### ADJUSTABLE BUCKLE

### EXTERNAL ANTENNA

### FABRIC COLLAR

### QUICK RELEASE CLASP



# Product Overview:

## Remote Control



## How it Works:

The Sunbeam® Advanced Remote Trainer should be used as a training aid for you and your pet. This specially designed system will shut off if there is an excess of corrections, for example, if something is leaning on the correction button or if there is continuous pressing. This is called Over Correction Mode and will cause the unit to turn off and automatically reset.

**IMPORTANT:** The Sunbeam® Advanced Remote Trainer has a range of up to 150 yards. For the best results at long ranges, hold the remote above your head and point to the receiver. Other factors that may affect range include weather, terrain and other radio frequencies transmitted in the area.

## OPERATING INSTRUCTIONS

### Collar Battery Installation:

**IMPORTANT:** This step is to be completed when the collar is NOT on your dog.

- Remove two screws securing the battery compartment using a cross head or Phillips head screwdriver. (fig. 1)
- Lift battery compartment from main body of collar. (fig. 2)
- Insert two CR2032 Lithium coin batteries into battery compartment. Batteries should be placed with the positive side facing down.

**IMPORTANT:** Follow orientation as described on graphics illustrated on battery compartment. (fig. 3)

- Replace battery compartment with two CR2032 Lithium coin batteries back into main body. **Note:** The battery compartment can only be assembled in one orientation, do not force closed.
- Tighten the two screws using the cross head screwdriver, do not over tighten.
- To test the unit turn on by pressing and holding the main control button for 4 seconds. The unit will beep twice and flash twice leaving one LED illuminated to indicate which correction level is in use. To choose the right correction level, refer to the READY TO USE section of this manual.
- To turn off the unit, press and hold the main control button for 4 seconds.



figure 1



figure 2



figure 3

The unit will beep twice and flash twice leaving no LEDs illuminated indicating the unit is off.

- When replacing batteries after usage you must completely discharge the collar by holding a plastic handle screwdriver across both stainless steel probes for 5 seconds. Make sure the metal portion of the screwdriver is touching both stainless steel probes and the unit is in the OFF position.

### **Remote Control Battery Installation:**

- Remove the battery door from back of the remote control.
- Insert one 9 volt alkaline battery. (fig. 4)
- Replace battery door on the back of the remote control.
- To test the unit, turn on by pressing and holding the on/off button for 2 seconds. The power indicator light will illuminate GREEN. (fig. 5)



*figure 4*



*figure 5*

### **COLLAR FITTING**

Proper fit of the Sunbeam® Advanced Remote Trainer is essential to establish a good training foundation and optimal performance.

**Note:** Batteries should be installed properly and collar should be in the OFF position before proceeding with fitting the collar to your dog.

**STEP 1:** Ensure dog is in a relaxed position.


**STEP 2:** With the collar clasp open loosen the adjustment buckle such that it can reach completely around your dog's neck. (fig. 6)

Place sensor probe directly over the dog's voicebox. When buckled, the collar should rest directly behind the dog's ears (the highest part of the neck). (fig. 7)

**Note:** Make sure both stainless steel probes go through the coat completely and make contact with the skin.

Use the longer stainless steel probes if the coat does not allow the shorter probes to reach the skin.

Before changing the stainless steel probes you must completely discharge the collar by holding a plastic handle screwdriver across both stainless steel probes for 5 seconds.

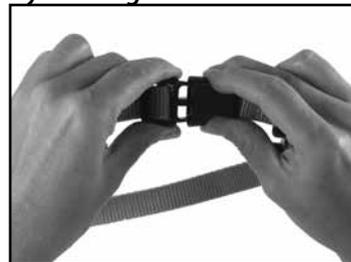

*figure 6*



*figure 7*

Make sure the metal portion of the screwdriver is touching both stainless steel probes and the unit is in the OFF position.

Trimming the hair around the dog's neck where the stainless steel probes will touch the skin is optional, **DO NOT** trim the hair so short that the skin is completely exposed as this might allow for an irritation or rash to occur.

Use a wrench when assembling or disassembling the stainless steel probes, do not over tighten. (fig. 8)



figure 8

**STEP 3:** Close and lock clasp. (fig. 9)

**STEP 4:** Adjust for proper fit by pulling on strap until you can fit two fingers in between your dog's neck and the collar. (fig. 10)

**Note:** Verify that the main body of the collar unit is directly over the dog's voicebox. The collar should be firm but not excessively tight.



figure 9

**STEP 5:** Let your dog wear the product for sufficient time confirming that they are moving around normally. This step is to ensure that under daily activity the collar will remain secure and not become loose.

**STEP 6:** Reattach collar to your dog. Check the fit of the collar several times per day. Wipe the stainless steel probes weekly with a damp cloth while collar is in off position.



figure 10

**Reminder:** If you choose to use a 2nd collar, leash or harness system make sure it does not interfere with the operation of the Sunbeam® Advanced Remote Trainer.

## READY TO USE

**Note:** The **BATTERY INSTALLATION** and **COLLAR FITTING** steps must be completed before you are ready to use.

**STEP 1:** Holding the main body of the Sunbeam® Advanced Remote Trainer in both hands PRESS and HOLD the Main Control Button for 4 seconds.

**Note:** You will hear 2 audible beeps and 3 LEDs flash GREEN indicating the device is on.

The default correction level is **LOW**; this setting will illuminate GREEN for 10 seconds and then turn off. During the ten seconds, you may toggle to different correction levels by pressing the Main Control Button.

**STEP 2:** Set correction level by pressing and holding (approximately 2 seconds) the Main Control Button until a GREEN LED illuminates at the desired setting.

When a GREEN LED is illuminated press the Main Control Button once to toggle to the next correction level. Once a correction level is chosen all 3 GREEN LEDs will illuminate every 10 seconds to advise the unit is on.

**IMPORTANT:** Always make sure to turn off the collar when not in use to conserve battery life.

**Note:** It is recommended to start on the **LOW** setting and monitor your dog's behavior before determining if a higher correction level is needed. The Sunbeam® Advanced Remote Trainer retains the last correction level setting and will resume this mode when the unit is turned on.



**STEP 3:** Attach collar to your dog as you did in the **COLLAR FITTING** stage.

**STEP 4:** Turn on the remote control by pressing the On/Off button for 2 seconds.

**STEP 5:** To begin using the remote trainer, find your dog's recognition level starting with the warning button. Once an unwanted behavior takes place, such as chewing, digging, barking, jumping, biting or whining, immediately press the warning button. Each dog will react differently and reactions may include a dip of the head, shaking the head, whining, excessive barking or confusion. Some dogs will respond to the warning button and stop the unwanted behavior. If this is the case, continue training your dog using the warning button and skip to STEP 7.

**IMPORTANT:** Your timing on this step is crucial. If the unwanted behavior has stopped before you have time to press the warning or correction button, **DO NOT** press the warning or correction button. The warning or correction button should only be used at the exact moment the unwanted behavior is taking place.

**STEP 6:** If the dog does not respond to the warning button, starting on the **LOW** setting, press the correction button. If your dog does not respond to the correction on the **LOW** setting, toggle the collar setting to **MEDIUM** and **HIGH**, if necessary.

**STEP 7:** Once your dog's recognition level has been identified, continue training with that setting. As soon as the unwanted behavior stops, be sure to reward your dog with praise, petting or a treat.

**Note:** If you use the warning button to first alert your dog of the unwanted behavior and then use the correction button, there is a chance your dog will associate the warning tone with the correction. Once your dog has made this association, continue use of the remote trainer utilizing the warning button only.

## SPECIAL OPERATING NOTES

**REMOTE CONTROL:** For precaution, the collar will be ready to use 10 seconds after the user has selected or made adjustments to the correction level on the collar. The collar will not react to the handheld remote when the user turns the collar on and/or toggles the correction settings during this period.

**WARNING BUTTON:** If the user presses the warning button on the remote control, the transmit GREEN LED on the remote will flash. There will be an audible beep at the collar unit.

**CORRECTION BUTTON:** If the user presses the correction button on the remote control, the transmit GREEN LED on the remote will flash. If the collar can receive the signal from the remote control, the collar's GREEN LED of the selected correction level will light up during the correction period.

**OVER CORRECTION MODE:** If too many corrections occur within a 60 second period, the remote control will be deactivated for two minutes. This is to protect the dog in case something may be accidentally activating the correction button. The transmit RED LED on the remote control will be flashing during the entire two minute period. The unit will resume normal operation after this two minute period.

**LOW BATTERY MODE:** On the collar all 3 LEDs will flash RED for 5 seconds when the battery needs to be replaced. On the remote control the power LED will flash RED and automatically turn off.

## TRAINING GUIDE

Proper training is essential to achieving the best results from the Sunbeam® Advanced Remote Trainer. For best results, prior to use of the remote trainer, you should put the collar on your dog for a few days without turning it on. You do not want the dog to associate the collar with the correction because the dog can become collar smart. The dog that is collar smart will only behave when the collar is on. Your goal is to eliminate the unwanted behavior whether the collar is on or off.

When first starting to use the remote trainer you should closely monitor your dog's reaction to the correction. You should be inside a protected area. The protected area should not be a cage, crate or kennel. If outside, your dog should be in a safe protected area so that it cannot run away when it receives a correction from the remote trainer.

Do not let your dog see the handheld remote when you are pushing the warning button or the correction button. You do not want your dog to associate the correction with you.

Each dog can have a different reaction to the correction it receives from the remote trainer. Reactions can vary from a dip of the head, to shaking the head, whining, excessive barking, confusion or running away. In the event

of an extreme reaction or aggression, wait until your dog is calm before approaching your dog.

The remote trainer should be used when you want to deter unwanted behavior. Do not leave the remote trainer collar on your dog when you are not present. Consistently using the remote trainer at the right time will give you the best results. The more disciplined you are when using the remote trainer the better your dog will understand that unwanted behaviors are not acceptable.

It is important for the training process to be interactive. Once your dog has received a correction and stopped the unwanted behavior you should reward your dog with a treat or praise.

## **HINTS AND TIPS**

### ***Is this product right for me and my dog?***

- The Sunbeam® Advanced Remote Trainer is best used in conjunction with behavior training from a qualified behaviorist or obedience trainer.
- Before using the remote trainer on an aggressive or phobic dog, consult a qualified behaviorist or obedience trainer.
- If your dog begins to display aggressive behavior during or after using the Sunbeam® Advanced Remote Trainer, discontinue use immediately and consult a qualified obedience trainer or behaviorist.
- All training methods require time, commitment and consistency to achieve optimum results.

## **CARE AND MAINTENANCE**

The Sunbeam® Advanced Remote Trainer is weatherproof but is **NOT** submersible so care must be taken when cleaning.

- Always remove the battery before cleaning
- Use a clean damp cloth, water only
- Never use any household or industrial cleaners
- Do not submerge the unit in water or any other liquid
- Keep the dog's coat and skin clean in the area where the collar makes contact
- Check the fit of the collar several times per day
- Wipe the Stainless Steel Probes weekly with a damp cloth while collar is in off position

**Note:** The Lithium coin batteries used in this product contain perchlorate material. Special handling may apply in California. Go to: [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate) for more information.

## **FCC STATEMENT**

### **Potential for Radio/Television Interference**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## **1 YEAR WARRANTY**

*In the U.S.A. and Canada*

*If you have any question regarding this warranty or would like to obtain warranty service, please call 1-866-537-2249 and a convenient service center address will be provided to you.*

*Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions, or if in Canada, Sunbeam® Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.*

*DO NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.*

*This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized Sunbeam® service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.*

**What are the limits on Sunbeam's Liability?**

*JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.*

*Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.*

*In the U.S.A., this warranty is offered by Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431.*

*In Canada, this warranty is offered by Sunbeam® Corporation (Canada) Limited, doing business as Jarden Consumer Solutions located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1.*

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

© 2011 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.