

AUTO SAFETY SHUT-OFF

AUTO SAFETY SHUT-OFF

This heater is equipped with a technologically-advanced safety system that requires the user to reset the heater if there is a potential overheating situation. When a potential overheating temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

If the heater shuts down and the Power Light Ring is flashing:

- Stand the heater upright.
- Unplug the unit and wait 30 minutes.
- Plug in and operate normally.
- If the heater does not work normally, repeat steps 1, 2 and 3 again.

NOTE: If the heater is plugged in again and Power On/Off Button is pressed within the 30-minute cool down period, heater will run at Max heat setting, but shut down in 2 seconds with the Power Light Ring Flashing. Please repeat the above 4 steps to reset the heater again and ensure to allow sufficient time for the thermostat to cool down.

FOR MODELS WITH TIP OVER PROTECTION

Tip Over Shut-Off:

When the unit is accidentally knocked over, it will instantly shut off and the Power Light Ring will flash. The unit may also shut off if it is moved or bumped. To reset, simply place the heater on an upright position, the Power Light Ring will stop flashing and it will operate normally.

NOTE: If unit does not turn on when placed in the upright position, press Power On/Off Button once and heater will resume operation.

APAGADO AUTOMATICO DE SEGURIDAD

APAGADO AUTOMATICO DE SEGURIDAD

Este calefactor está equipado con un sistema de seguridad tecnológicamente avanzado que requiere que el usuario lo reactive si se produce un recalentamiento. Si la unidad se recalienta, el sistema la apagará automáticamente y solo podrá volver a funcionar si el usuario lo reactiva manualmente.

Si el calefactor se apaga y el anillo de la energía eléctrica titila:

- Coloque el calefactor en forma vertical.
- Desenchufe la unidad y espere 30 minutos.
- Enchufe y vuelva a operar normalmente.
- Si el calefactor no funciona normalmente, repita los pasos 1, 2 y 3 de nuevo.

NOTA: Si se enciende el calefactor nuevamente y se presiona el botón Encendido/Apagado durante los 30 minutos del período de enfriamiento, el aparato funcionará a la configuración a Temperatura máxima pero se apagará a los dos segundos y el anillo de energía eléctrica titilará. Para restablecer el calefactor nuevamente, repita los 4 pasos anteriores y asegúrese de que el termostato tenga suficiente tiempo para enfriarse.

PARA MODELOS CON PROTECCIÓN CONTRA INCLINACIONES

Apagado de inclinación:

Cuando la unidad se encuentra accidentalmente inclinada, se apagará de manera inmediata y el anillo de energía eléctrica

TROUBLE SHOOTING

TROUBLE SHOOTING

General Information:

Environmental Factors - There are a number of factors that will affect your desired comfort level. These factors can include insulation, open or drafty doors and windows, and outside temperature. Please check and take action if any of these potential problems are affecting your heaters ability to adequately warm your room.

If the heater shuts down and the Power Light Ring is flashing:

- Stand the heater upright.
- Unplug the unit and wait 30 minutes.
- Plug in and operate normally.
- If the heater does not work normally, repeat steps 1, 2 and 3 again.

NOTE: If the heater is plugged in again and Power On/Off Button is pressed within the 30-minute cool down period, heater will run at Max heat setting, but shut down in 2 seconds with the Power Light Ring Flashing. Please repeat the above 4 steps to reset the heater again and ensure to allow sufficient time for the thermostat to cool down.

If you have any questions regarding your product or would like to learn more about other Sunbeam® products, please contact our Consumer Service Department at 1-888-264-9669 or visit our website at www.sunbeam.com.

TROUBLESHOOTING

Troubleshooting for your Heater

Trouble	Probable Cause	Solution
• Heater Does Not Turn On.	► Timer Activated (only applicable on models with Timer feature). ► Tip-over switch engaged (only applicable on models with Tip-over protection). ► Manual user reset is activated. ► Not plugged in properly. ► Electrical outlet does not hold plug in securely. ► Thermostat set too low. ► Obstruction causing the heater not to operate. ► Circuit breaker trips.	✓ Press the Power Button to Turn on the Heater. ✓ Set heater upright on a level surface. ✓ Follow reset instructions listed in this manual. ✓ Ensure plug is properly inserted. Make sure electrical outlet and circuit breaker are working. ✓ Have outlet replaced by a licensed electrician. ✓ Turn the Dial Knob clockwise to the highest temperature setting. ✓ Unplug the heater and remove all obstructions. Position your heater 36 inches (91 cm) away from all objects. ✓ Make sure no other high wattage appliances are operating on the same circuit and reset breaker if needed.
• Power Light Ring is Flashing or in some cases, Heater Turns On at Max Heat setting but then Shuts Off in 2 seconds with Power Light Ring Flashing.	► Auto Safety Shut-off system is activated when there is potential overheating. ► Tip-over switch engaged (only applicable on models with Tip-over protection).	✓ Follow Auto Safety Shut-off instructions to reset the heater and allow sufficient time for the heater to cool down before plugging in again. ✓ Set heater upright on a level surface.
• Not Enough Heat.	► Heater is in Low Heat setting. ► Thermostat set too low.	✓ Change setting to Max Heat. ✓ Turn the Dial Knob clockwise to the highest temperature setting.
• Heater cycles ON and OFF frequently.	► The thermostat automatically turns the heater on and off to maintain selected comfort level. ► Every 10-15 minute the heater turns on and runs for a minute.	✓ To make this occur less frequently turn the Dial Knob clockwise to the highest setting. ✓ This is normal operation to ensure the heater is maintaining the room temp accurately.

DIAGNOSTICO DE PROBLEMAS

Solución de problemas del calefactor

Problema	Possible Causa	Solución
• El calefactor no enciende.	► El temporizador se encuentra activado (sólo se aplica a modelos que tengan la función Temporizador). ► El interruptor contra inclinaciones está activado (sólo se aplica a modelos con protección contra inclinaciones). ► El restablecimiento manual de usuario está activado. ► No está conectado correctamente. ► El tomacorriente no sostiene el enchufe de manera segura. ► El termostato está en un valor demasiado bajo. ► Hay obstrucciones que hacen que el calefactor no funcione. ► El interruptor de circuito está desactivado.	✓ Presione el botón de encendido para encender el calefactor. ✓ Coloque el calefactor en posición vertical sobre una superficie nivelada. ✓ Siga las instrucciones de restablecimiento que aparecen en este manual. ✓ Compruebe que el enchufe esté insertado correctamente. Asegúrese de que el tomacorriente y el interruptor de circuito funcionen. ✓ Contrate a un eléctrico con licencia para reemplazar el tomacorriente. ✓ Gire la perilla con dial en el sentido de las agujas del reloj hasta alcanzar la posición de temperatura más alta. ✓ Desconecte el calefactor y retire las obstrucciones. Coloque el calefactor a 91 cm de distancia de los demás objetos. ✓ Compruebe que no haya otros aparatos de alto voltaje funcionando en el mismo circuito y, si es necesario, restablezca el interruptor.
• El círculo lumínico de encendido está destellando y, a veces, el calefactor se enciende en la posición de máxima calor, pero después se apaga en 2 segundos, mientras el círculo lumínico de encendido se encuentra destellando.	► El sistema de apagado automático se encuentra activado en caso de un sobrecalentamiento potencial. ► El interruptor contra inclinaciones está activado (sólo se aplica a modelos con protección contra inclinaciones).	✓ Siga las instrucciones de apagado de seguridad automática para restablecer el calefactor y brindarle al calefactor suficiente tiempo para que se encienda de nuevo. ✓ Coloque el calefactor en posición vertical sobre una superficie nivelada.
• No hay suficiente calefacción.	► El calefactor está en la posición de calor bajo. ► El termostato está en un valor bajo.	✓ Cambie la posición a máximo calor. ✓ Gire la perilla con dial en el sentido de las agujas del reloj hasta alcanzar la posición de temperatura más alta.
• El calefactor se enciende y apaga con frecuencia.	► El termostato automáticamente enciende y apaga el calefactor a fin de mantener el nivel de confort seleccionado. ► Cada 10 o 15 minutos, el calefactor se enciende y funciona durante un minuto.	✓ Para que esto ocurra con menos frecuencia, gire la perilla con dial en el sentido de las agujas del reloj hacia la posición de máxima calor. ✓ Se trata del funcionamiento normal para asegurar que el calefactor está manteniendo la temperatura ambiente con precisión.

TROUBLESHOOTING

Troubleshooting for your Heater

Trouble	Probable Cause	Solution
• Remote (if applicable) Does not work.	► Battery low. ► Distance too far. ► Control Panel Display dirty.	✓ Change battery (Disc type, 3 volt, CR2025). ✓ Remote works up to 20 feet (6m). ✓ Be sure to point remote control panel on heater and there are no obstructions. ✓ Make sure display panel is clean.
• Heater is Blowing Cold Air.	► When the heater is in Thermostat Mode and reaches the set temperature it will automatically perform a 15 second cool down (blowing cold air) to ensure thermostat accuracy.	✓ Raise the temperature higher or change to Low/Eco-Smart™ or Max heat setting.
• Fan Speed Doesn't Change.	► Unit is in Fan Only setting.	✓ Press the Max Heat or Low Heat/Eco-Smart™ Buttons.
• Unexpected Noise.	► Power Button may have been pressed to turn off the heater.	✓ Press the Power Button to turn on the heater.
• Unexpected Smell.	► Max Heat and Low Heat/Eco-Smart™ settings control the heat output of the heater and not the fan speed. Fan runs at the same speed on all settings.	✓ Run heater in Max Heat for maximum heat output.

DIAGNOSTICO DE PROBLEMAS

Solución de problemas del calefactor

Problema	Possible Causa	Solución
• El control remoto (si corresponde) no funciona.	► Tiene poca batería. ► Está demasiado lejos. ► El visor del panel de control está sucio.	✓ Cambie la batería (tipo de descripción, 3 voltios, CR2025). ✓ El control remoto funciona hasta 20 pies (6m). ✓ Asegúrese de apuntar el control remoto al panel de control del calefactor y de que no haya ningún obstáculo. ✓ Asegúrese de que el visor esté limpio.
• El calefactor sopla aire frío.	► Cuando el calefactor se encuentra en modo Termostato y alcanza la temperatura establecida, se enfriará automáticamente durante 15 segundos (sopla aire frío) para asegurar la precisión del termostato.	✓ Aumente la temperatura o cambie la posición a calor Bajo/Eco-Smart™ o Máximo.
• La velocidad del ventilador no cambia.	► La unidad se encuentra en la posición Ventilador únicamente.	✓ Presione el botón de Máximo calor o Calor bajo/Eco-Smart™.
• Ruido inesperado.	► Es posible que se escuchan chasquidos o crujidos cuando el calefactor se calienta. Esto es parte del funcionamiento normal y seguro. Una vez que el calefactor se caliente, los crujidos cesarán.	✓ Si el ruido persiste, llame al servicio al cliente Sunbeam al 1-888-264-9669.
• Olor inesperado.	► Es posible que el calefactor produzca olores o vapores la primera vez que lo utilice o después de haber estado almacenando una temporada.	✓ Esto es normal y es el resultado del polvo u otros residuos que se acumulan en el dispositivo de calefacción. Asegúrese de que el calefactor se encuentre en un área ventilada y que siga funcionando hasta que el olor o vapor desaparezcan.

WARRANTY INFORMATION

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so voids this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use of improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-888-264-9669 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-888-264-9669 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

TRUSTED FOR OVER 100 YEARS



Heater Calefactor



* Fan-Forced Heaters may appear with a different grill design
* Los calefactores con impulso de ventilador pueden tener un diseño de rejilla distinto

NOTE: A Phillips screwdriver is required for assembly (if applicable).

NOTA: Se requiere un desarmador Phillips para el montaje (si corresponde).

INSTRUCTION MANUAL

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

MANUAL DE INSTRUCCIONES

LEA Y CONSERVE ESTAS INSTRUCCIONES IMPORTANTES


Sunbeam

GO ONLINE NOW to

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord over furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

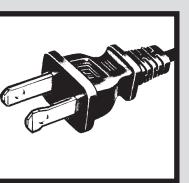

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

SAVE THESE INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

TECHNICAL SPECIFICATIONS

- Amps: 12.5
- Wattage: 1500W (+5% -10%)
- Working voltage: 120V AC/60Hz

NOTE: Low Heat setting may be 1000W on some models.

ASSEMBLY INSTRUCTIONS

NOTE: A Phillips screwdriver is required for assembly. Unpack your heater from the box, being careful to remove all parts from plastic bags and remaining packaging. Please save the carton for off-season storage.

Some models are packed with separate base and pedestal in the box. Carefully remove all parts from plastic bags. To prevent scratches, place all parts onto a cloth before assembly. Follow the below instructions for Pedestal/Base assembly:

Pedestal/Base Assembly (if no pedestal is included in this model, move to Base Assembly)

Step 1: Run the power cord through the center of the assembled pedestal. Snap pedestal into the bottom of the heater housing. Refer to Figure 1. Insert the alignment post from the heater housing into the hole on the pedestal for proper alignment.

Base Assembly

Step 1: If the base is in two halves, snap them together by sliding slots of one base half into slots of second base half. Refer to Figure 3.

Step 2: Run the power cord through the center of the assembled base. To assemble the base to the unit first make sure the side marked "Rear" is facing the back of the heater. Insert the alignment posts from the pedestal into the alignment holes on base for proper alignment. Line up holes of the base with holes on bottom of pedestal (or heater housing if no pedestal is included), and secure with 4 provided screws. Refer to Figure 4.

Step 3: Lace the power cord through the cord minders on the underside of the base. Refer to Figure 5.

Figure 1
Figure 2
Figure 3
Figure 4
Figure 5

FEATURES - OPERATIONS

Remote Control (if applicable)

If your heater comes with a remote control, unpack the remote control from box. This includes one lithium battery, CR2025/3V. Please note this remote control will not work through walls. Remove battery before discarding the remote.

NOTE: REMOVE THE PROTECTIVE COVER FROM THE BATTERY PRIOR TO BEGINNING OPERATION.

Battery Replacement

1. Locate the battery compartment on the back of the remote control handset. Insert a small object (such as a pin or paper clip) into the hole of the battery cover lock (see Figure 6) and slide out the battery cover.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

OPERATING INSTRUCTIONS

1. Place heater on a firm, level surface.
2. Plug heater into a standard outlet. Once plugged in, the Power Light Ring will illuminate.

NOTE: Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 watts, this unit draws 12.5 Amps.

NOTES:

- Remove the battery from the equipment when it is not being used for an extended period of time.
- Remove the used battery promptly.
- Do not discard used batteries into household trash

POWER ON/OFF

Press the Power On/Off Button to turn the heater on. Once the heater will run in the **Max Heat** mode and the **Stay On** icon will appear on the LCD Display. Press the Power On/Off button to manually turn off the heater at any setting.

OSCILLATION (if applicable)

Some models are equipped with a 24-Hour Auto Shut-off Timer feature. This allows you to program your heater to shut off automatically after running a defined time interval (from 0 to 24 hours).

1. Press the Timer Button (⌚) once. The indicator light and the Power Light Ring will begin to blink for 5 seconds. The LCD Display will show "0" and the "Hr" icon.

When the preset temperature is reached, the heater will shut off and cool down for 15 seconds. When the room

FEATURES - OPERATIONS

NOTE: The Power Light Ring will remain illuminated while unit is plugged in.

Mode Selection

Select your desired heat settings by pressing the corresponding buttons as located on your heater or press the Mode button on remote control (if applicable) to cycle through the heat settings. An indicator light will illuminate next to each button to indicate that the selected setting/mode is activated.

NOTE: Settings and control buttons may vary slightly between models.

Fan Only Setting

Press the **Fan Only** button to run the heater without heat output. The **Stay On** icon will appear on the LCD Display.

MAX HEAT - HIGH HEAT SETTING

Press the **Max Heat** button to run the heater continuously at 1500W. The **Stay On** icon will appear on the LCD Display.

LOW HEAT - LOW HEAT SETTING (if applicable)

Press the **Low Heat** button to run the heater continuously at 750W. The **Stay On** icon will appear on the LCD Display.

Eco Smart™ Setting (if applicable)

Press the **Eco-Smart™** button to activate the energy efficient **Eco-Smart™** mode. The heater will now cycle between high (at 1500W) and low (at 750W) heat settings to provide heat. The **Stay On** icon will appear on the LCD Display.

Thermostat Control

Your heater is equipped with a digital thermostat that allows you to set your heater to a precise comfort level by turning the Dial Knob or pressing the arrow buttons on the remote control (if applicable).

NOTE: Please do not manually turn the heater on the base. It is designed to turn only by motorized oscillation.

Timer (if applicable)

Some models are equipped with a 24-Hour Auto Shut-off Timer feature. This allows you to program your heater to shut off automatically after running a defined time interval (from 0 to 24 hours).

1. Press the Timer Button (⌚) once. The indicator light and the Power Light Ring will begin to blink for 5 seconds. The LCD Display will show "0" and the "Hr" icon.

When the preset temperature is reached, the heater will shut off and cool down for 15 seconds. When the room

Oscillation (if applicable)

Presione el botón **Oscilación** (_Osc_) either on the control panel o remote control (if applicable) to activate or stop the oscillation feature.

NOTE: Please do not manually turn the heater on the base. It is designed to turn only by motorized oscillation.

Temporizador (if applicable)

Some models vienen con un temporizador de apagado automático. Esto les permite programar su unidad para que se apague automáticamente después de un período de tiempo determinado (de 0 a 24 horas).

1. Presione el botón **Temporizador** (⌚) una vez. La luz indicadora y el anillo de luz de energía titilarán por 5 segundos. El visor LCD mostrará "0" y el ícono "Hora".

2. Gire la perilla para ajustar entre 0 y 24 para seleccionar el intervalo deseado en el que el calefactor se apagará automáticamente. La hora seleccionada aparecerá en el visor LCD y la luz del indicador del Temporizador y el anillo de energía eléctrica dejarán de titilar en 3 segundos para indicar que el temporizador seleccionado se encuentra activado. El visor LCD volverá a mostrar la temperatura preestablecida y el modo de configuración.

NOTA: Si el calefactor viene con el botón **Temporizador** (⌚) en el panel de control o en el control remoto (si corresponde), podrá presionar el botón o girar la perilla para activarlo. El ícono **temporizador** (⌚) aparecerá en el visor LCD.

Para configurar previamente un nivel de confort, gire la perilla para ajustar la temperatura entre 85°F y 65°F (predeterminado: "85"). El visor LCD mostrará la lectura de la temperatura seleccionada. Cuando llegue a la temperatura preseleccionada, el calefactor se apagará y se enfriará durante 15 segundos. Cuando la temperatura ambiente esté por debajo de la temperatura preestablecida, el calefactor se encenderá nuevamente de manera automática a fin de mantener el nivel de temperatura preestablecido.

NOTA: Los cambios o modificaciones que no hayan sido expresamente autorizados por la parte responsable de exigir el cumplimiento podrían anular la autoridad del usuario para usar el equipo.

INSTRUCCIONES DE USO

1. Coloque el calefactor en una superficie firme y nivelada.
2. Conecte el calefactor en un tomacorriente estándar. Una vez encendido, el calefactor operará en el modo **Temperatura máxima** y el ícono **Permanecer encendido** aparecerá en el visor LCD. Presione el botón Encendido/Apagado para apagar de manera manual el calefactor cuando no esté siendo utilizado.

NOTA: Evite sobrecargar el circuito eléctrico evitando utilizar otro aparato de alta potencia en el mismo tomacorriente. A 1500 vatios, esta unidad consume 12.5 Amperes.

Selección de modo

Seleccione las configuraciones de temperatura deseadas presionando los botones correspondientes de su calefactor o presione el botón Modo del control remoto (si corresponde) para recorrer las configuraciones de temperatura.

Una luz indicadora se encenderá al lado del botón para indicar que se ha activado el modo o la configuración seleccionada.

NOTA: Las configuraciones y los botones de control pueden variar ligeramente según el modelo.

Configuración Sólo ventilador

Presione el botón **Solo ventilador** para activar el calefactor sin calor. El ícono **Permanecer encendido** aparecerá en el visor LCD.

Max Heat - Configuración temperatura ALTA

Presione el botón **Temperatura máxima** para que el calefactor funcione continuamente a 1500 W. El ícono **Permanecer encendido** aparecerá en el visor LCD.

Low Heat - Configuración temperatura BAJA (si corresponde)

Presione el botón **Temperatura baja** para que el calefactor funcione continuamente a 750 W. El ícono **Permanecer encendido** aparecerá en el visor LCD.

NOTA: Para apagar el calefactor, deje que se enfrie antes de limpiarlo.

Limpieza / Mantenimiento

Siempre desenchufe el calefactor y deje que se enfrie antes de limpiarlo.

1. Limpie la unidad con un paño suave humedecido en una solución suave de agua y jabón.

2. NUNCA utilice solventes abrasivos o inflamables para limpiar la unidad.

3. Luego de limpiarla, asegúrese de secar completamente la unidad.

4. Guarde el calefactor en un lugar fresco y seco.

ESTE PRODUCTO TIENE UN ENCHUFE POLARIZADO (una hoja es más ancha que la otra). A fin de disminuir el riesgo de descarga eléctrica, este enchufe está diseñado para insertarse en un tomacorriente polarizado en un solo sentido. Si el enchufe no entra completamente en el tomacorriente, inviertelo. Si así no entra, llame a un electricista calificado para instalar un tomacorriente apropiado.

NO MODIFIQUE EL ENCHUFE NI ANULE ESTA FUNCIÓN DE SEGURIDAD DE NINGUNA MANERA.

CONSERVE ESTAS INSTRUCCIONES

INSTRUCCIONES DE INSTALACIÓN

ESPECIFICACIONES TÉCNICAS

- Amperes: 12.5
- Potencia: 1500W (+5% -10%)
- Voltaje de funcionamiento: 120V CA/60Hz

NOTA: La configuración de Calor Bajo puede ser de 1000 vatios en algunos modelos.

INSTRUCCIONES DE ENSAMBLAJE

NOTA: Se requiere un destornillador Phillips para el montaje. Saque el calefactor de la caja, tenga cuidado de sacar todas las piezas de las bolsas de plástico y del material restante de embalaje. Consérve la caja para almacenamiento del calefactor fuera de estación.

Algunos modelos incluyen en la caja una base y un pedestal separados. Saqu cuidadosamente todos los componentes de la bolsa de plástico. Para evitar arañazos, colocar todos los componentes en un paño antes del montaje. Siga las siguientes instrucciones de ensamblaje de la base/pedestal:

Ensamblaje del pedestal (si este modelo no incluye un pedestal, continúe en Ensamblaje de la base)

1. Quite las pilas del equipo cuando no lo vaya a usar por un período de tiempo prolongado.

2. Reemplace las pilas que estén agotadas.

3. No deseche las pilas usadas en contenedores de basura de la casa. Comuníquese con el gobierno local para informarse sobre las prácticas de reciclaje o de desecho de su zona.

NOTA: Evite sobreexponer el circuito eléctrico para apagarlo o destruirlo.

4. Si el calefactor no funciona, vea las instrucciones específicas del apagado automático de seguridad.

17. NO intente reparar o ajustar ninguna función eléctrica o mecánica de este unidad. El hacerlo invalidará la garantía. La unidad no contiene partes reparables por el usuario. Toda reparación debe ser realizada únicamente por personal calificado.

18. Deje de usar si el cable o