


MR. COFFEE®

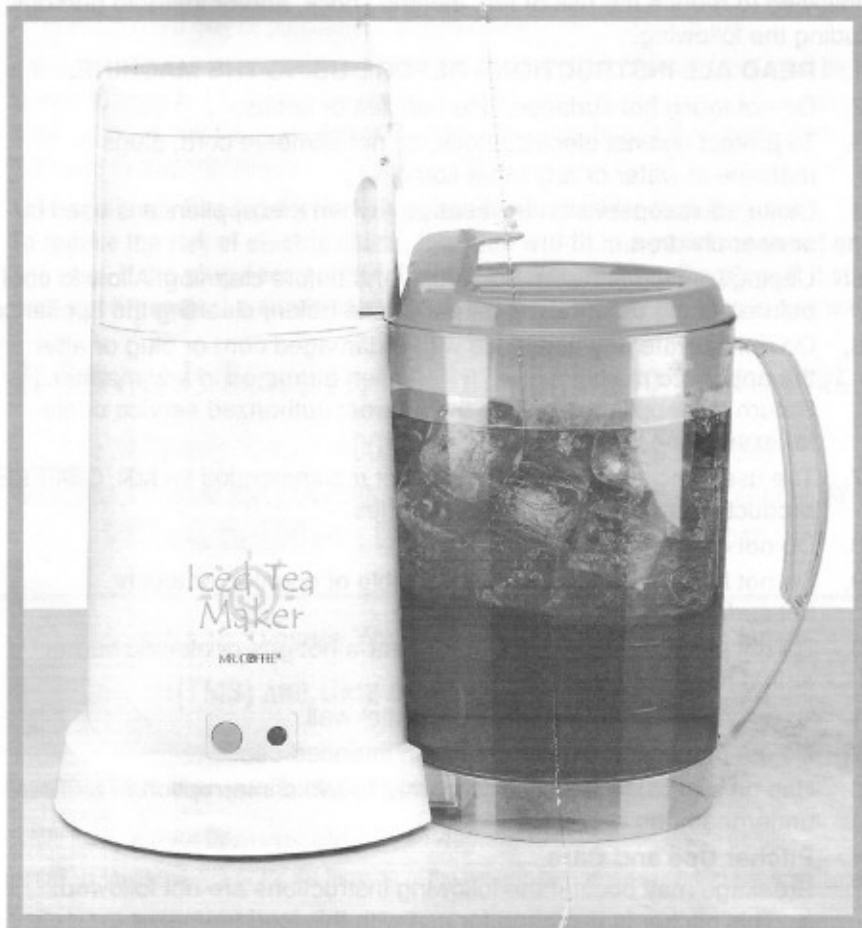

TM3 SERIES

**MAKES 3 QUARTS OF COLD, REFRESHING ICED TEA
IN LESS THAN 10 MINUTES**

Instruction Manual

Iced Tea Maker

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING THE MACHINE.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs or machine in water or any other liquid.
4. Close adult supervision is necessary when this appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance only to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended for MR. COFFEE® products may cause hazards or injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, remove plug from outlet wall.
12. Do not use appliance for other than intended use.
13. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.
14. **Pitcher Use and Care**
Breakage may occur if the following instructions are not followed:
 - a. This pitcher is designed for use with this iced teamaker and therefore must never be used on a rangetop or in any oven, including a microwave.
 - b. Do not use a cracked pitcher.
 - c. Do not clean the pitcher with cleansers, steel wool pads, or other abrasive materials.
 - d. Avoid sharp blows, scratches, or rough handling.
15. **WARNING:** To reduce the risk of fire or electric shock, do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only.
16. Pitcher is not dishwasher safe.

THIS UNIT IS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
2. An extension cord may be purchased and used if care is exercised in its use.
3. If an extension cord is used, the marked electrical rating of the extension cord must be at least 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug (*one blade is wider than the other*). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

IF SERVICE IS REQUIRED, DO NOT RETURN TO YOUR STORE

FOR SERVICE, CALL 1-800 MR COFFEE (1-800-672-6333)
9:00 A.M. TO 6:00 P.M., EASTERN STANDARD TIME, MONDAY THROUGH FRIDAY
9:00 A.M. TO 3:00 P.M., EASTERN STANDARD TIME, SATURDAY

**TO ASSIST US IN SERVING YOU, PLEASE HAVE THE MODEL NUMBER
(TM3) AND DATE OF PURCHASE AVAILABLE.**

PLEASE DO NOT RETURN THIS APPLIANCE TO YOUR STORE.

All repairs must be made by SUNBEAM or by an *Authorized* Sunbeam Service Center.
Please call us for assistance or for the location of the nearest Authorized Sunbeam Service Center.

We welcome your questions, comments or suggestions.

Please include your name, address and telephone number so we can reach you if necessary. Do not send product to the address below.

CONSUMER SERVICE DEPARTMENT

SUNBEAM PRODUCTS, INC.

P.O. Box 948389

Maitland, FL 32794-8389

or email: consumeraffairs@consumer.sunbeam.com

SAVE THESE INSTRUCTIONS

INTRODUCTION

CONGRATULATIONS! You are the owner of the ICED TEA MAKER by MR. COFFEE®. This unique appliance has been designed to provide you with excellent tasting iced tea quickly and conveniently.

Our specially designed steeping basket keeps tea immersed in hot water to extract the full flavor from your tea. The tea then drops down into the pitcher filled with ice to chill. As a result, you get consistently great tasting, freshly brewed iced tea every time.

This iced teamaker will automatically shut off when the brewing is completed. When the tea is all gone, the pitcher and lid store over the top of the machine and the cord wraps around the machine to save valuable counter space.

Please read **all** of the instructions in this booklet carefully before you begin to use this appliance. Proper care and maintenance will ensure the long life of this appliance and its trouble-free operation. Save these instructions and refer to them often for cleaning and care tips.

TABLE OF CONTENTS

	PAGE
Important Safeguards.....	2
Cord Set Instructions.....	3
If Service is Required.....	3
Introduction.....	4
Precautions.....	5
Diagram of Parts.....	6
Instructional Illustrations.....	7
Brewing Iced Tea and Iced Coffee.....	7 - 9
Cleaning Instructions.....	9
Pitcher Cleaning.....	10
Warranty Information.....	11

PRECAUTIONS WHEN USING THIS MACHINE

- Place the machine well back from the edge of the counter.
- To stop the brewing cycle before completed, grasp the molded plug and unplug from electrical outlet.
- Avoid areas which may become hot or emit steam when the machine is on, particularly the steeping basket and water reservoir. The water reservoir lid must be on while the machine is brewing.
- Unplug the unit when not in use or when wiping the exterior. Wipe with a damp cloth only.
- **To maintain the quality of parts, we recommend hand washing only. These items are not dishwasher safe.**
- DO NOT operate the machine unless the pitcher with the lid on is snug against the machine.
- DO NOT move the machine while in use or afterwards, until it has cooled. Steam may escape from the steeping basket while the unit is cooling.
- DO NOT place a cloth or otherwise restrict airflow beneath the appliance.
- Avoid jerking or straining the power cord when unplugging. Grasp the molded plug to unplug.
- This machine is not designed for commercial use.
- Never reheat a beverage by passing it through the brewing system.
- Do not permit children to use this machine unless under close adult supervision.
- Do not immerse the appliance in water. This may cause permanent damage and void the warranty.

Clean Your Iced Tea Maker Before First Use


1. Wash the pitcher, pitcher lid, steeping basket and steeping basket lid with warm water and mild detergent. Rinse thoroughly. *(Please refer to the diagram of parts listed below).*

WARNING: To prevent injury from hot steam, do not plug the unit in until water is in the reservoir and the pitcher is in place.

2. Fill the pitcher with water to the top water level mark on the pitcher and pour into the water reservoir. Do not overfill. Replace the steeping basket and lid on top of the machine.
3. Place one tray of ice cubes into the pitcher.
4. Turn the steeping dial to the open position as illustrated in Diagram A below.
5. Slide the pitcher with lid, spout first, under the machine. Make sure the spout lid is open.
6. Plug the cord into an electrical outlet and depress the push button (ON) to turn the machine on. The indicator light will illuminate to let you know the machine is ON.
7. When the water has cycled through, the machine will shut off automatically.
8. Slide the pitcher away from the machine and discard the water.

DIAGRAM OF PARTS – MODEL TM3

(THIS PRODUCT IS NOT DISHWASHER SAFE)

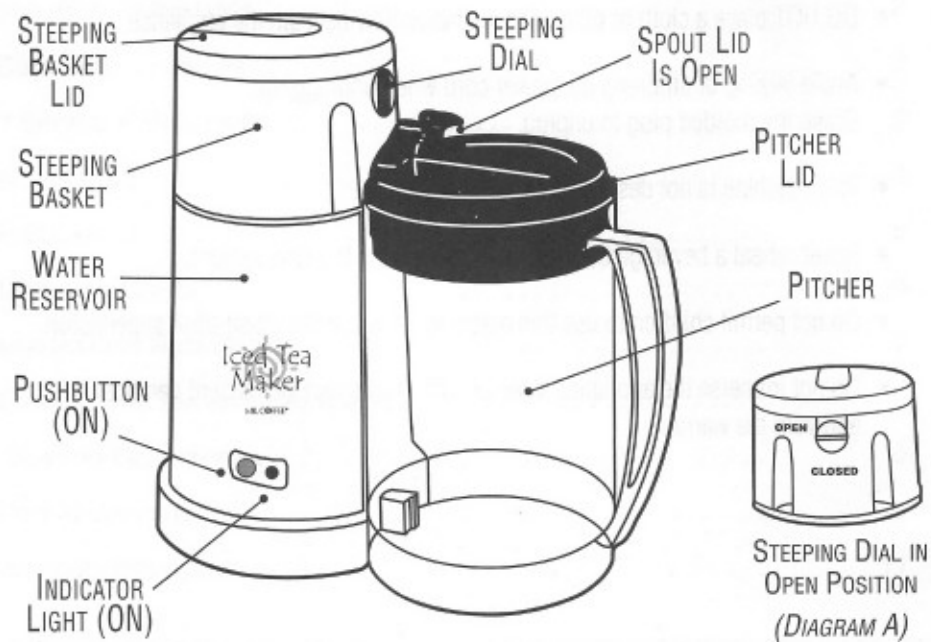

TEA AND COFFEE MEASUREMENT CHART

To MAKE	TEA	COFFEE
3 Quarts	8-12 regular bags or 3 – 5 level Tbsp. of loose tea	8 – 10 coffee scoops or 16 – 20 level Tbsp.
2 Quarts	6-10 regular bags or 2 – 4 level Tbsp. of loose tea	5 – 7 coffee scoops or 10 – 14 level Tbsp.
1 Quart*	3 – 5 regular bags or 1 – 3 level Tbsp. of loose tea	3 – 4 coffee scoops or 6 – 8 level Tbsp.

*When brewing only 1 quart of tea, fill the water and ice levels to half the amount used for 2 quarts.

Helpful Hints

1. Use more or less tea or coffee to suit your taste. Additional tea bags may be needed when using herbal tea.
2. If your ice supply is low, you can substitute with cold tap water. After filling the water reservoir with the proper amount of water, refill the pitcher with cold tap water a second time to the desired WATER level. Refrigerate to chill.
3. Tea may turn cloudy as it chills due to the tannic acids found in tea. Higher quality teas will contain more tannic acids than others. Using less tea will reduce the cloudiness.
4. For extra flavor, try adding several bags of herbal or flavored tea to your brew.
5. For excellent iced coffee, try dark roast coffee or any other flavored coffee.

To Brew Iced Tea

1. Fill the pitcher with tap water to the desired capacity as indicated by the 1, 2 and 3 quart WATER levels marked on the pitcher.

Warning: To prevent injury from hot steam, do not plug the unit in until water is in the reservoir and the pitcher is in place.

2. Pour the water into the water reservoir (*Figure A*).
3. Place a MR. COFFEE® brand paper filter in the steeping basket and add the desired amount of tea bags or loose tea (*Figure B*). Please refer to the chart above for recommended amounts of tea or coffee. Sugar, lemon and other flavoring can also be added at this time. They will dissolve best if sprinkled over the top of the tea.

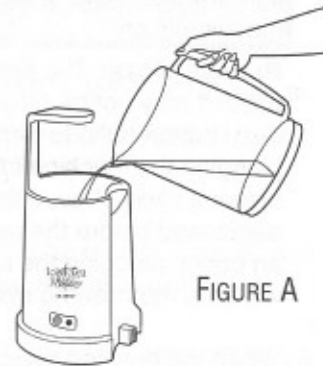


FIGURE A



FIGURE B

To Brew Iced Tea (cont'd)

- Slide the steeping basket on top of the water reservoir until it fits into place and then secure lid on top of basket (Figure C). Make sure the steeping dial is in the closed position (Figure D).



FIGURE C



FIGURE D

- Fill the pitcher with ice cubes to the desired capacity as indicated by the 1, 2 and 3 quart ICE levels marked on the pitcher (Figure E). Place the pitcher lid on the pitcher.

PLEASE NOTE: Cold tap water can be used as a substitute for ice cubes. Instead of filling the pitcher with ice cubes, simply refill the pitcher with cold water a second time to the desired 1, 2 or 3 quart WATER level. **Do not fill to the ICE level or your pitcher may overflow during brewing.** Refrigerate to chill.



FIGURE E

- Slide the pitcher with lid, spout first, under the machine. Make sure the spout lid is open (Figure F).

- Plug the cord into an electrical outlet and depress the push button (ON). The indicator light will illuminate to let you know the machine is on.

PLEASE NOTE: The first time the machine is used, it may not be necessary to depress the push button (ON) to turn the machine on, simply plugging the machine into an outlet will start the brewing cycle. Also, if the push button (ON) is depressed before the machine is plugged into an outlet, plugging the machine into an outlet will start the brewing cycle.



FIGURE F

- When the brewing cycle is completed, The iced teamaker will shut off automatically. Drain the remainder of the tea in the steeping basket by turning the steeping dial to "OPEN" (Figure G).

NOTE: For extra strength, wait a few minutes before draining the remaining tea into the pitcher.



FIGURE G

To Brew Iced Coffee

Follow the instructions for iced tea using the suggested amount of coffee in the chart listed on Page 7.

CAUTION: Decaffeinated coffee, particularly when used with chemically softened water, can cause slower filtration.

Daily Care

To maintain the quality of all parts and minimize tea stains, we recommend washing the pitcher, pitcher lid, steeping basket and lid with warm water and a mild detergent, regularly. **THESE ITEMS ARE NOT DISHWASHER SAFE.**

Hard water can leave whitish mineral deposits inside the pitcher and steeping basket. Tea and coffee discolor these deposits. To remove, fill the basket and pitcher with warm white vinegar and let it soak for about 20 minutes.

Do not use harsh, abrasive cleaners. They will cause scratches which can lead to breakage.

Deliming

This unit must be delimed when you begin to notice an increase in steaming or if the pumping action stops before all the water has been pumped out of the machine.

The frequency of cleaning depends on the hardness of water used.

Listed below are the suggested cleaning intervals.

SUGGESTED CLEANING INTERVAL	Type of Water	Cleaning Frequency
	Soft Water	Every 80 Brew Cycles
	Hard Water	Every 40 Brew Cycles

This iced teamaker may be delimed using vinegar or MR. C☉FFEE® CLEANER.

MR. C☉FFEE® CLEANER may be purchased at your local retailer or by writing or calling the Consumer Service Department listed on Page 3.

Using MR. C☉FFEE® CLEANER:

(Read caution statement on side panel of MR. C☉FFEE® CLEANER box before use.)

1. Fill pitcher with warm water to the water level marked on the pitcher (36 ounces of warm water).
2. Empty contents of one packet of MR. C☉FFEE® CLEANER into pitcher. Mix thoroughly to dissolve cleaner. This will make a clear blue solution.
3. Pour entire contents of pitcher into the water reservoir of the iced teamaker.
4. Place one tray of ice cubes in the pitcher.
5. Place steeping basket, with lid, into the pitcher and slide the pitcher under the machine. **The pitcher must be placed snug against the machine before operation.**

6. Push the ON button to begin the brewing cycle. The indicator light will illuminate to let you know the machine is brewing. When the machine has pumped out all the cleaning solution, the unit will turn itself off automatically and the indicator light will go out.
7. Remove steeping basket and discard contents of pitcher. Rinse pitcher, steeping basket, and lid thoroughly with water.
8. Repeat Steps 1 through 8 with clean water only (*no cleaning solution*) to rinse out the machine.
9. Be sure to thoroughly rinse the unit until you see no trace of the blue solution. When completed, wash pitcher, steeping basket, and lid with mild detergent and rinse thoroughly.
10. If a normal brewing flow rate is not achieved, repeat the cleaning procedure.

Using Vinegar:

1. Pour 1 quart of undiluted white household vinegar into the water reservoir.
2. Place one tray of ice cubes in pitcher.
3. Place the steeping basket with lid into the pitcher and slide it under the machine. **The pitcher must be placed snug against the machine before operation.**
4. Push the ON button to begin the brewing cycle. After approximately 1 cup of vinegar has pumped into the pitcher, unplug the appliance and allow it to sit for 30 minutes.
5. Plug the cord back in and turn the machine ON to pump out the remaining vinegar.
6. When the machine shuts off, remove the pitcher and discard the vinegar.
7. Fill the pitcher with clear tap water to the water level marked on the pitcher and repeat Steps 1 through 4 (*no vinegar*). Turn the machine ON to rinse out all traces of vinegar.
8. Repeat rinsing procedure.

Pitcher Cleaning

Hard water can leave whitish mineral deposits inside the pitcher. Tea and coffee discolor these deposits. To remove, fill the pitcher with hot white vinegar and let soak for about 20 minutes. Do not use harsh abrasive cleaners. They will cause scratches which can lead to breakage.

Helpful Hints

Fresh tap water should be used in the machine at all times.

DO NOT USE HOT WATER.

Use only genuine MR. COFFEE® 8-12 cup basket filters for best brewing performance.

Avoid using chemically softened water whenever possible. The use of chemically softened water can inhibit proper filtration. This will affect the beverage flavor and will cause a long drip time from the steeping basket.

1-YEAR LIMITED WARRANTY

Sunbeam Products, Inc, or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty from Sunbeam.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, or conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for damages arising from any tort, including negligence or gross negligence, or fault committed by Sunbeam, its agents or employees or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800 672-6333 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800 667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

MR. COFFEE®

©2000 Sunbeam Products, Inc. All rights reserved.
MR. COFFEE® is a registered trademark of Sunbeam Products, Inc.
ICED TEA MAKER is a trademark of Sunbeam Products, Inc.
Distributed by Sunbeam Products, Inc., Boca Raton, Florida 33431.

www.mrcoffee.com

Printed in China
11/2003

P.N. 107184