


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

 
- Read all instructions before using this product.
-  This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs. Always protect your hands with non-slip oven mitts or similar.
- To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
- This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
- Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord. Always grasp the plug and pull to disconnect.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors or for commercial purposes.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.
- Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
- Oversize foods or metal utensils must not be inserted in a -oven as they may create a fire or risk of electric shock.
- A fire may occur if the countertop oven is covered, touching or near flammable materials, including curtains, draperies, towels, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
- Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire or melt.

- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Empty the crumb tray after each use.
- The glass door is made of tempered glass. Always inspect the glass door for chips, cracks or any other damage. Do not use the countertop oven if the glass door is damaged, as the glass may shatter during use.
- Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

North American models with polarized plugs:

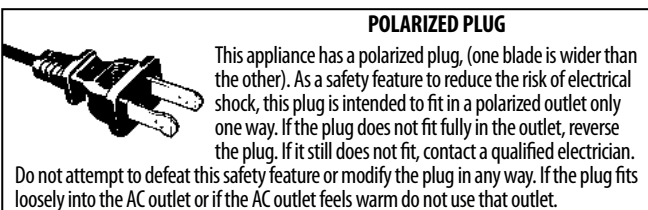

POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

Do not pull, twist or otherwise abuse the power cord.

NOTICES

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your countertop oven to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

Welcome

Congratulations on your purchase of an OSTER® Countertop Oven! If you require service on your OSTER® Countertop Oven, do not return to place of purchase. Please contact us at www.oster.com or 1.800.334.0759.

Features of Your Countertop Oven

- One Removable Wire Rack/Broil Rack
- Function Selector Knob
- Temperature Selector Knob
- Timer Selector Knob
- Power Light
- External Crumb Tray
- Glass Door
- Easy Clean Interior Walls
- Baking Pan
- Two Rack Positions

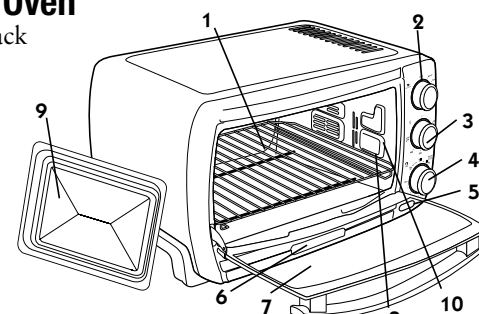 


FIGURE 1

Learning About Your Countertop Oven

Removable Wire Rack/Broil Rack – To accommodate a wide variety of foods, use for all your broiling and grilling needs. See “Positioning Rack” section.

Temperature Selector Knob – Adjust the dial thermostat to the desired temperature.

Timer Selector Knob – Adjust the dial to the desired time.

Function Selector Knob – Select cooking function by turning the knob to the desired setting.

Power Light – Indicates that oven is plugged in and that the timer is set to begin warming.

External Crumb Tray – For crumbs or fallen food particles collection. Pulls out for easy cleaning.

Glass Door – Allows you to see food cooking.

Easy Clean Interior Walls – Allows for easy cleaning.

Baking Pan – Use for all your baking needs.

Two Rack Positions

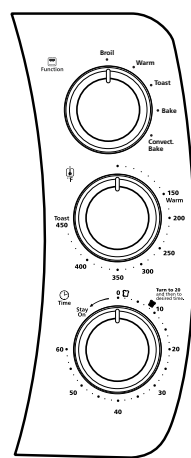 


FIGURE 2

Preparing To Use Your Countertop Oven for the First Time

If you are using your countertop oven for the first time, please be sure to:

Remove any stickers from the surface of the oven.

Open oven door and remove all printed documents and paper from inside the countertop oven.

Clean the rack, tray, and pan with hot water, a small amount of dishwashing liquid and a non-abrasive sponge or cleaning pad.

CAUTION: DO NOT IMMERSER THE BODY OF THE UNIT IN WATER.

Dry the unit thoroughly before using.

Select a location for the countertop oven. The location should be in an open area on a flat counter where the plug will reach an outlet.

Plug the countertop oven into a 120 Volt AC electrical outlet.

The heating elements are designed to work efficiently and maintain a precise temperature.

You may not see the elements glowing, however they are working properly.

PLEASE NOTE – It is recommended that the countertop oven heat at 450° for approximately 15 minutes to eliminate any manufacturing residue that may remain after shipping.

English-3

Cleaning Your Countertop Oven

Before cleaning your OSTER® countertop oven, turn controls to OFF, unplug cord, and allow it to cool. To clean, wipe with damp cloth. **DO NOT IMMERSER IN WATER!** Make sure to use only mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit. Empty crumb tray frequently to avoid accumulation of crumbs. countertop oven racks are dishwasher safe (*top of dishwasher only*).

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

Storing Your Countertop Oven

Allow the appliance to cool completely before storing. If storing the countertop oven for long periods of time, make certain that the countertop oven is clean and free of food particles. Store the countertop oven in a dry location such as on a table or countertop or cupboard shelf. Other than the recommended cleaning, no further user maintenance should be necessary.

	HELPFUL TIPS / TROUBLESHOOTING	
PROBLEM	POTENTIAL CAUSE	SOLUTION
• Overcooked / Undercooked Foods	• Incorrect temperature or time setting • Rack placement	• You may have to adjust the time and temperature to desired taste. • Because your countertop oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time. • Refer to “Positioning Rack” Section, Page English-4. Rack may need to be adjusted to accommodate food type.
• Burnt Smell	• Food build-up inside oven, on heating elements or in crumb tray	• Refer to “Cleaning Your countertop oven” Section, Page English-5.
• Oven does not turn ON	• Unit is unplugged • Timer was not turned past 20 minute mark.	• Plug the countertop oven into a 120-volt AC electrical outlet. • Set timer knob and temperature knob to desired setting. Both must be turned on to operate the countertop oven.
• Only one heating element is heating up	• Function setting selection determines which heating element will operate.	• When toasting, make sure the oven is not set to broil setting.
• Heating elements do not stay ON	• Heating elements will cycle ON and OFF to maintain proper heat.	• Be certain that function is as desired.



User Manual 6-Slice Countertop Oven

Manual del usuario Horno De Mostrador Para 6 Rebanadas

MODEL/MODELO TSSTTVSK02



Visit us at www.oster.com

P.N. 176436 Rev. C

English-1

English-2

To Use the Variable Broil Function

Select desired oven rack position. (*See “Positioning Rack” Section*)

Place pan into the guide rails below the rack and place the food on top of the rack.

Close the door to the first notch, leaving approximately a 3-inch gap at the top. This will insure adequate airflow during broiling.

Turn the function dial to BROIL. Only the top heater element will operate.

Turn the temperature control knob to the desired temperature.

Turn the timer knob to the desired time. The timer can be set for up to 60 minutes.

At the end of the cooking time, a bell signal sounds, and the oven turns off automatically. To set the timer for less than 20 minutes, **turn the timer past the 20-minute mark to engage timer switch and then turn it back to desired time;** it can then be set for cooking that will only require a few minutes.

Turn food over about halfway through the broiling time.

When broiling is completed, open door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

To Use the Bake Function

Select desired oven rack position. (*See “Positioning Rack” Section*)

Arrange food on the wire rack or in the baking pan.

Turn the function dial to CONVECTION BAKE. Both the top and bottom heater elements will operate.

Turn the temperature control knob to the desired temperature.

Turn the timer knob to the desired time. The timer can be set for up to 60 minutes.

At the end of the cooking time, a bell signal sounds and the oven turns off automatically. To set the timer for less than 20 minutes, **turn the timer past the 20-minute mark to engage timer switch and then turn it back to desired time;** it can then be set for cooking that will only require a few minutes.

NOTE – The top and bottom heating elements will cycle ON and OFF to maintain the desired temperature.

When baking is completed, open door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

To Use the Convection Bake Function

Select desired oven rack position. (*See “Positioning Rack” Section*)

Arrange food on the wire rack or in the baking pan.

Turn the function dial to CONVECTION BAKE. Both the top and bottom heater elements will operate.

Turn the temperature control knob to the desired temperature.

Turn the timer knob to the desired time. The timer can be set for up to 60 minutes.

At the end of the cooking time, a bell signal sounds and the oven turns off automatically. To set the timer for less than 20 minutes, **turn the timer past the 20-minute mark to engage timer switch and then turn it back to desired time;** it can then be set for cooking that will only require a few minutes.

NOTE – The top and bottom heating elements will cycle ON and OFF to maintain the desired temperature.

When baking is completed, open door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Defrosting Tip – When defrosting, do not preheat oven. Turn Temperature Control to 250°F. Allow 15 to 20 minutes per side for meats or fish to defrost. Always cook food promptly after thawing.

English-5

FAQs About Convection Baking

What is Convection?

Answer: In your Countertop Oven there is a built in fan that circulates the hot air in the oven chamber to better heat the food.

How do I adjust the time for Convection?

Answer: On average, convection will shorten the cooking time by 30% but it varies by food. It is suggested to go with a shorter cooking time to start with and then add time if it is needed.

What are the best foods to use with Convection?

Answer: While a shorter cook time is often desirable, bake goods in particular benefit from convection cooking as the circulating air keeps oven temperature consistent throughout.

To Use the Toast Function

Select desired oven rack position. (*See “Positioning Rack” Section*)

NOTE – Different types of bread require different settings. Lighter breads and waffles require a lighter setting. Darker breads, muffins, and English muffins require a darker setting.

Arrange food on the wire rack.

- Turn the function dial to TOAST. Both the top and bottom heater elements will operate.
- Turn the temperature control knob to the 450°F/TOAST setting.
- To set the timer, **turn the timer past the 20 minute mark** to engage timer switch and set back to desired toast time.

When toasting is completed, open door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

To Use The Timer And Stay On Feature (See Fig. 5)

After rotating the Temperature Dial to your desired temperature, then you must select from the following options on the Timer Dial.

- For items requiring shorter cooking times, rotate the Timer Dial clockwise to the desired time. At the sound of the bell, the oven will automatically turn “Off.”
- For longer cooking times, rotate the Timer Dial counterclockwise to the “Stay On” setting. Cooking will continue until the Timer Dial is manually turned to the “Off” position and the bell will sound.

 
Positioning Rack

To accommodate a wide variety of foods the oven has two rack positions. (*See Figure 6*) Positioning of the rack will depend on the size of the food and desired browning. Before removing the rack allow the unit to cool. For best toast and pizza results, position the rack in the upper rack position.


PLEASE NOTE – The oven rack may tilt downward causing food to shift when the rack is pulled out, proceed with caution.

Positioning Pan

- To accommodate a wide variety of foods the oven has two pan positions. The pan can be placed on top of the rack or inserted into the guide rails below the rack. (*See Figure Below*)
- Before removing the pan allow the unit to cool.
- Positioning of the oven pan will depend on the desired cooking method. For baking, place the pan on top of one of the racks. For grilling or broiling, insert the pan into the guide rails below the rack and place the food on top of the rack.

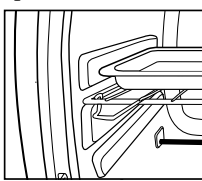

For Baking

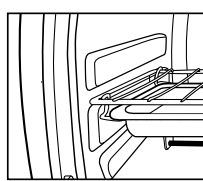 

For Grilling or Broiling

English-6

To Open the Oven Door:

Step 1: Grab the center of the handle underhanded with fingertips (*See Figure 3*).

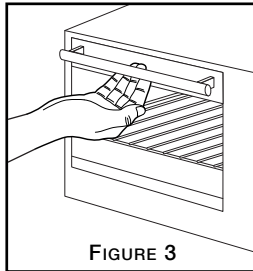 


FIGURE 3

Step 2: Pull down the oven door carefully (*See Figure 4*).

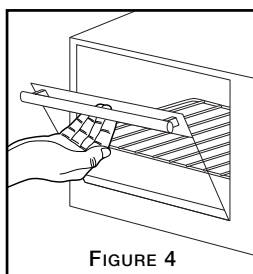 


FIGURE 4

CAUTION: This appliance generates heat during use. Do not touch hot surfaces. Always use handles or knobs per above instructions.

Using Your Countertop Oven

Preheating the Oven

Place oven rack into the desired position before heating the oven. (*See “Positioning Rack” Section*)

Turn the temperature control knob to the desired temperature.

Turn the knob to the desired function.

Set the timer knob to desired time and allow 7–9 minutes for the oven to preheat.

To Use the Warm Function

NOTE: The warm function is for warming and keeping food warm after heating.

Select desired oven rack position. (*See “Positioning Rack” Section*)

Arrange food on the wire rack or in the baking pan.

Turn the function dial to WARM. Only the bottom heating element will operate.

(The heater elements will cycle ON and OFF to maintain temperature.)

Turn the temperature control knob to the desired temperature.

Turn the timer knob to the desired time. The timer can be set for up to 60 minutes.

At the end of the cooking time, a bell signal sounds, and the oven turns off automatically.

To set the timer for less than 20 minutes, **turn the timer past the 20-minute mark to engage timer switch and then turn it back to desired time;** it can then be set for cooking that will only require a few minutes.

When warming is completed, open door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

English-4

1 Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited, (collectively “Sunbeam”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use of improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam’s Liability?
Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 20 B Herford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

English-7

English-8

