

034342-06

Autoseal Pitcher

Contigo

Use and Care

PACKAGING SPEC

<p>THIS DRAWING IS A CONFIDENTIAL DISCLOSURE. THE SUBJECT MATTER OF WHICH IS THE PROPERTY OF IGNITE USA</p> <p>© 2013 ALL RIGHTS RESERVED CONFIDENTIAL & PROPRIETARY</p> <p>IMAGES FOR REFERENCE ONLY ***NOT TO SCALE***</p>		<p>ignite</p> <p>954 W Washington Blvd, 7th fl, Chicago, IL 60607</p>		
<p>MARKETING:</p> <p>ONEIL</p>		<p>REV</p> <p>001</p>	<p>DATE</p> <p>101413</p>	<p>PAGE</p> <p>1</p>
<p>DESIGN:</p> <p>BLAKE</p>		<p>NOTE: All measurements in millimeters. Dimensions are for reference only.</p>		

PRODUCT MANAGER: ☐

MARKETING COORDINATOR: ☐

INDUSTRIAL DESIGN: ☐

Inks:

L:
A:
B:
PANTONE BLACK C

PLACEMENT IMAGE

115mm

225mm

contigo®

AUTOSEAL® TECHNOLOGY

AUTOSEAL® Pitcher

Care and Use Instructions

AUTOSEAL® Pitcher parts

Ice Core

Infuser Stick

Quick Release lid

Lower lid

Body

CAUTION

Product is NOT designed for hot liquids. See USAGE RECOMMENDATION below for how to prepare brew-over-ice iced tea.

Prior to using, make sure the lid is properly threaded to the body and screwed on completely.

DO NOT overfill. Fill liquids to just below the threading in the body.

DO NOT microwave or freeze.

DO NOT use cleaners containing bleach, chlorine, abrasives, and/or other harsh chemicals.

PRESS BUTTON to open

TIP to pour

RELEASE BUTTON to Automatically Seal

USAGE RECOMMENDATIONS:

To prepare iced tea:

1. Fill pitcher at least half way with ice cubes.

2. Prepare hot tea as instructed by tea brand.

3. Pour hot tea over ice cubes. Pour hot liquid directly into the body. DO NOT POUR HOT LIQUID THROUGH THE QUICK RELEASE LID OPENING.

CLEANING INSTRUCTIONS:

Wash thoroughly before first use.

RINSE LID IMMEDIATELY AFTER EACH USE with warm water, pressing the AUTOSEAL® button so water flows through the spout.

Lid and plastic body are top-rack dishwasher safe. Remove Quick Release access lid from lower lid before placing in the dishwasher. Wash the Quick Release lid separately.

PLEASE SEE REVERSE SIDE FOR CONTINUED CLEANING INSTRUCTIONS

CLEANING INSTRUCTIONS CONTINUED:

If washing by hand, soak the Quick Release lid and Lower lid for 10 minutes in hot, soapy tap water. Hand-wash body with warm water and a mild detergent. Rinse both the lid and body thoroughly before use.

For best results, use a Contigo cleaning brush, www.GoContigo.com.

10 min.

ALWAYS STORE PITCHER WITH LID REMOVED to allow parts to dry completely.

CONTIGO AUTOSEAL® PITCHER ICE CORE ACCESSORY:

Fill Ice Core to fill line with cold water. DO NOT OVER FILL. (FIGURE A)

Place Ice Core in the freezer in an upright position with the lid facing up.

Allow at least 6 hours for the Ice Core to freeze.

Fill pitcher with desired liquid. Do not fill liquid to top to allow room in the pitcher for the ice core. Filling the liquid to the top of the pitcher will result in spill over when the Ice Core is dropped in.

Remove the Quick Release upper lid.

Place the Ice Core in the D-shaped opening in the lower lid.

(FIGURE A)

Replace the Quick Release lid before use.

CONTIGO AUTOSEAL® PITCHER INFUSER STICK ACCESSORY:

Fill Infuser Stick with desired fruits, vegetables and / or herbs. DO NOT OVER FILL. (FIGURE B)

Fill pitcher with desired liquid. Do not fill liquid to top to allow room for the Infuser Stick. Filling the liquid to the top of the pitcher will result in spill over when the Infuser Stick is dropped in.

Remove the Quick Release upper lid.

Place the Infuser Stick in the D-shaped opening in the lower lid.

(FIGURE B)

Replace the Quick Release lid before use.

contigo

LIFETIME GUARANTEE

for complete warranty information, see GoContigo.com.

www.GoContigo.com

©2013 Ignite USA. All Rights Reserved.

Should you have any questions about your purchase, please contact us at 1-888-262-0622 or GoContigo.com.

Material Specifications:

95 GSM UNCOATED

Additional Assembly Instructions:

Place an insert into each pitcher.