

SERVICE INSTRUCTIONS

1. This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See warranty available online.
2. If you need to exchange the Lunch Crock Food Warmer, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed Warranty.
3. If you have any questions or comments regarding this Lunch Crock Food Warmer's operation or believe any repair is necessary, please call our Consumer Service Department at 1-800-323-9519 or visit our website at www.crockpot.com.

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. or if in Canada, Newell Brands Canada ULC ("Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam Products, Inc., at its option, will repair or replace, free of charge, this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component at no cost to the consumer. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Sunbeam Products, Inc. reserves all rights to decline coverage if the defect or damage was caused by unauthorized components or service. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Dealers, service centers, or retail stores selling Sunbeam Products, Inc. products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam Products, Inc. or an authorized Sunbeam Products, Inc. service center. Sunbeam Products, Inc. expressly excludes from this warranty and denies liability for defects or damage caused by repair or alteration by anyone other than Sunbeam Products, Inc. or an authorized Sunbeam Products, Inc. service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

No terms of this warranty may be construed to apply to non-warranty service and maintenance. Accordingly, Sunbeam Products, Inc. also denies liability for defects and damage caused by repair or alteration outside the terms of this warranty.

What are the limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-323-9519 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-323-9519 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. Boca Raton, Florida 33431. In Canada, this warranty is offered by Newell Brands Canada ULC, located at 20B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write to Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

To register your product, please visit us online at www.crockpot.com.

© 2022 Sunbeam Products, Inc. All rights reserved. Distributed by Sunbeam Products, Inc. Boca Raton, Florida 33431.

Printed in China

P.N. NWL0001311813 Rev B
Lunch Crock Food Warmer_22EM1_GCDS-LS

crockpot®

Lunch Crock™ Food Warmer

Owner's Manual

Read and Keep These Instructions

www.crockpot.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:


1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
5. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, unplug power cord from outlet. Do not disconnect by pulling on cord.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors or for commercial purposes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. The heating base is subject to residual heat from cooking cycle. Do not touch heating base immediately after removing the inner vessel. Allow to cool before handling.
13. Do not use appliance for other than intended use. Misuse can cause injuries.
14. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
15. Avoid sudden temperature changes, such as adding refrigerated foods or cold liquids into a heated pot.

16. **CAUTION:** To protect against electrical shock and product damage, do not heat directly in the heating base. Heat only in the removable inner vessel provided.
17. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
18. Always plug power cord fully into Warming Base first (detachable cord models only), then plug cord into the wall outlet.
19. Avoid spillage on the power cord connector.
20. **WARNING:** Do not open the steam release valve during use. Steam can result in burns.
21. Use caution when removing the inner vessel. It will be hot from heating and may cause burns. Always protect your hands with non-slip oven mitts or similar.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

NORTH AMERICAN MODELS WITH POLARIZED PLUGS:

POLARIZED PLUG



This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS:

- a) A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
 - 3) If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

NOTICES:

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your Lunch Crock™ to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.


PREPARING YOUR LUNCH CROCK™ FOOD WARMER FOR USE

Get ready for your day by pre-filling your Lunch Crock™ Food Warmer before you leave home for the day with your favorite soups, chili, last night's leftovers and more. Follow these steps for preparation:

1. Fill the removable food container with desired food and place the food container lid on.
2. Twist the food container lid onto removable food container. Place the removable food container inside the warming base, by aligning food container slot with anti-rotating pin.
3. Then twist the outer lid onto the warming base unit secure.
4. Ensure the cord is wrapped around the base and locked into the detachable cord slot. See arrows on the bottom of unit for cord wrap direction.

NOTE: Always carry the unit upright or by the carry handle when traveling to limit food spillage.

CROCKPOT™ LUNCH CROCK™ FOOD WARMER

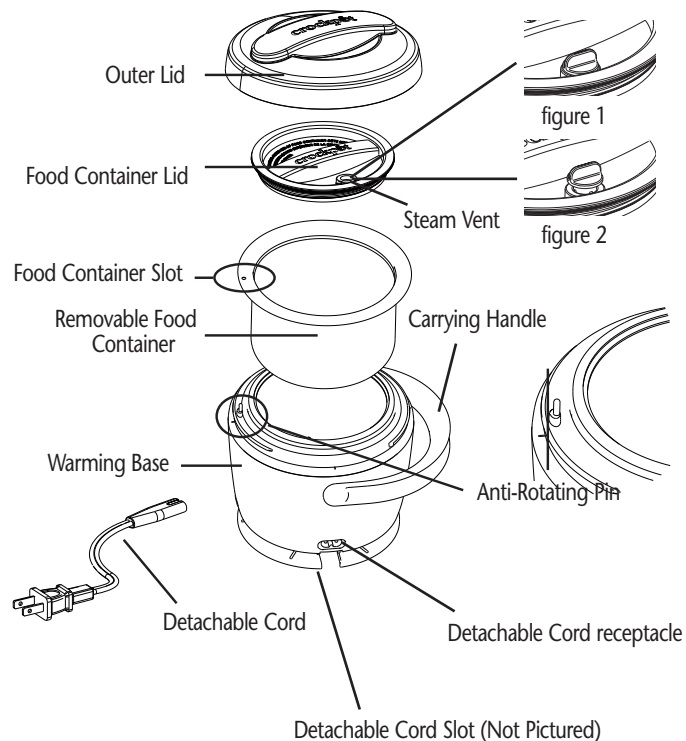

HOW TO USE YOUR LUNCH CROCK™ FOOD WARMER

Before you use your Lunch Crock™ Food Warmer, remove all packaging components and wash the lids and removable food container with warm soapy water and dry thoroughly. Never submerge the warming base in water and always unplug before cleaning.

NOTE: The unit is not designed for use with uncooked food. If a recipe calls for uncooked meats, it should be fully cooked before combining with other ingredients and heating it in the unit.

1. Fill the removable food container with desired food and place the food container lid on. The capacity of the inner vessel is 20 ounces. Do not overfill.
NOTE: Ensure steam vent is pushed down to avoid spills or leakage. (See Figure 1)
2. Place the removable food container inside the warming base, by aligning food container slot with anti-rotating pin. Twist the outer lid securely on warming base.
NOTE: The food container lid and outer lid do not need to be secured while the unit is heating and warming the food, but is recommended to avoid spilling and to ensure the quickest heating time.
3. Plug in your Lunch Crock™ Food Warmer well in advance to desired mealtime so that Lunch is ready when you are. Unwrap power cord from the bottom of the unit and plug into an outlet. The power indicator light will turn on and the unit will automatically begin to heat up the food.
NOTE: Unit will not automatically turn off and will continue to warm unless it is unplugged.
4. Your Lunch Crock™ Food Warmer is not meant to warm foods rapidly. Heat times will vary depending on the type of food being warmed and the starting temperature of the food. Stirring will help to speed up the time it takes to heat the food.
5. Once your food has reached the desired temperature, unplug the unit and pull up on the steam vent to release hot air before opening (See Figure 2). Now you can enjoy your lunch right out of the Lunch Crock™ Food Warmer.

HOW TO USE YOUR LUNCH CROCK™

CAUTION: Do not remove the inner food container from warming base before eating. The inner food container will be hot.

6. Make sure the unit is unplugged when not in use and that the cord is wrapped around the base and locked into the detachable cord slot. See arrows on the bottom of unit for cord wrap direction.

USAGE NOTES:

- If there is a power outage and you are unaware of how long the power was out, we suggest you discard the food.
- Unplug when heating is done and before cleaning.
- This unit is not ovenproof or microwave safe.
- Always wear oven mitts when handling the unit.

CARE AND CLEANING

- ALWAYS unplug your Lunch Crock™ Food Warmer and allow it to cool before cleaning. **CAUTION:** Never submerge the unit in water or other liquid.
- Remove food container, empty food contents, and fill with warm soapy water to loosen food remains. Pull steam vent up to clean thoroughly. Do not use abrasive cleaners; a cloth, sponge or rubber spatula will usually remove any residue. To remove any water spots or other stains, use a non-abrasive cleaner or vinegar.
- Removable food container is dishwasher safe. Food container inner lid is dishwasher safe - top rack only.

NOTE

- The outer lid and warming base should be cleaned with a soft cloth and warm soapy water. Wipe dry. Do not use abrasive cleaners.
- No other servicing should be performed.

