
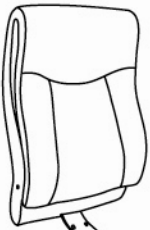
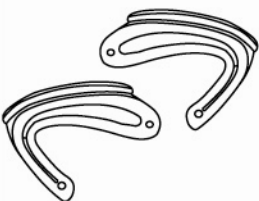
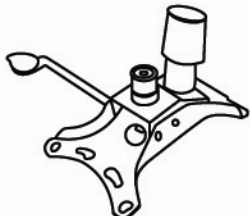
 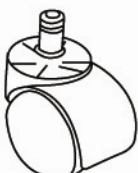



**Please unscrew all hardware from cushion before assembly.**  
**Por favor de destornillar todos los tornillos del cojín antes de ensamblar la silla.**


MODEL:B8661

| (1)X1                                                                              | (2)X1                                                                                                                                                                                                                                                                                                                                                                                                                                         | (3)X1 (L)X1 (R)                                                                   |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|   |                                                                                                                                                                                                                                                                                                                                                              |  |
| BACK                                                                               | SEAT                                                                                                                                                                                                                                                                                                                                                                                                                                          | LARM LEFT ARM<br>RARM RIGHT ARM                                                   |
| (4)X1                                                                              | (5)X1                                                                                                                                                                                                                                                                                                                                                                                                                                         | (6)X1                                                                             |
|    |                                                                                                                                                                                                                                                                                                                                                              |  |
| MECHANISM                                                                          | GAS LIFT                                                                                                                                                                                                                                                                                                                                                                                                                                      | BASE                                                                              |
| (7)X5                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                   |
|  | (A)x4  M8*22 Mechanism Screw<br>(B)x4  M8*55 Arm Screw<br>(C)x4  M8*30 L-Bar Screw<br>(D)x4  Arm Cap |                                                                                   |
| CASTERS                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                   |

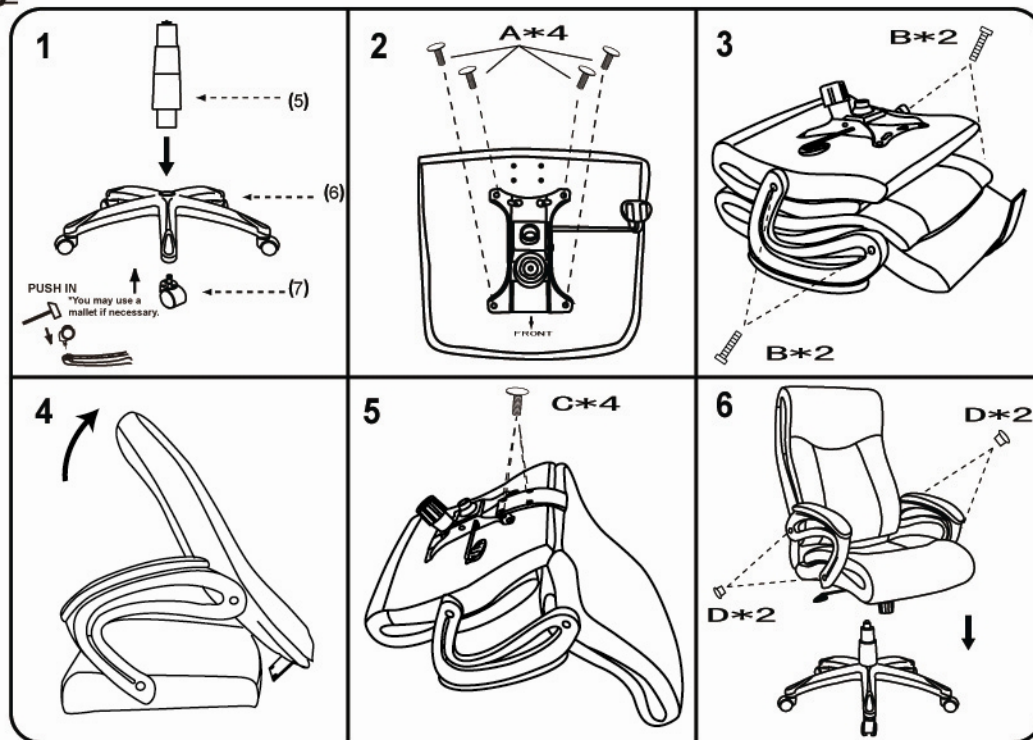

**Note: Please tighten all arm screws using allen key before step 6**

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

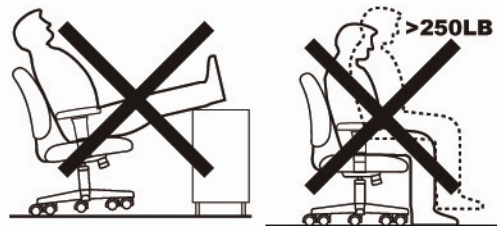

**Customer Service Hotline: 1-800-593-1888**  
**For further assembly instructions,**  
**please visit our website at [www.bosschair.com](http://www.bosschair.com)**