

Parts Listing


D Screws 6 Units

Units



Model A310 Arms

Optional 2 Units

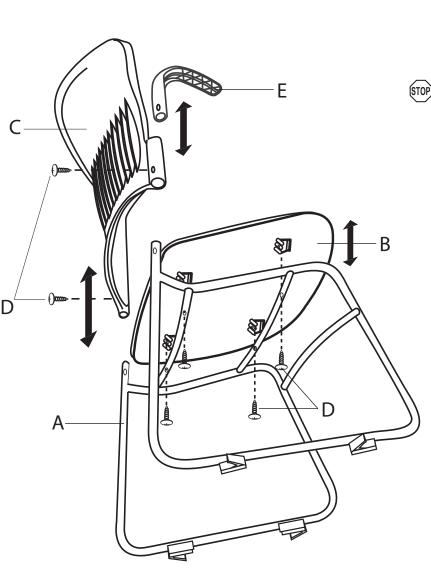

WEIGHT CAPACITY: 250 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely. **CAUTION:**

- 1. Do not use this chair as a step ladder.
- 2. Check for loose screws and tighten them every 6 months.

Assembly Instructions


- Tools Needed: Phillips Head Screwdriver Please read all instructions before assembly.
 - Step 1: Place Chair Seat (B) onto Chair Base (A), and align screwholes. Insert Screws (D) to secure. Tighten with a screwdriver.
 - Step 2: Slide Chair Back (C) onto posts of Chair Base (A). Align holes and insert Screws (D) to secure. Tighten with a screwdriver

With Optional Arms (E):

- Step 1: See Step 1 above.
- Step 2: Slide Chair Back (C) onto posts of Chair Base (A).
- Step 3: Slide A310 Arms (E) onto sides of Chair Back (C).
- Step 4: Align holes in arms, back and base and insert Screws (D) to secure. Tighten with a screwdriver.

Note:

Once Model A310 Arms are added chair is no longer able to stack.

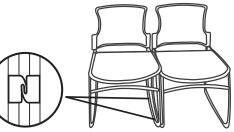

Ganging Brackets are standard on all Model 310-F/310-P/310-VAM Chairs



 161 Tradition Trail Holly Springs, NC, 27540

 800-520-7471 (voice)
 919-362-4765 (fax)

 919- 303-6389 (voice)
 www.ofminc.com

 support@ofminc.com
 support@ofminc.com