



800-558-1010 | www.NBF.com

Congratulations on the purchase of your new Signature Series product!


COMPONENTS

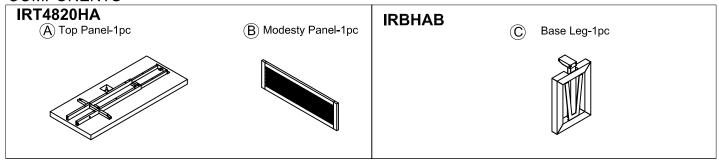

HARDWARE & TOOLS

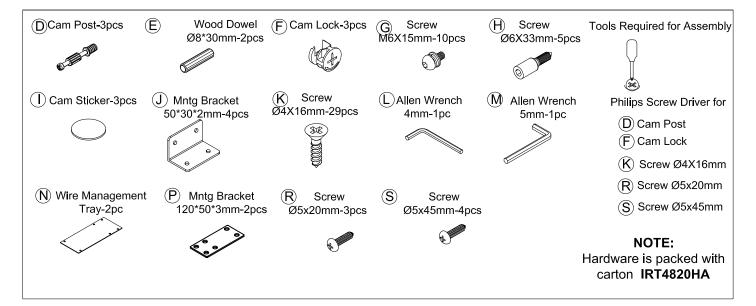

INSTRUCTIONS - Do not use power tools to assemble

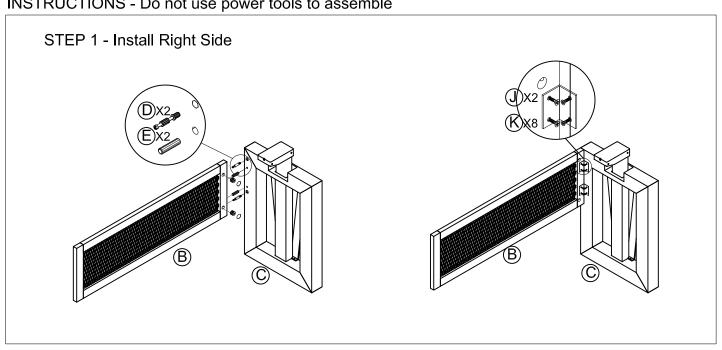




800-558-1010 | www.NBF.co


Congratulations on the purchase of your new Signature Series product!

INSTRUCTIONS - Do not use power tools to assemble

STEP 2

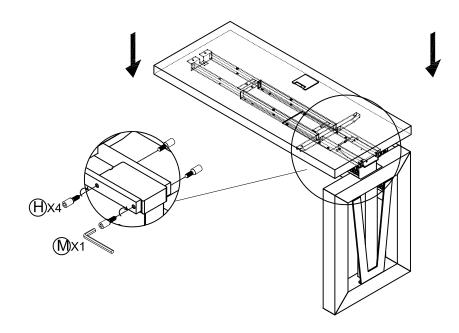

STEP 3

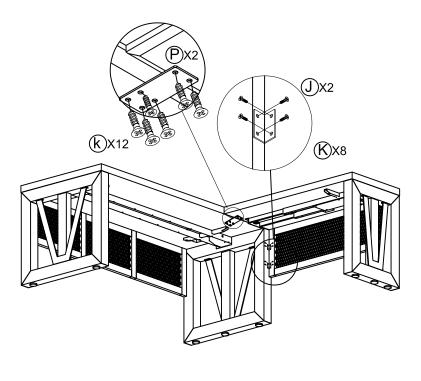




800-558-1010 | www.NBF.cor

Congratulations on the purchase of your new Signature Series product!

INSTRUCTIONS - Do not use power tools to assemble

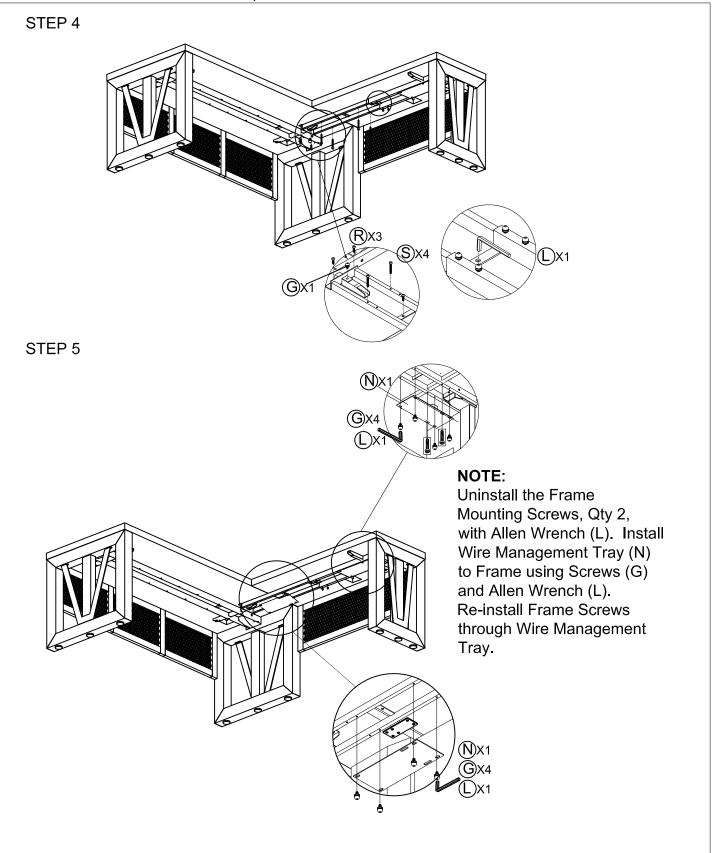




800-558-1010 | www.NBF.com

Congratulations on the purchase of your new Signature Series product!

INSTRUCTIONS - Do not use power tools to assemble



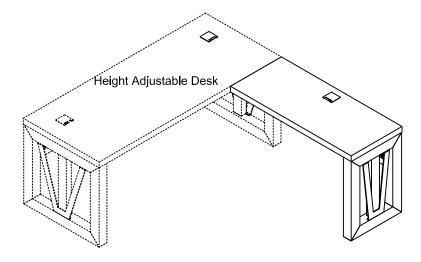




800-558-1010 | www.NBF.con

Congratulations on the purchase of your new Signature Series product!

INSTRUCTIONS

Uninstall the Philips Screws and Allen Screws of the mounting frame, total Qty 4, with Allen Wrench (L) and tools, then turn around 180° and using screws install the mounting frame to other pre-drilled holes underside the height adjustable return top.

STEP 1 - Install Left Side

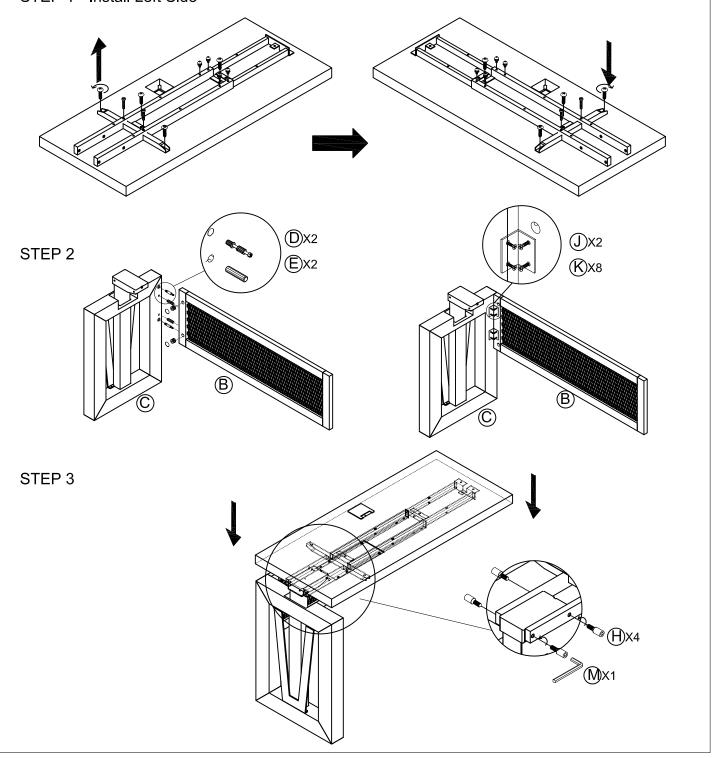





800-558-1010 | www.NBE.co

Congratulations on the purchase of your new Signature Series product!



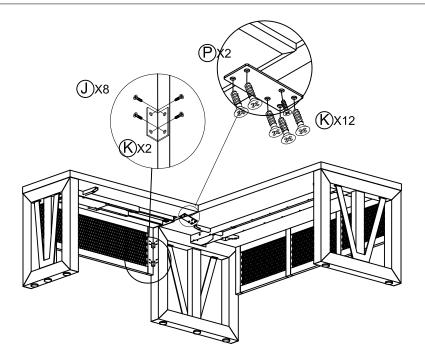


STEP 5

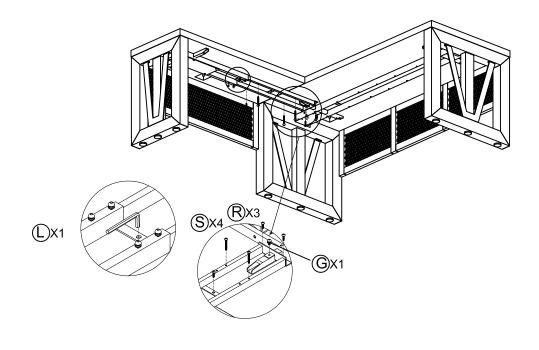




800-558-1010 | www.NBF.cd

Congratulations on the purchase of your new Signature Series product!

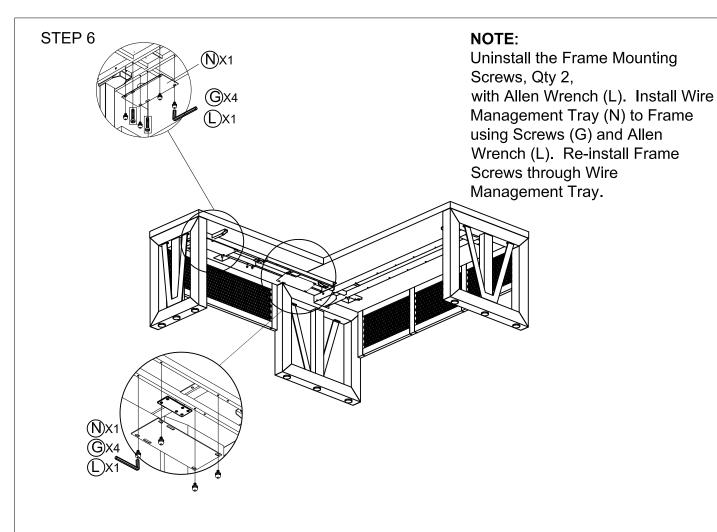

COMPLETED

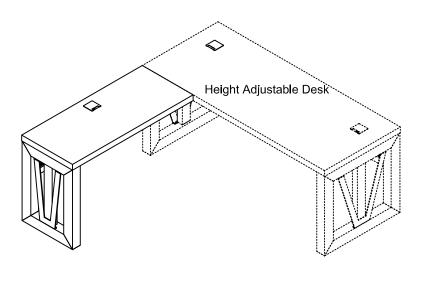



800-558-1010 | www.NBF.com

Congratulations on the purchase of your new Signature Series product!

INSTRUCTIONS


Make sure no obstacles are in the desk's path.

Make sure the desktop is not touching any walls.

Make sure all cords are appropriate length to accommodate the change in height.

IMPORTANT: You must INITIALIZE the desk prior to first use.

Controller Initialization- Press and hold the Down button on the controller until the desk reaches its lowest height, slightly raises, and stops. Release the down button, your desk is now ready for use. (Following the "USER MANUALS" to use your desk)

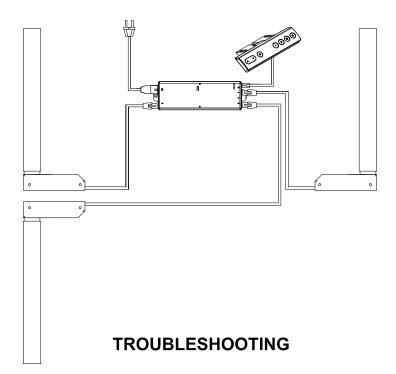

If the table is not functioning properly it may need to be reset.

Unplug the power cord for 20 seconds.

Plug the power cord back in and follow the RESET procedures.

If the error message persists after the reset procedure, please contact your dealer.

If the height between the legs exceeds 1.5 inches, stop the reset procedure, please contact your dealer.