

aspenhome


Distributed by Furniture Values International, LLC



COMPONENT LIST

Glass 2 Pcs



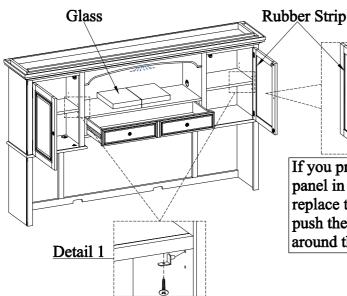

If you prefer to use glass instead of wood panel in the door, remove rubber strip and replace the wood panel with glass. Then push the rubber strip into the door frame around the glass.

When you prefer to adjust the location of shelf, take off screws and reinsert the shelf brackets into the holes. Then place the shelf on and re-securing it.

Detail 2

Detail 3

Touch switch

Push the touch switch to turn on or off or adjust the lighting.

