Assembly Instructions

ZU61


Dimensio -Height: 23 -Width: 16

-Depth: 15


(C) Back caster

2 parts


00-558-1010 | www.NBF.com

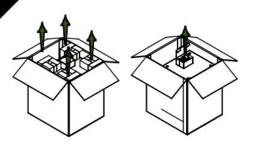


Remove the corner protectors, open the box that contains the casters B C and remove.

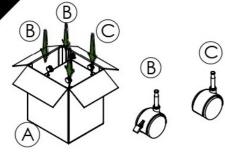

Twist the back caster © and front caster with brake B into main body A plate as shown. Place fifth craster D in the middle front of the main body

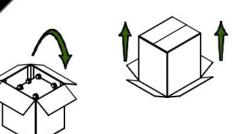

Turn the pedestal file upside down and remove the box.

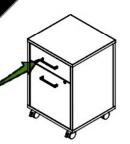




Remove the keys (E) from the handle.



 Note: Match colored stickers



(A) Main boby
1 part,
(B) Front caster with brake
2 parts



D Fifth caster 1 part

